



## **Instructions for use**

**AWO/D 7715**

---

**Whirlpool Switzerland, [www.whirlpool.ch](http://www.whirlpool.ch)**

Bauknecht AG, Industriestrasse 36, 5600 Lenzburg, [www.bauknecht.ch](http://www.bauknecht.ch)

Verkauf	Telefon 0848 801 002	Fax 0848 801 017	<a href="mailto:verkauf@bauknecht.ch">verkauf@bauknecht.ch</a>
Kundendienst	Telefon 0848 801 001	Fax 0848 801 003	<a href="mailto:service@bauknecht.ch">service@bauknecht.ch</a>
Ersatzteile	Telefon 0848 801 005	Fax 0848 801 004	<a href="mailto:ersatzteilverkauf@bauknecht.ch">ersatzteilverkauf@bauknecht.ch</a>




**A. "Door open" indication**

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

**B. "Service" indication**

**C. "Water tap closed" indication**

**D. "Clean pump" indication**

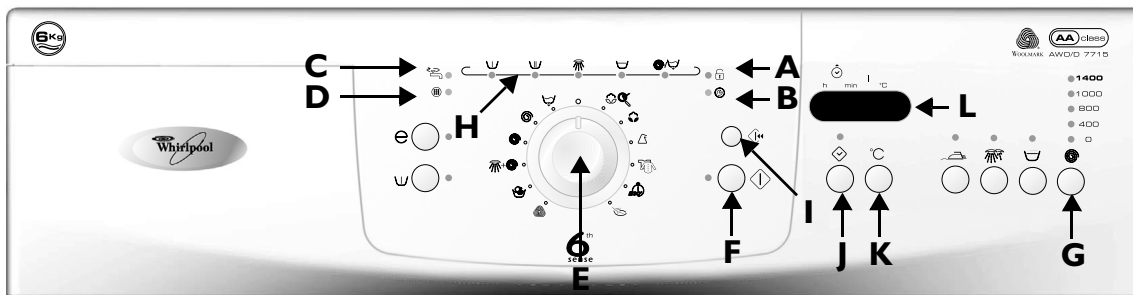

**E. Programme selector**

**F. "Start/Pause" button**

**G. "Variable spin" button**

**H. Programme sequence indicator**

**I. "Reset" button**

**J. "Start delay" button**

**K. "Temperature" button**

**L. Display**

Programme	Temperature	Care Labels	Max Load kg	Type of wash/Notes <i>- For temperature selection, respect the manufacturer's recommendations on the care label</i>	Detergents and additives			Special options						Max Spin Speed rpm	
					Pre-wash	Main wash	Softener	Eco	Pre-wash	Start delay	Easy ironing	Intensive rinse	Rinse hold		Variable spin
<b>White Cotton / Antibacterial</b>	70 - 95 °C		6.0	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.											
<b>Cotton</b>	50 - 60 °C		6.0	At a temperature of 80°C or more, this programme eliminates bacteria, ensuring sanitization of your laundry. The bacteria removal efficiency has been tested following a similar methodology to the NF EN 13697 standard of Nov. 2001.	*	Yes	*	*	*	*	*	*	*	*	Max.
	20 - 40 °C		5.0												
<b>Synthetics</b>	20 - 60 °C		2.5	Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	*	Yes	*	*	*	*	*	*	*	*	1000 <sup>1)</sup>
<b>Daily load</b>	20 - 60 °C		3.0	Slightly to normally soiled textiles made of cotton and/or synthetics.	—	Yes	*	—	—	*	*	*	*	*	1 pos. below Max. <sup>1)</sup>
<b>Quick wash</b>	20 - 30 °C		3.0	Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	—	Yes	*	—	—	*	—	—	*	*	Max.
<b>Delicates</b>	20 - 40 °C		1.5	Curtains and delicate clothing, dresses skirts, shirts and blouses.	*	Yes	*	—	*	*	—	—	*	*	1000 <sup>1)</sup>
<b>Wool</b>	20 - 40 °C		1.0	Only woollens, labelled with the woolmark and identified as machine washable.	—	Yes	*	—	—	*	—	—	*	*	1000 <sup>1)</sup>
<b>Handwash</b>	20 - 40 °C		1.0	Textiles made of silk, linen, wool and viscose marked as "handwashable".	—	Yes	*	—	—	*	—	—	*	*	400 <sup>1)</sup>
<b>Rinse &amp; Spin</b>	—	—	6.0	Same as the last rinse and the final spin in the "Cotton" programme.	—	—	*	—	—	*	—	*	*	*	Max.
<b>Spin</b>	—	—	6.0	In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.	—	—	—	—	—	*	—	—	—	*	Max.
<b>Gentle Spin</b>	—	—	1.0	In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.	—	—	—	—	—	*	—	—	—	*	1000 <sup>1)</sup>
<b>Drain</b>	—	—	—	Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".	—	—	—	—	—	—	—	—	—	—	—

\*: optional / Yes : dosing required

<sup>1)</sup> For improved garment care, spin speed is restricted in these programmes.

## CONSUMPTION DATA

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)*
White Cotton / Antibacterial	95	6.0	59**	1.90	2:00
Cotton	60	6.0	56	1.14	2:10
Cotton with "Eco"***	60	6.0	51	1.02	2:30
Cotton	40	5.0	53	0.70	2:00
Synthetics	60	2.5	50**	0.80	1:35
Synthetics	40	2.5	46	0.50	1:20
Daily load	30	1.5	60	0.50	0:45
Quick wash	40	3.0	41	0.50	1:00
Delicates	30	3.0	41	0.40	0:30
Wool	40	1.0	60	0.50	0:45
Handwash	40	1.0	45	0.50	0:40

Consumption values were measured in normalized conditions in compliance with Standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

\* The time indicated on the display can deviate from the values in the table, because it takes into account the household conditions applicable at that time.

\*\* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

\*\*\* Reference Programme for Energy Label.

## ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add detergent as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use.

1. Turn the **programme selector** to the desired programme. The display shows the programme duration in hours and minutes as well as the predefined temperature. The **"Start/Pause"** button flashes.
2. The **temperature** can be altered by pressing the "Temperature" button.
3. The indication lamp of the predefined **spin speed** lights up; in case you want to set another spin speed, press the "Variable spin" button .

## SELECT ANY DESIRED OPTION

Push the button(s) of any option(s) desired - the respective indication lights up. When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

### "Eco" button

- With a modified temperature profile and a slightly prolonged washing duration, the optimum combination of excellent washing result and even lower energy consumption is achieved.

### "Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. Increases the cycle time by approximately 15 min.

- Do not use liquid detergent for the main wash when activating the Prewash option.

### "Easy ironing" button

- Can be used together with "Cotton", "Synthetics" and "Daily load" programmes to make ironing easier.
- Increases the water quantity and the clothes are spun very gently.

### "Intensive rinse" button

- More water is added and rinse cycle is prolonged.
- This option is particularly suitable for areas with very soft water, washing baby linen and helps people with allergies.

### "Rinse hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the programmes "Synthetics", "Daily load" and "Delicates".

- It is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.
- If you select "Rinse hold", do not leave the laundry to soak for too long.

**Note:** The programme stops to "Rinse hold" at the time the "Antcrease" light in the programme sequence indicator is on. The indication lamp next to the **"Start/Pause"** button flashes.

### Terminate the "Rinse hold" option

- Press the **"Start/Pause"** button ; the programme will terminate automatically with the final spin cycle for the present wash programme.

- If you do not wish to spin the clothes, turn the programme selector knob to the "Drain" programme and press the **"Start/Pause"** button .

### "Variable spin" button

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during rinse. The water is drained out only.

## START DELAY

The "Start Delay" allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper. Do not use liquid detergent when activating the "Start Delay".

- Select programme, temperature and options.
- Press the "Start Delay" button to select the delay time by 1 to 23 hours;
- Press the **"Start/Pause"** button . The indication light next to the "Start Delay" button lights up and the countdown of the delay time begins. The dot between hours and minutes of the delay time indicated flashes.
- The time delay indication disappears when the programme starts and it is replaced by the remaining programme time.
- Once having pressed the **"Start/Pause"** button , the number of hours preselected can be reduced by pressing and holding the "Start Delay" button. From 1 hour on, the delay time can also be reduced in steps of 10 minutes.

### To cancel the "Start Delay"

**..before you press the "Start/Pause" button** :

- Turn the programme selector to another position or press the **"Reset"** button .

**..after having pressed the "Start/Pause" button** :

- Press the **"Reset"** button for at least 3 seconds - the start delay time disappears from the display.

## PROGRAMME START

Open the tap and press the **"Start/Pause"** button . The indication lamp next to the **"Start/Pause"** button lights up. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain. The display shows the remaining programme time. Due to variations in load and temperature of inlet water, the remaining time is newly calculated in certain programme phases. If this is the case, **an animation appears on the display.**

## "DOOR OPEN" INDICATION

Before starting and after end of a programme, the lamp lights to show that the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel (Reset) a running programme before the end".

## RED INDICATIONS

### "Service"

Lighting up of the "Service" indication can be caused by a fault in an electrical component. Refer to the "Troubleshooting Guide" in your Instructions for Use; if the fault persists, contact our After Sales Service.

### "Water tap closed"

The appliance has no or insufficient water supply. Open the water tap; if the indication still lights up, refer to the "Troubleshooting Guide" in the Instructions for Use.

### "Clean pump"

Waste water is not pumped out. Check whether the drain hose is kinked or the filter must be cleaned; in the latter case refer to the Instructions for Use ("Removing the Filter").

## PROGRAMME END

- All the lights of the programme sequence indicator are off, and the "Door open" indication lights up.
1. Turn the programme selector to the "Off/O" position.
  2. Close the water tap.
  3. Open the door and unload the machine.
  4. Leave the door ajar to allow the drum to dry.

## CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the **"Start/Pause"** button to pause the programme. The light flashes.
2. Select the new programme, temperature, any options and another spin speed if you want.
3. Press the **"Start/Pause"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

## CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END

The **"Reset"** button cancels a programme before the end.

- Press the **"Reset"** button for at least 3 seconds. Any existing water is drained out before the door can be opened.