



Instructions for use

AWE 6517

Whirlpool Switzerland, www.whirlpool.ch


Bauknecht AG, Industriestrasse 36, 5600 Lenzburg, www.bauknecht.ch

Verkauf	Telefon 0848 801 002	Fax 0848 801 017	verkauf@bauknecht.ch
Kundendienst	Telefon 0848 801 001	Fax 0848 801 003	service@bauknecht.ch
Ersatzteile	Telefon 0848 801 005	Fax 0848 801 004	ersatzteilverkauf@bauknecht.ch

GB AWE 6517

PROGRAMME CHART

- A. Programme selector
- B. Programme sequence indicator
- C. "Variable spin" button
- D. "Start/Pause" button
- E. "Reset" button
- F. "Door open" indication

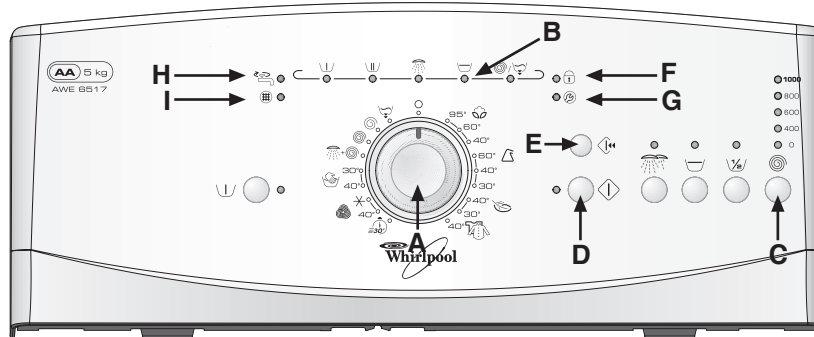

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately:

- G. "Service" indication
- H. "Water tap closed" indication
- I. "Clean pump" indication

- 1) Do not use liquid detergent for main wash if you have activated prewash option.
- 2) For improved garment care, spin speed is restricted to 400 rpm in this programme.

Programme	Care Labels	Max. Load kg	Type of wash / Notes <i>- for temperature selection, respect the manufacturer's recommendations on the care label</i>	Detergents and Additives			Special options				Max. Spin Speed rpm	
				Pre-wash	Main Wash	Softener	Pre-wash	Intensive rinse	Rinse hold	Half load		Variable spin
Cotton 40 - 60 - 95 °C		5.0	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. <i>For washing heavily soiled laundry, the "Prewash" option can be selected.</i>	*	Yes ¹⁾	*	*	*	*	*	*	1000
Synthetics 30 - 40 - 60 °C		2.5	Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon).	*	Yes ¹⁾	*	*	*	*	*	*	1000
Delicates 30 - 40 °C		1.5	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	*	Yes ¹⁾	*	*	-	*	-	*	1000
Daily load 40 °C		3.0	Slightly to normally soiled textiles made of cotton and/or synthetics.	-	Yes	*	-	*	*	-	*	1000
Quick wash 30 °C		3.0	Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	-	Yes	*	-	*	*	-	*	1000
Wool Cold - 40 °C		1.0	Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable.	-	Yes	*	-	-	*	-	*	1000
Handwash 30 - 40 °C		1.0	Textiles made of linen, silk, wool and viscose marked as "handwashable". <i>A very gentle spin is used in this programme.</i>	-	Yes	*	-	-	*	-	*	400 ²⁾
Rinse & Spin		-	<i>Same as the last rinse and the final spin in the "Cotton" programme.</i>	-	-	*	-	*	*	-	*	1000
Spin		-	<i>In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.</i>	-	-	-	-	-	-	-	*	1000
Gentle Spin		-	<i>In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.</i>	-	-	-	-	-	-	-	*	1000
Drain		-	<i>Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".</i>	-	-	-	-	-	-	-	-	-

N.B. This machine is controlled by sensors. Please avoid excessive detergent dosing.

CONSUMPTION DATA






Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)
Cotton	95	5.0	50*	1.70	2:05
Cotton**	60	5.0	49	0.95	2:10
Cotton	40	5.0	55	0.55	2:00
Synthetics	60	2.5	50*	0.80	1:30
Synthetics	40	2.5	45	0.45	1:15
Delicates	40	1.5	50	0.55	0:45
Daily load	40	3.0	40	0.45	1:00
Quick wash	30	3.0	35	0.40	0:30
Wool	40	1.0	55	0.55	0:45
Handwash	40	1.0	40	0.40	0:35
Handwash	30	1.0	40	0.30	0:35

Prewash cycle increases programme duration by approximately 20 min. Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

** Reference Programme for Energy Label.

PREPARATION OF THE WASH CYCLE

- Load the machine, close the drum doors and check that they are properly locked.
- Add detergent and additives into the dispenser to no more than the **“MAX”** level mark, as follows:
 - Programme with pre and main wash 
 - Main wash programme without prewash 
 - Fabric softeners and conditioners 
 - Stain remover agents 
 - Anti-scale agents (if necessary) 
- Close the lid.
- Turn the **programme selector** to the desired programme and temperature. The lamp next to the **“Start/Pause”** button flashes. The indication lamp of the predefined spin speed lights up.

SELECT THE DESIRED OPTION(S)

Selecting or deselecting an option can be done at any time during the programme. The option will be applied as long as the corresponding programme phase has not been executed yet.

“Prewash” button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. Increases the cycle time by approximately 20 min.

“Intensive rinse” button

- The amount of water is increased to ensure a more intensive rinse.
- This option is particularly suitable for areas with very soft water, washing baby linen and people with skin allergies.

“Rinse Hold” button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the “Synthetics”, “Daily load” and “Delicates” programmes.
- It is useful if you want to postpone spinning to a later time, or if you want to drain out only.
- If you select “Rinse Hold”, do not leave items to soak for too long.
- As soon as the appliance stops in the rinse hold, the “Rinse hold” lamp of the sequence indicator lights up and the lamp next to the **“Start/Pause”** button flashes.

Terminate the “Rinse Hold” option:

- Press the **“Start/Pause”** button; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme selector knob to the “Drain” programme and press the **“Start/Pause”** button.

“Half load” button

- Reduces water consumption, above all during rinsing.
- Suitable for lightly soiled laundry and small loads (max. 3 kg).

“Variable spin” button

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If spin speed “0” is selected, the final spinning is cancelled but intermediate spin peaks remain during the rinse. The water is drained out only.

PROGRAMME START

Open the tap and press the **“Start/Pause”** button. The indication lamp next to the **“Start/Pause”** button lights up. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain. When the programme phase is finished, the corresponding indication goes out.

- Note:** If there is a power interruption or if the appliance is disconnected during the cycle, the programme will run again from the point where it was interrupted.

“DOOR OPEN” INDICATION

Before starting and after end of a programme, the lamp lights to show the the lid can be opened. As long as a wash programme is running, the lid remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to “Cancel (Reset) a running programme before the end”.

RED INDICATIONS

“Service”

Lighting up of the “Service” indication can be caused by a fault in an electrical component. Refer to the “Troubleshooting Guide” in your “Instructions for Use”; if the fault persists, contact our After Sales Service.

“Water tap closed”

The appliance has no or insufficient water supply. Open the water tap: if the indications still lights up, refer to the “Troubleshooting Guide” in the Instructions for Use.

“Clean pump”

Waste water is not pumped out. Check whether the drain hose is kinked or the filter must be cleaned: in the latter case refer to the Instructions for Use (“Removing the Filter”).

PROGRAMME END

- All the lights of the programme sequence indicator are off, and the “Door open” indication lights up.
 - Turn the programme selector to the “Off/O” position.
 - Close the water tap.
 - Open lid and drum and unload the machine.
 - Leave the lid open for some time to allow the interior of the machine to dry.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

- Press the **“Start/Pause”** button to pause the programme. The light flashes.
- Select the new programme, any options and another spin speed if you want.
- Press the **“Start/Pause”** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END

The **“Reset”** button cancels a programme before the end. Press the **“Reset”** button for at least 3 seconds. Any existing water is drained out before the door can be opened.