



## **Instructions for use**

**AWO/D 9614**

---

**Whirlpool Switzerland, [www.whirlpool.ch](http://www.whirlpool.ch)**


Bauknecht AG, Industriestrasse 36, 5600 Lenzburg, [www.bauknecht.ch](http://www.bauknecht.ch)

Verkauf	Telefon 0848 801 002	Fax 0848 801 017	<a href="mailto:verkauf@bauknecht.ch">verkauf@bauknecht.ch</a>
Kundendienst	Telefon 0848 801 001	Fax 0848 801 003	<a href="mailto:service@bauknecht.ch">service@bauknecht.ch</a>
Ersatzteile	Telefon 0848 801 005	Fax 0848 801 004	<a href="mailto:ersatzteilverkauf@bauknecht.ch">ersatzteilverkauf@bauknecht.ch</a>

PROGRAMME CHART



- A. "On/Off" button
- B. Programme selection buttons
- C. Option buttons
- D. "Favourite" button
- E. "Temperature" button
- F. "Start delay" button
- G. "Variable spin" button
- H. "Start/Pause" button
- I. "Drain/Reset" button
- J. Display

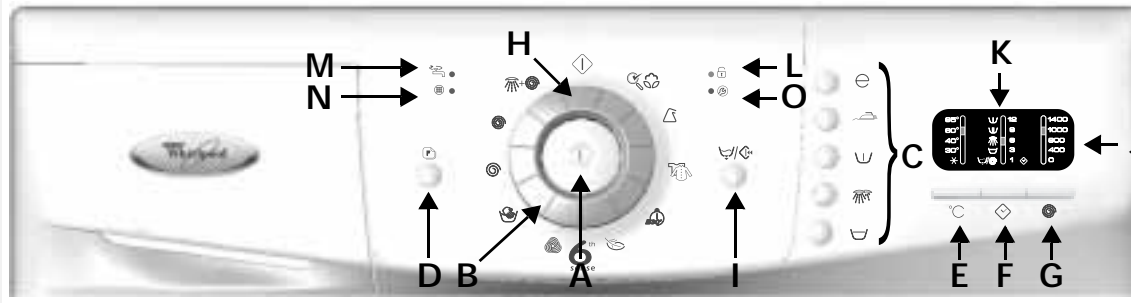

K. Programme sequence indication



L. "Door open" indication

Your washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

- M. "Water tap closed" indication
- N. "Clean pump" indication
- O. "Service" indication

Programme	Temperature °C	Care Labels	Max Load kg	Type of wash/Notes <i>- For temperature selection, respect the manufacturer's recommendations on the care label</i>	Detergents and additives			Special options				Start delay	Spin		
					Pre-wash	Main Wash	Softener	Eco	Easy ironing	Pre-wash	Intensive rinse		Rinse hold	Variable spin	Max Spin Speed rpm
White Cotton / Antibacterial	95 °C		6.0	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.											
Cotton	60 °C		6.0	At a temperature of 95°C, this programme eliminates bacteria, ensuring sanitization of your laundry. The bacteria removal efficiency has been tested following a similar methodology to the NF EN 13697 standard of Nov. 2001.	*	Yes <sup>3)</sup>	*	*	*	*	*	*	*	*	max.
	20 - 40 °C		5.0												
Synthetics	20 - 60 °C		2.5	Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	*	Yes <sup>3)</sup>	*	*	*	*	*	*	*	*	1000 <sup>1)</sup>
Daily load	20 - 60 °C		3.0	Slightly to normally soiled textiles made of cotton and/or synthetics.	—	Yes	*	—	*	—	*	*	*	*	max.
Quick wash	20 - 30 °C		3.0	Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	—	Yes	*	—	—	—	—	*	*	*	max.
Delicates	20 - 40 °C		1.5	Curtains and delicate clothing, dresses skirts, shirts and blouses.	*	Yes <sup>3)</sup>	*	—	—	*	—	*	*	*	1000 <sup>1)</sup>
Wool	20 - 40 °C		1.0	Only woollens, labelled with the Woolmark and identified as machine washable. This programme (40°C) is tested and approved by The Woolmark Company for machine washable wool.	—	Yes	*	—	—	—	—	*	*	*	1000 <sup>1)</sup>
Handwash	20 - 40 °C		1.0	Textiles made of silk, linen, wool and viscose marked as "handwashable". This programme (40°C) is tested and approved by The Woolmark Company for handwashable wool.	—	Yes	*	—	—	—	—	*	*	*	400 <sup>1)</sup>
Gentle Spin	—	—	1.0	<i>In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.</i>	—	—	—	—	—	—	—	*	*	*	1000 <sup>1)</sup>
Spin	—	—	6.0	<i>In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.</i>	—	—	—	—	—	—	—	*	*	*	max.
Rinse & Spin	—	—	6.0	<i>Same as the last rinse and the final spin in the "Cotton" programme.</i>	—	—	*	—	—	—	*	*	*	*	max.
Drain	—	—	—	<i>Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold". Press "Drain/Reset" and then "Start/Pause" to start the programme.</i>	—	—	—	—	—	—	—	—	—	—	—

\*: optional / Yes : dosing required  
 1) For improved garment care, spin speed is restricted in these programmes.  
 2) Do not use liquid detergent when activating the "Start Delay".  
 3) Do not use liquid detergent for the main wash when activating the "Prewash" option.

The wool and handwash cycles of this machine have been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" or "hand wash" provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart.  
 M0620

## CONSUMPTION DATA

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)*
Cotton / Antibacterial	95	6.0	59**	1.90	2:00
Cotton	60	6.0	56	1.14	2:10
Cotton with "Eco"***	60	6.0	51	1.02	2:20
Cotton	40	5.0	56	0.70	2:00
Synthetics	60	2.5	50**	0.80	1:35
Synthetics	40	2.5	46	0.50	1:20
Daily load	40	3.0	41	0.50	1:00
Quick wash	30	3.0	41	0.40	0:30
Delicates	30	1.5	60	0.50	0:45
Wool	40	1.0	60	0.50	0:45
Handwash	40	1.0	45	0.50	0:40

Consumption values were measured in normalized conditions in compliance with Standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

\* The time indicated on the display can deviate from the values in the table, because it takes into account the household conditions applicable at that time.

\*\* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

\*\*\* Reference Programme for Energy Label.

## ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add detergent as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use.

1. Push the "On/Off" button . The blue light circle signals that the washer is switched on.
2. Select the **desired programme** by pushing the corresponding programme button; it is marked by a blue light.
3. The **temperature** and **spin speed** indicated on the display can be altered by pressing the "Temperature" button or the "Variable spin" button .

## SELECT ANY DESIRED OPTION

When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

### "Eco" button

- With a modified temperature profile and a slightly prolonged washing duration, the optimum combination of excellent washing result and even lower energy consumption is achieved.

### "Easy ironing" button

- Can be used together with "Cotton", "Synthetics" and "Daily load" programmes to make ironing easier.
- Increases the water quantity and the clothes are spun very gently.

### "Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. Increases the cycle time by approximately 15 min.
- Do not use liquid detergent for the main wash when activating the Prewash option.

### "Intensive rinse" button

- More water is added and rinse cycle is prolonged.
- This option is particularly suitable for areas with very soft water or for washing baby linen, and helps people with allergies.

### "Rinse hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the programmes "Synthetics", "Daily load" and "Delicates".
- It is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.
- If you select "Rinse hold", do not leave the laundry to soak for too long.

**Note:** The programme stops to "Rinse hold" at the time the "Rinse hold" symbol on the display lights up. The blue light under the "Start/Pause" button flashes.

### Terminate the "Rinse hold" option

- Press the "Start/Pause" button ; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, push "Drain/Reset" and then start the Drain programme by pushing the "Start/Pause" button .

### "Variable spin" button

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during rinse. The water is drained out only.

## SAVE YOUR FAVOURITE PROGRAMMES

If there is a programme setting which you use frequently, the appliance offers the possibility to save one setting for each programme so that it can be used again by just pushing one button.

- Select the desired programme, temperature, spin speed and option(s), push and hold the "Favourites" button for at least 3 seconds. The lamp next to "Favourites" shortly flashes and then lights up - the programme setting is saved.

Next time you want to use your individual programme setting, select the programme, push the "Favourites" button and start by pushing "Start/Pause" .

### If you want to replace the saved programme setting by another one:

- Push the programme button, select temperature, spin speed and options as desired and then press and hold the "Favourites" button for at least 3 seconds. The previously saved programme setting will be replaced by the new one.

## START DELAY

The "Start Delay" allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper.

- Select programme, temperature, spin speed and options.
- Press the "Start Delay" button to select a delay time of 1, 3, 6, 9 or 12 hours.
- Press the "Start/Pause" button . The countdown of the delay time begins; the clock symbol on the display and the delay time selected flash.
- The delay time and the clock symbol disappear when the programme starts.
- The number of hours preselected can be reduced by pressing again the "Start Delay" button.

### To cancel the "Start Delay"

- Select another programme or press the "Drain/Reset" button .

## PROGRAMME START

Open the tap and press the "Start/Pause" button . The blue light under the "Start/Pause" button is on. The programme sequence indicator shows the current programme phase, running from top to bottom through Wash, Rinse, Spin/Drain.

## "DOOR OPEN" INDICATION

Before starting and after end of a programme, the lamp lights to show that the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel (Reset) a running programme before the end".

## RED INDICATIONS

### "Water tap closed"

The appliance has no or insufficient water supply. Open the water tap; if the indication still lights up, refer to the "Troubleshooting Guide" in the Instructions for Use.

### "Clean pump"

Waste water is not pumped out. Check whether the drain hose is kinked or the filter must be cleaned; in the latter case refer to the Instructions for Use ("Removing the Filter").

### "Service"

Lighting up of the "Service" indication can be caused by a fault in an electrical component. Refer to the "Troubleshooting Guide" in your Instructions for Use; if the fault persists, contact our After Sales Service.

## PROGRAMME END

- The light of the programme sequence indicator is off, and the "Door open" indication lights up.

1. Switch the machine off by pushing "On/Off" .
2. Close the water tap.
3. Open the door and unload the machine.
4. Leave the door ajar to allow the drum to dry.

## CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the "Start/Pause" button to pause the programme. The light flashes.
2. Select the new programme, temperature, any options and another spin speed if you want.
3. Press the "Start/Pause" button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

## CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END

The "Drain/Reset" button cancels a programme before the end.

- Press the "Drain/Reset" button for at least 3 seconds. Any existing water is drained out before the door can be opened.



# **CONTENTS**

**BEFORE USING THE WASHING MACHINE**

**PRECAUTIONS AND GENERAL  
RECOMMENDATIONS**

**DESCRIPTION OF THE WASHING MACHINE  
DOOR**

**CHILD SAFETY**

**BEFORE THE FIRST WASH CYCLE**

**PREPARATION OF THE WASHING**

**DETERGENTS AND ADDITIVES**

**REMOVING THE FILTER/DRAINING  
RESIDUAL WATER**

**CARE AND MAINTENANCE**

**TROUBLESHOOTING GUIDE**

**AFTER-SALES SERVICE**

**ACCESSORIES**

**TRANSPORT/HANDLING**

**ELECTRICAL CONNECTION**

# BEFORE USING THE WASHING MACHINE

## 1. Removing the packaging and inspection

- After unpacking, make sure that the washing machine is undamaged. If in doubt, do not use the washing machine. Contact After-Sales Service or your local retailer.
- Check that the accessories and supplied parts are all present.
- Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous.
- If the appliance was exposed to the cold prior to delivery, keep it at room temperature for a few hours before operating.

## 2. Remove the transport bolts

- The washing machine is fitted with transport bolts to avoid any possible damage to the interior during transport. Before using the machine, it is imperative that the transport bolts are removed.
- After their removal, cover the openings with the 4 enclosed plastic caps.

## 3. Install the washing machine

- Remove the protective film from the control panel (if available on your model).
- Move the appliance without lifting it by the worktop.
- Install the appliance on a solid and level floor surface, preferably in a corner of the room.
- Make sure that all four feet are stable and resting on the floor and then check that the washing machine is perfectly level (use a spirit level).
- In case of wooden or so-called "floating floors" (for instance certain parquet or laminate floors), place the appliance on a 60 x 60 cm sheet of plywood at least 3 cm in thickness which is secured to the floor.

## 4. Water inlet

- Connect the water supply inlet hose in accordance with the regulations of your local water company.
- Water inlet: Cold water only  
(if no other information on your programme chart)
- Water tap: 3/4" threaded hose connector
- Water pressure (flow pressure): 100-1000 kPa (1-10 bar).

- Use only new hoses to connect the washing machine to the water supply. Used hoses must not be used and should be discarded.

## 5. Drain

- Connect the drain hose to the siphon or hook it over the edge of a sink by means of the "U" bend supplied.
- If the washing machine is connected to an integrated drainage system, ensure the latter is equipped with a vent to avoid simultaneous loading and draining of water (siphoning effect).

## 6. Electrical connection


- Electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions and current standard safety regulations.
- Data regarding voltage, power consumption and protection requirements is given on the inside of the door.
- The appliance must be connected to the mains by means of a socket with an earth connection in accordance with current regulations. The washing machine must be earthed by law. The manufacturer declines all liability for damage to property or injury to persons or animals, deriving directly or indirectly from failure to observe the directions.
- Do not use extension leads or multiple sockets.
- Before any maintenance on the washing machine disconnect it from the mains supply.
- After installation, access to the mains plug or to disconnection from mains supply must be ensured at all times via a double-pole switch.
- Do not operate the washing machine if it has been damaged during transport. Inform the After-Sales Service.
- Mains cable replacement is only to be carried out by After-Sales Service.
- The appliance must only be used in the household for the prescribed uses.

### Minimum housing dimensions:

Width:	600 mm
Height:	850 mm
Depth:	600 mm

# PRECAUTIONS AND GENERAL RECOMMENDATIONS


## 1. Packaging

- The packaging material is entirely recyclable, and marked with the recycling symbol . Adhere to current local regulations when disposing of packaging material.

## 2. Disposing of packaging and scrapping old washing machines

- The washing machine is built from reusable materials. It must be disposed of in compliance with current local waste disposal regulations.
- Before scrapping, remove all detergent residues and cut off the power cable so that the washing machine is made unusable.
- This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

## 3. Safety instructions


- The washing machine is appropriate for indoor use only.
- Do not store flammable fluids near the appliance.
- If you want to place a dryer on top of your washing machine, first contact our After-Sales Service or your specialist dealer to verify if this is possible. Placing a dryer on your washing machine is only admitted by using an appropriate stacking kit available through our After-Sales Service or your specialist dealer.

- Do not leave the appliance plugged in when not in use.
- Turn off the tap when not in use.
- Before any cleaning and maintenance switch off the machine or disconnect it from the mains.
- Never open the door forcibly or use it as a step.
- Children must not be allowed to play with the washing machine or to climb into the drum (see also the following page chapter "Child Safety").
- If necessary, the power cable may be replaced with an identical one obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician.


## 4. Energy saving tips

- Achieve the best use of energy, water, detergent and time by using the recommended maximum load size.
- Do not exceed the detergent dosages indicated in the manufacturer's instructions.
- The Eco-Ball - a special system in the outlet - will prevent detergent loss from the drum to avoid detergent loss into the environment.
- Use "Prewash" for heavily soiled laundry only! Save detergent, time, water and energy consumption by not selecting "Prewash" for slight to normally soiled laundry.
- Pretreat stains with stain remover or soak dried-in stains in water before washing to reduce the necessity of a hot wash programme.
- Save energy by using a 60° C instead of a 95° C wash programme or a 40° C instead of a 60° C wash programme.
- Save energy and time by selecting a high spin speed to reduce the water content in laundry before using a tumble dryer (for machines with adjustable spin speed).

## 5. EC Declaration of Conformity

- The appliance conforms to the following European Standards:  
73/23/EEC Low voltage directive  
89/336/EEC Electromagnetic Compatibility Directive  
93/68/EC CE Marking Directive 

# DESCRIPTION OF THE WASHING MACHINE

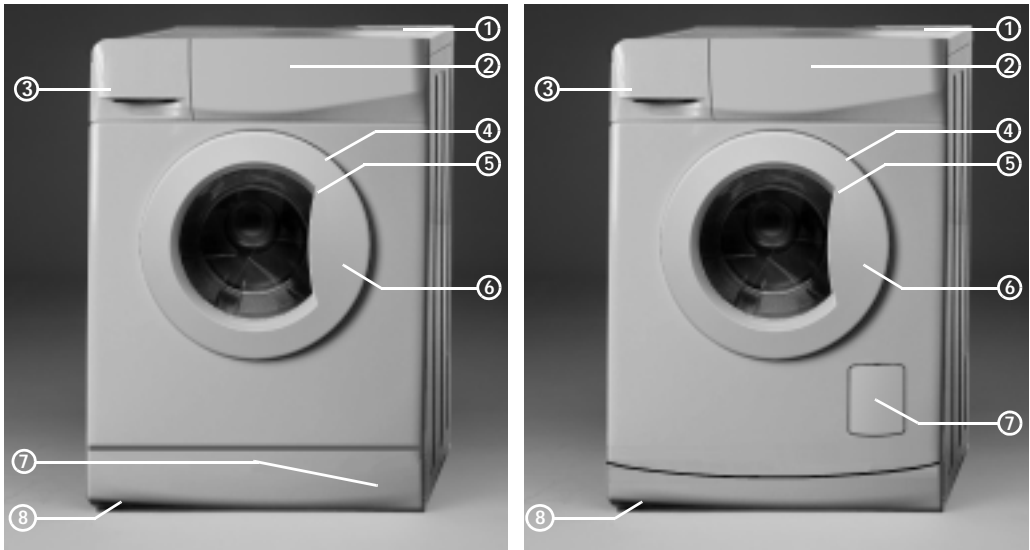

1. Worktop
2. Control panel
3. Detergent dispenser
4. Service plate (inside the door)
5. Door
6. Child safety device (if provided, inside the door)
7. Pump access behind plinth or cover (depending on the model)
8. Adjustable feet

## DOOR

To open the door, hold the door handle, press the inside handle (if available on your model) and pull the door. Close the door by pressing it without excessive force until it clicks shut.

## CHILD SAFETY


To protect the appliance against improper use, turn the plastic screw on the interior of the door by using a coin.

- Slot vertical: the door will not lock.
- Slot horizontal - normal position: the door can be locked again.



## BEFORE THE FIRST WASH CYCLE

To remove any residual water used in testing by the manufacturer, we recommend that you carry out a short wash cycle without laundry.

1. Open the tap.
2. Close the door.
3. Pour a little detergent (about 30 ml) into the main wash chamber  of the detergent dispenser.
4. Select and start a short programme (see separate "Programme Chart").



# PREPARATION OF THE WASHING

## 1. Sort the laundry according to...

- **Type of fabric / care label symbol**  
Cottons, mixed fibres, easy care/synthetics, wool, handwash items.
- **Colour**  
Separate coloured and white items. Wash new coloured articles separately.
- **Loading**  
Wash items of different sizes in the same load to improve washing efficiency and distribution in the drum.
- **Delicates**  
Wash small items (e.g. nylon stockings, belts etc.) and items with hooks (e.g. bras) in a cloth bag or pillow case with zip. Always remove curtain rings or wash curtains with the rings inside a cotton bag.

## 2. Empty all pockets

Coins, safety pins etc. can damage your laundry as well as the appliance drum and tub.

## 3. Fasteners

Close zips and fasten buttons or hooks; loose belts or ribbons should be tied together.

## Stain removal

- Blood, milk, eggs etc. are generally removed by the automatic enzyme phase of the programme.
- To remove red wine, coffee, tea, grass and fruit stains etc. add a stain remover to the main wash chamber **[II]** of the detergent dispenser.
- Pre-treat heavily-soiled areas with stain remover if necessary.

## Dyeing and bleaching

- Only use dyes and bleaches that are suitable for washing machines.
- Follow the Manufacturer's instructions.
- Plastic and rubber parts of the washing machine can be stained by dyes or bleaches.

## Loading the laundry

1. Open the door.
2. Load the articles one at a time loosely into the drum, without overfilling. Observe the load sizes given in the quick reference guide.

**Note:** overloading the machine will result in unsatisfactory washing results and creased laundry.

3. Close the door.

# DETERGENTS AND ADDITIVES

**Keep detergents and additives in a safe, dry place out of the reach of children!**

## The choice of detergent depends on:

- Type of fabric (cottons, easy care/synthetics, delicate items, wool).  
**Note:** Use only specific detergents for washing wool.
- Colour.
- The wash temperature.
- Degree and type of soiling.

## Remarks:

- Any whitish residues on dark fabrics are caused by insoluble compounds used in modern phosphate-free powder detergents. If this occurs, shake or brush out the fabric or use liquid detergents.
- Use only detergents and additives specifically produced for domestic washing machines.
- When using descaling agents, dyes or bleaches for the pre-wash, make sure that they are suitable for use in domestic washing machines. Descalers could contain products which could damage your washing machine.
- Do not use any solvents (e.g. turpentine, benzene). Do not machine wash fabrics that have been treated with solvents or flammable liquids.

- Do not use liquid detergent for the main wash when having activated the "prewash" option (if available on your model).
- Do not use liquid detergent when activating the "Start Delay" function (if available on your washing machine).

## Dosage

Follow the dosage recommendations on the detergent pack. They depend on:

- degree and type of soiling
- size of wash  
full load: follow the detergent manufacturer's instructions;  
half load: 3/4 the amount used for a full load;  
Minimum load (about 1 kg):  
1/2 the amount used for a full load
- water hardness in your area (ask for information from your water company). Soft water requires less detergent than hard water (refer to the water hardness table in the operating instructions).

## Notes:

Too much detergent can result in excess foam formation, which reduces washing efficiency. If the washing machine detects too much foam, it may prevent spinning. Insufficient detergent may result in grey laundry in time and also calcifies the heating system, drum and hoses.

## Where to put detergent and additives

The detergent drawer has three chambers (fig. "A").

### Prewash Chamber

- Detergent for the prewash

### Main Wash Chamber

- Detergent for the main wash
- Stain remover
- Water softener

### Softener Chamber

- Fabric softener
- Liquid starch

Pour additives only up to the "MAX" mark.

### Using chlorine bleach

- Wash your laundry in the desired programme (Cotton, Synthetics), adding an appropriate amount of chlorine bleach to the SOFTENER chamber (close the detergent dispenser carefully).
  - Immediately after end of programme, start the "Rinse and Spin" programme to eliminate any residual bleach smell; if you want, you can add softener.
- Never put both chlorine bleach and softener into the softener chamber at the same time.

### Using starch


- Select the "Rinse and Spin" programme and check that the spin speed is adjusted to not more than 800 rpm.
- Start the programme, pull out the detergent dispenser so that you can see approximately 3 cm of the softener chamber.
- Pour the starch solution prepared into the softener chamber while the water is running into the detergent dispenser.





## How to position the separator in the main wash chamber for powder or liquid detergent

For use with powder detergent: place the separator in the higher position.

Lift the separator until its top can be reclined. Place its hooks on the upper end of the back guide rails and slightly push the separator down to fix it (fig. "B" and "C").

A gap should remain between the separator and the bottom of the main wash chamber, if the separator has been correctly installed (fig. "B" and "C").

For use with liquid detergent: place the separator in the lower position. Secure the separator in the chamber using the front guide rails. Position the separator so that it touches the bottom of the main wash chamber  (fig. "D").

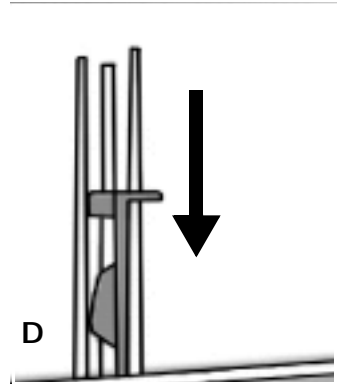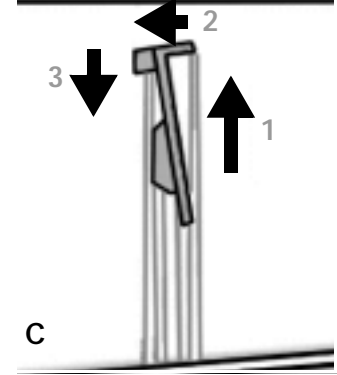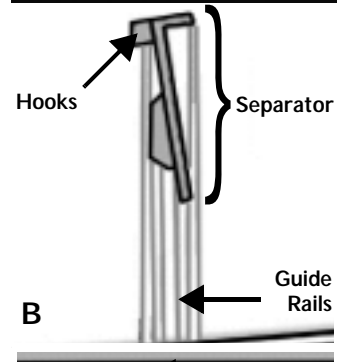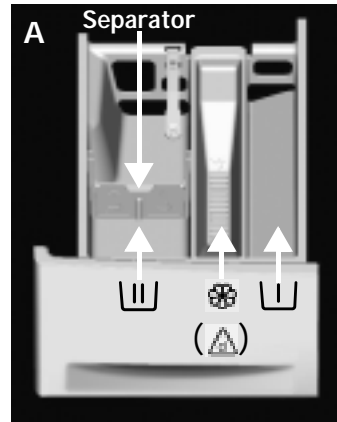

# REMOVING THE FILTER/DRAINING RESIDUAL WATER

We recommend that you check and clean the filter regularly, at least two or three times a year.


## Especially:

- If the appliance is not draining properly or if it fails to perform spin cycles.

- If the "Clean filter" indication lights up:

**IMPORTANT: make sure the water has cooled before draining the appliance.**

1. Stop the appliance and unplug it.
2. Remove the plinth or open the cover (depending on the model) by using the separator of the detergent dispenser (fig. A / B).
3. Place a container beneath it. If your washing machine has the filter situated behind the plinth (see pictures "A" and "C"), use a broad and very flat container with a maximum height of 2 cm.
4. Open the filter but do not remove it completely. Slowly turn the filter counterclockwise (fig. C) until the water begins to drain out.
5. Wait until all the water has drained.
6. Now unscrew the filter completely and remove it.
7. Tilt the appliance forwards carefully to allow the water to flow out.
8. Clean the filter and the filter chamber.
9. Check that the pump rotor moves freely.
10. Re-insert the filter and screw it in clockwise as far as it will go.
11. Pour about 1 litre of water into the detergent drawer to reactivate the "Eco system". Check that the filter is inserted properly and securely.
12. Reinstall the plinth or the cover, depending on the model.
13. Plug in the appliance again.
14. Select a programme and start it.

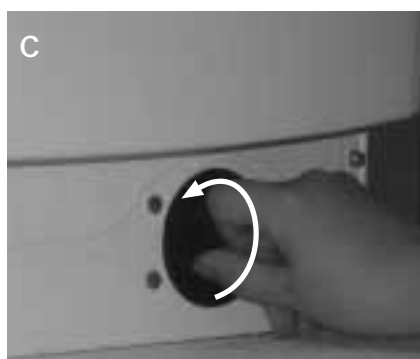

# CARE AND MAINTENANCE

## Appliance exterior and control panel

- Can be washed down with a soft, damp cloth.
- A little neutral detergent (non abrasive) can also be used.
- Dry with a soft cloth.

## Appliance interior

- After each washing, leave the door open for some time to allow the inside of the appliance to dry.
- If you never or seldom wash your laundry at 95°C, we recommend to occasionally run a 95°C programme without laundry, adding a small amount of detergent, to keep the interior of the appliance clean.

## Door seal

- Clean with a damp cloth when necessary.
- Check the condition of the door seal periodically.

## Filter

- Check and clean the filter regularly, at least two or three times a year (see "Removing The Filter/ Draining Residual Water").

## Water supply hose(s)

- Check the hose(s) regularly for brittleness and cracks.
- Regularly check and clean the mesh filter inside the inlet hose (see "Cleaning the mesh filter in the water supply hose(s)").

**Do not use flammable fluids for cleaning the appliance.**

## Detergent dispenser

**Clean the dispenser drawer and the dispenser compartment regularly, at least three or four times a year, to prevent detergent build-up:**

1. Press the release lever in the main wash chamber downward and remove the dispenser drawer from the dispenser compartment.
2. Remove the cover grid from the softener chamber. Remove the separator from the main wash chamber by pulling it upward (see dark arrows).
3. Wash all the parts under running water.
4. Clean the dispenser compartment with a damp cloth.
5. Refit the separator and the cover grid in the dispenser drawer and push the drawer back into the dispenser compartment.



## Water supply hose(s)

If a supply hose shows a damage, replace it by a new hose of the same type, available through our After-Sales Service or your specialist dealer.

If your supply hose has a transparent hose coating (fig. "C"), periodically check the colour of the transparent coating. If the coating begins to turn red, this is an indication that the hose may have a leak and should be replaced. Contact our After-Sales Service team or specialist dealer to obtain a replacement hose.


 
### Cleaning the mesh filter in the water supply hose(s)

1. Close the tap and loosen the inlet hose on the tap.
2. Clean the internal mesh filter and screw the water inlet hose back onto the tap.
3. Now unscrew the inlet hose on the rear of the washing machine.
4. Pull off the mesh filter from the washing machine connection with universal pliers and clean it.
5. Refit the mesh filter and screw the inlet hose on again.
6. Turn on the tap and ensure that the connections are completely water-tight.








# TROUBLESHOOTING GUIDE

Your washing machine is equipped with various automatic safety functions. These enable faults to be detected in good time and the safety system can react appropriately. These faults are frequently so minor that they can be removed within a few minutes.

Problem	Causes, Solutions, Tips
Appliance does not start, no indicator lamps are on	<ul style="list-style-type: none"> <li>• Plug is not properly inserted in socket.</li> <li>• Socket or fuse does not function correctly (use a table lamp or similar appliance to test it).</li> <li>• the "On/Off" button has not been pressed (if available on your model).</li> </ul>
Appliance does not start although "Start/Pause" has been pressed	<ul style="list-style-type: none"> <li>• Door is not properly closed (see also "Child Safety").</li> <li>• The "Lock buttons" feature has been activated  (if available on your model). To unlock the buttons, push the temperature and the spin speed button simultaneously and hold them at least for 3 seconds. The key symbol on the display disappears and the programme can be started.</li> </ul>
Appliance stops during the programme, and the "Start/Pause" light flashes	<ul style="list-style-type: none"> <li>• "Rinse hold" option is activated (if available on your model) and  (Anticrease) lights up in the programme sequence indicator - terminate "Rinse hold" by pressing "Start/Pause" or by choosing and starting "Drain" programme.</li> <li>• Programme has been changed - reselect desired programme and press "Start/Pause".</li> <li>• Programme has been interrupted and eventually door has been opened - close door and restart programme by pressing "Start/Pause".</li> <li>• The appliance's safety system has been activated (see "Description of red indications").</li> <li>• Water tap is not opened or water inlet hose is kinked ("Water tap closed" indication lights up).</li> </ul>
Detergent dispenser contains residues from detergent and/or additives	<ul style="list-style-type: none"> <li>• Separator in main wash chamber is not correctly installed or not adapted to use of powder and liquid detergent (see "Detergents And Additives").</li> <li>• Water entering is not enough; the mesh filters of the water supply could be blocked (see "Care And Maintenance").</li> </ul>
Appliance vibrates during spin cycle	<ul style="list-style-type: none"> <li>• Transport bolts have not been removed; <b>before using the machine, it is imperative that the transport bolts are removed.</b></li> <li>• Appliance is not level / not standing firmly on all four feet (see separate "Installation Guide").</li> </ul>
Final spin results are poor	<p>The appliance has an imbalance detection and correction system. If individual heavy items are loaded (e.g. bathrobes), this system may reduce the spin speed automatically or even interrupt the spin completely in order to protect the washing machine.</p> <ul style="list-style-type: none"> <li>• Heavy item(s) prevented spinning; add smaller articles of laundry and repeat spin cycle.</li> <li>• Excessive foam formation prevented spinning; select and start "Rinse &amp; Spin" programme. Avoid excessive detergent dosing (see "Detergents And Additives").</li> <li>• "Variable spin" button (if available on your model) has been set to a low spin speed, or "No spin" option (if available on your model) has been activated.</li> </ul>
Programme time initially displayed is lengthened / shortened by a period of time (only for appliances having a display which indicates the remaining programme time)	<p>Normal capacity of the appliance to adapt to factors that can have an effect on the wash programme time, e.g.: Excess of foam formation, load imbalance due to heavy items of laundry, prolonged heating time resulting from reduced inlet water temperature.</p> <p>Due to such influences, the programme time is recalculated and updated if necessary. <b>On certain displays (depending on the model), an animation appears during such update periods.</b></p>

## Description of red indications

Red indication lights up (if fitted on your machine)	Red indication on display (if fitted on your machine)	Description Causes Solutions
<p>"Water tap closed" </p>	<p></p>	<p>Appliance has no or insufficient water supply. The <b>"Start/Pause"</b> light flashes.</p> <p>Check whether:</p> <ul style="list-style-type: none"> <li>• Water tap is fully open and water supply pressure is sufficient.</li> <li>• Kinks are present in the water inlet hose.</li> <li>• Mesh filter of water supply hose is blocked (see "Care And Maintenance").</li> <li>• The water hose is frozen up.</li> <li>• The safety valve inspection window of your water supply hose is red (provided your appliance has a water supply hose as shown on picture "B" - see previous chapter "Care And Maintenance"); replace the hose by a new one available through our After-Sales Service or your specialist dealer.</li> </ul> <p>After problem has been removed, restart programme by pressing <b>"Start/Pause"</b>. If the fault occurs again, contact our After-Sales Service (see next chapter).</p>
<p>"Clean pump" </p>	<p></p>	<p>Waste water is not pumped out. The appliance stops in the corresponding programme step; unplug it and check whether:</p> <ul style="list-style-type: none"> <li>• Kinks are present in the drain hose.</li> <li>• Filter or pump is blocked (see chapter "Removing The Filter/Draining Residual Water"; <b>make sure the water has cooled before draining the appliance</b>).</li> <li>• The drain hose is frozen up.</li> </ul> <p>After problem has been removed, select and start the "Drain" programme or push the "Reset" button for at least 3 seconds; afterwards restart the desired programme. If the fault occurs again, contact our After-Sales-Service (see next chapter).</p>

Red indication lights up (if fitted on your machine)	Indication on time display (if fitted on your machine)	Description Causes Solutions
"Service" 	<p>from "F02" to "F35" (except "F09")</p> <p>"F09"</p> <p>"FA"</p> <p>"Fod"</p>	<p>"Electrical module fault" Select and start the "Drain" programme or push the "Reset" button for at least 3 seconds.</p> <p>"Water level too high" (after programme cancellation or false operating). Switch off the appliance (by pressing the "On/Off" button or by turning the programme selector to the "Off/O" position - depending on the model) and then switch it on again, select the programme "Drain" and start within 15 sec.</p> <p>"Waterstop fault" Switch off the appliance (by pressing the "On/Off" button or by turning the programme selector to the "Off/O" position - depending on the model), pull out mains plug and turn the water tap off. Tilt the appliance forward carefully to allow collected water to flow out from the bottom. Then:</p> <ul style="list-style-type: none"> <li>• Plug in the appliance again.</li> <li>• Turn the water tap on (if water immediately flows into the appliance without the appliance being started, there is a failure; turn off the tap and notify the After-Sales Service).</li> <li>• Select and start the desired programme again.</li> </ul> <p>"Overfoaming" Too much foam interrupted the wash programme.</p> <ul style="list-style-type: none"> <li>• Select and start the "Rinse &amp; Spin" programme.</li> <li>• Afterwards select and start the desired programme again, using less detergent.</li> </ul> <p>If any of the faults described above persist, unplug the appliance, turn off the water tap and contact our After-Sales Service (see next chapter).</p>



# AFTER-SALES SERVICE

## Before contacting After-Sales Service:

1. Try to remedy the problem yourself (see "Troubleshooting Guide").
2. Restart the programme to check whether the problem has solved itself.
3. If the washing machine continues to function incorrectly, call our After-Sales Service.

## Specify:

- The nature of the problem.
- The washing machine model.
- The service code (number after the word SERVICE).

**SERVICE** 0000 000 00000



The After-Sales Service sticker can be found inside the door.

- Your full address.
  - Your telephone number and area code.
- After-Sales Service phone numbers and addresses are given on the guarantee card. Alternatively, consult the dealer where you purchased the appliance.

# ACCESSORIES

For some models, you can obtain via our After-Sales Service or your specialist dealer:

- a **Pedestal Drawer** which can be installed beneath your washing machine. It raises your machine to allow for more comfortable loading and unloading, as you now no longer need to bend as far to access the unit. Furthermore, it offers a great space-management tool and storage solution.
- a **Stacking Kit** by means of which you can fix your dryer on top of your washing machine and thus effectively save space.

Certain models are able to be installed under your kitchen worktop; in that case, please contact our After-Sales Service (see above). Be aware that:

- the appliance **MUST** be installed under a continuous worktop.
- according to the legal safety regulations, the installation of the appliance **MUST** be carried out by an authorized technician or by our After-Sales Service.
- the appliance **MUST** be installed using the intermediate cover panel of the **UBS Base Set** which can be obtained from specialist dealers or our After-Sales Service.

# TRANSPORT/HANDLING

## Never lift the appliance by the worktop when transporting.

1. Pull out the mains plug.
2. Turn off the tap.
3. Check that machine door and detergent dispenser are properly closed.
4. Disconnect the inlet and drain hoses.
5. Eliminate all water from the hoses and from the appliance (see "Removing The Filter/Draining Residual Water").
6. Fit the transport bolts (obligatory).

# ELECTRICAL CONNECTION

## For Great Britain only

**Warning - this appliance must be earthed**

### Fuse replacement

If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:

1. Remove the fuse cover (A) and fuse (B).
2. Fit replacement 13A fuse into fuse cover.
3. Refit both into plug.

### Important:

The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted.

Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug. Replacement fuse covers are available from your local electrical store.

## For the Republic of Ireland only

The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type.

### Socket outlet / plug (valid for both countries)

If the fitted plug is not suitable for your socket outlet, Please contact After-Sales Service for further instruction. Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified technician in compliance with the manufactures instructions and current standard safety regulations.

