



Instructions for use

AWO/D 4100

Whirlpool Switzerland, www.whirlpool.ch

Bauknecht AG, Industriestrasse 36, 5600 Lenzburg, www.bauknecht.ch

Verkauf	Telefon 0848 801 002	Fax 0848 801 017	verkauf@bauknecht.ch
Kundendienst	Telefon 0848 801 001	Fax 0848 801 003	service@bauknecht.ch
Ersatzteile	Telefon 0848 801 005	Fax 0848 801 004	ersatzteilverkauf@bauknecht.ch

GB AWO/D 4100

PROGRAMME CHART


A. "Door open" indication

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

B. "Service" indication

C. "Water tap closed" indication

D. "Clean pump" indication

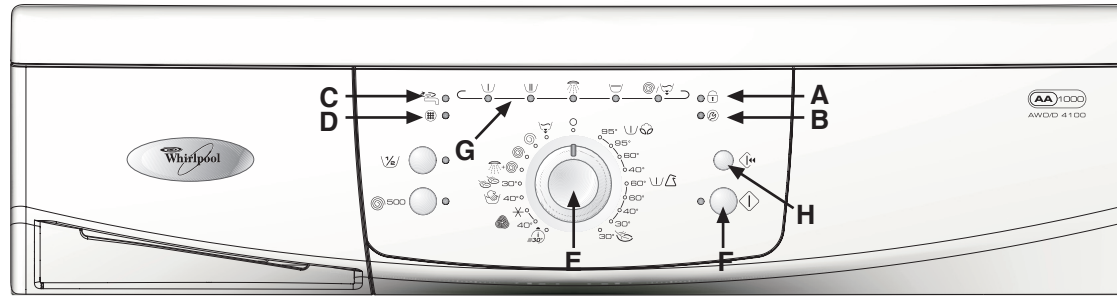

E. Programme selector

F. "Start/Pause" button

G. Programme sequence indicator

H. "Reset" button

Programme	Care Labels	Type of wash / Notes <i>- for temperature selection, respect the manufacturer's recommendations on the care label</i>	Max. Load kg	Detergents and Additives			Special options		Spin Speed rpm
				Pre-wash	Main Wash	Softener	Half load	Spin speed reduction	
Cotton with prewash 95 °C	95 °C	Heavily soiled, long wearing and temperature stable textiles in cotton and linen (bed linen, table linen, underwear, shirts etc.).	5.0	Yes	Yes ¹⁾	*	*	*	1000
Cotton 40 - 60 - 95 °C	40 - 60 - 95 °C	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5.0	-	Yes	*	*	*	1000
Synthetics with prewash 60 °C	60 °C	Heavily soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	Yes	Yes ¹⁾	*	*	*	1000
Synthetics 30 - 40 - 60 °C	30 - 40 - 60 °C	Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	-	Yes	*	*	*	1000
Delicates 30 °C	30 °C	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	1.5	-	Yes	*	-	*	1000
Quick wash 30 °C	30 °C	Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	3.0	-	Yes	*	-	*	1000
Wool Cold - 40 °C	- 40 °C	Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable.	1.0	-	Yes	*	-	*	1000
Handwash 40 °C	40 °C	Textiles made of linen, silk, wool and viscose marked as "handwashable".	1.0	-	Yes	*	-	-	400 ²⁾
Lingerie 30 °C	30 °C	This cycle is particularly suitable to treat delicate lingerie (use of a laundry net strongly recommended).	1.0	-	Yes	*	-	-	400 ²⁾
Rinse & Spin		<i>Same as the last rinse and the final spin in the "Cotton" programme.</i>	5.0	-	-	*	*	*	1000
Spin		<i>In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.</i>	5.0	-	-	-	-	*	1000
Gentle Spin		<i>In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.</i>	1.0	-	-	-	-	*	1000
Drain		<i>Water is drained only without any spinning.</i>	-	-	-	-	-	-	-

* : option / Yes : dosing required

¹⁾ Do not use liquid detergent.

²⁾ For improved garment care spin speed is restricted to 400 rpm in this programme.

Whirlpool is a registered trademark of Whirlpool USA.

5019 301 10344

CONSUMPTION DATA

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)
Cotton	95	5.0	49*	1.90	2:00
Cotton**	60	5.0	44	0.95	2:20
Cotton	40	5.0	44	0.60	2:00
Synthetics	60	2.5	50*	0.70	1:30
Synthetics	40	2.5	45	0.55	1:15
Delicates	30	1.5	50	0.50	0:45
Quick wash	30	3.0	40	0.40	0:30
Wool	40	1.0	55	0.60	0:45
Handwash	40	1.0	45	0.60	0:40
Lingerie	30	1.0	45	0.50	0:40

Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

** Reference Programme for Energy Label.

ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add detergents as indicated on the front page and as described in your Instructions for Use. Close the door and turn the **programme selector** to the desired programme and temperature. The indication lamp next to the **“Start/Pause”** button flashes.

SELECT ANY DESIRED OPTION

Push the button(s) of any option(s) desired - the respective indication lamp lights up.

When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

“Half load” button

- Reduces water consumption, above all during rinsing.
- Suitable for lightly soiled laundry and small loads (max. 3 kg).

“Spin speed reduction” button 500

- Reduces the predetermined automatic maximum spin speed to treat your laundry more gently.

PROGRAMME START

Open the tap and press the **“Start/Pause”** button. The indication lamp next to the **“Start/Pause”** button lights up. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain.

When the programme phase is finished, the corresponding indication goes out.

“DOOR OPEN” INDICATION

Before starting and after end of a programme, the lamp lights to show the the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to “Cancel (Reset) a running programme before the end”.

RED INDICATIONS

“Service”

Lighting up of the “Service” indication can be caused by a fault in an electrical component. Refer to the “Troubleshooting Guide” in your “Instructions for Use”; if the fault persists, contact our After Sales Service.

“Water tap closed”

The appliance has no or insufficient water supply. Open the water tap: if the indications still lights up, refer to the “Troubleshooting Guide” in the Instructions for Use.

“Clean pump”

Waste water is not pumped out. Check whether the drain hose is kinked or the filter must be cleaned: in the latter case refer to the Instructions for Use (“Removing the Filter”).

PROGRAMME END

- All the lights of the programme sequence indicator are off, and the “Door open” indication lights up.
1. Turn the programme selector to the “Off/O” position.
 2. Close the water tap.
 3. Open the door and unload the machine.
 4. Leave the door ajar to allow the drum to dry.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the **“Start/Pause”** button to pause the programme. The light flashes.
2. Select the new programme (with temperature), any options and another spin speed if you want.
3. Press the **“Start/Pause”** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END

The **“Reset”** button cancels a programme before the end.

- Press the **“Reset”** button for at least 3 seconds. Any existing water is drained out before the door can be opened.