



# 806

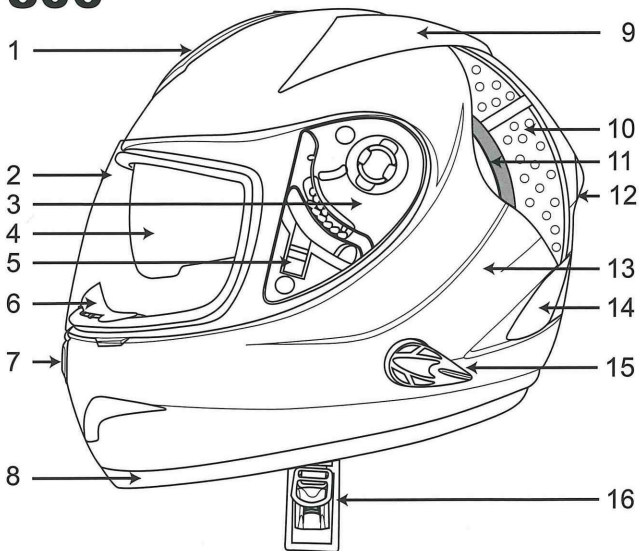


- 1. TOP VENT
- 2. VISOR
- 3. VISOR MECHANISM
- 4. SUN VISOR
- 5. VISOR LOCKER
- 6. WIND DEFLECTOR
- 7. CHIN VENT
- 8. NECK RUBBER TRIM

- 9. SIDE TOP VENTS
- 10. EPS
- 11. LINER
- 12. REAR VENT
- 13. OUTER SHELL
- 14. LOWER REAR VENTS
- 15. SUN VISOR BUTTON
- 16. CHIN STRAP


## Visor removal

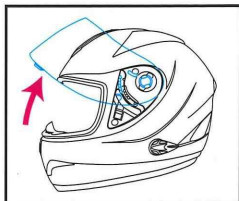


1. Open visor completely.

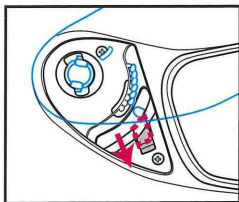

2. Open gate by sliding locks downwards on both visor base plates.

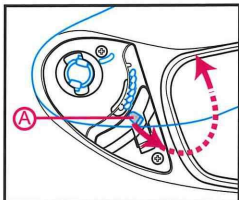


3. Lower visor downwards till (A) point to the upper position of the visor locker. Grasp visor with both hands and then flex visor outwards.

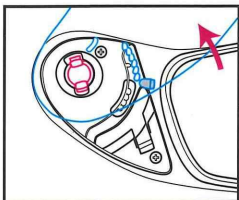


4. Open visor completely till the tenons out of the both sides of visor and then flex visor outwards.


## Visor installation

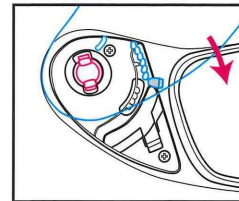


1. Line up the tenons on the both sides of visor with the fillisters of visor gates, press inwards.

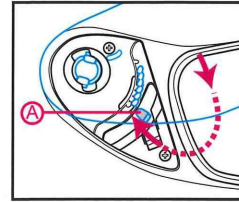

2. Lower visor downwards till (A) points on both sides to the upper position of the visor locker and press both the two sides of visor inwards to secure visor, then open visor to maximum opening.

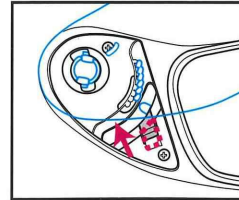


3. Push both the visor lockers upwards.

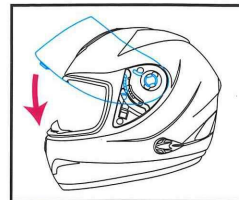


4. Visor may now be closed.


## Sun visor removal

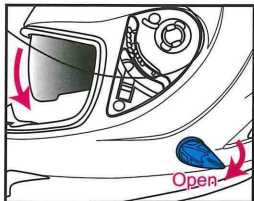

1. Open visor to its full open position. Push forward the sun visor button and sun visor will be automatically laid down.

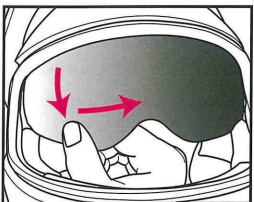


2. Pull downwards the right hand side of the sun visor in order to have a small vacant space. Then pull outward the sun visor to remove from mechanism.

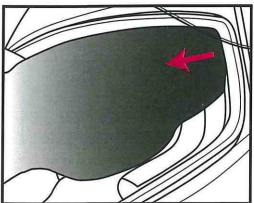


3. Repeat on opposite side.


## Sun visor installation

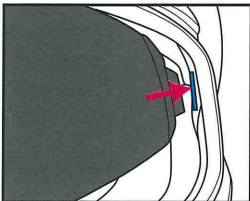

1. From the left-hand side of the shell, there is a sun visor tenon (mechanism) between EPS and shell. Push the left-hand side of sun visor in the direction of the arrow until a "click" is heard.

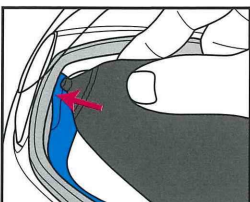

2. Repeat on the right hand side until a "click" is heard.

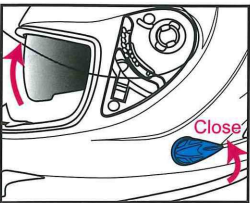

3. Press the sun visor button to retrieve the sun visor into the shell and install the wind deflector accordingly.

## Indication of "wind deflector" for removal and installation



※ Before removal and installation, open the visor completely.

### Removal portion:


Grasp one side of the wind deflector and lift up.

### Installation portion:

- A. Line up the wind deflector with the middle position of PU chin and frame.
- B. Firstly, press the clasp of one side of the wind deflector into the seam between PU chin bar and visor frame, modulate the position of the breath mask, and then press into the rest clasps in sequence.

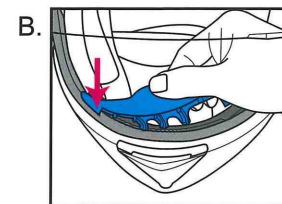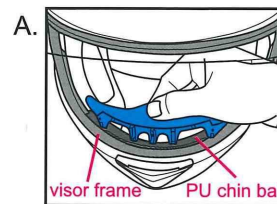

## Introduction of "removable liners"

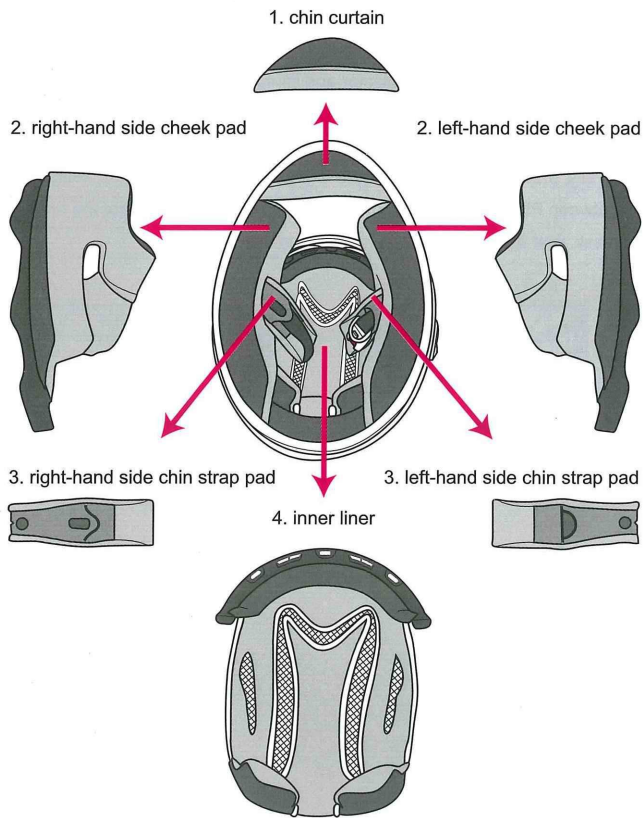

※ The dismantling flow from 1 to 4

※ The assembling flow from 4 to 1

## Indication of "chin curtain" for removal and installation



※ It will be more smoothly if you pulled open the neck rubber trim slightly when dismantling or assembling these 2 parts.

### Removal portion:

◎ Pull the chin curtain upwards from one side.

### Installation portion:

- Line up the clasp of the chin curtain with the front middle position of the helmet.
- Then slide the clasp of one side into the seam between the outer shell and PU chin. Later get the clasps inner-press till the neck rubber trim completely covers the clasps.

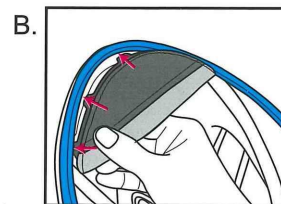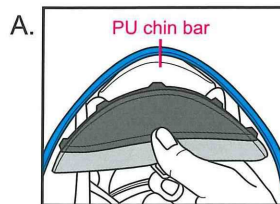

## Indication of "cheek pads" for removal and installation




### Removal portion:

※ Before removal, firstly remove the chin curtain.

- Sequentially pull away the three buttons fastened the cheek pads and the EPS.
- Grasp outwards the cheek pads fixing board.

### Installation portion:

- Indicate the direction of the cheek pads, and pass the strap through the breach of the cheek pad.
- Pull outwards the rubber trim of outer shell, then insert the inner liner plate between shell & EPS and covered by rubber trim of outer shell completely.
- Adjust the position of cheek pads, sequentially buckle up the three buttons.

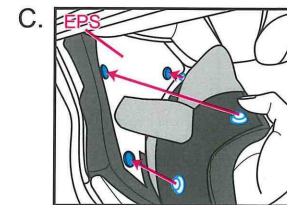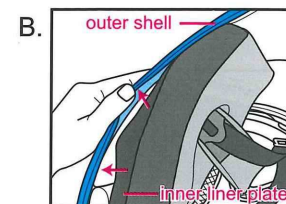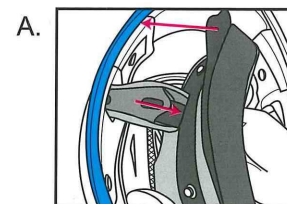

### Indication of "inner liner" for installation

※ Before removal and installation, it would be smoothly operated if you opened the visor completely.



#### Removal portion:

※ Before removal, firstly pull away the cheek pads at the two sides.

1. Remove the rear buttons of inner liner from the EPS.
2. Pull the front plate of the top liner out from the rabbet.

#### Installation portion:

- A. Lay the liner on the top position of the EPS, then insert the front plate of the top liner into each rabbet in sequence.
- B. Press the rear buttons of inner liner on EPS completely.

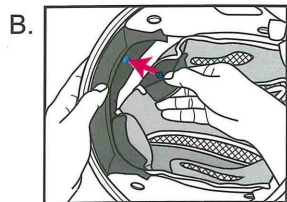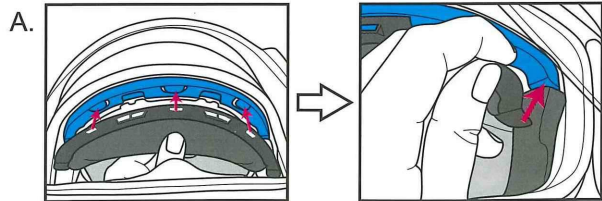


### Indication of "chin strap pads" for removal and installation

#### Removal portion:

- ※ Before removal, firstly remove the cheek pads.
- ⊙ Then hold the slit of the chin strap curtain which is near the EPS, and draw out the chin strap pad.

#### Installation portion:

- ⊙ Indicate the direction of chin strap curtain, pass through the chin strap, and push the strap to the bottom, then stick it.

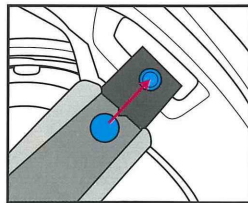

#### Notification:

1. Please use water or neutral cleanser to clean the visor or liner.
2. Suggested to wash the liner by your hands or by putting the liner into a cleaning cover. After cleaning, dry the liner with a clean soft fabric, and then posit the liner on the cool place.
3. The liner must be assembled in the right position. Then you should buckle up the buttons.
4. Don't pull or drag violently when you dismantle or assemble visor and liner.
5. Liners come in different sizes. You could purchase or change the helmet after confirming sizes.

# 806

# SERIES

E13\*22R00\*22R05\*9238\*05