

Instructions for use

MKT 5510 C

Bauknecht AG, Industriestrasse 36, 5600 Lenzburg, www.bauknecht.ch

Verkauf	Telefon 0848 801 002	Fax 0848 801 017	verkauf@bauknecht.ch
Kundendienst	Telefon 0848 801 001	Fax 0848 801 003	service@bauknecht.ch
Ersatzteile	Telefon 0848 801 005	Fax 0848 801 004	ersatzteilverkauf@bauknecht.ch

MKT 5510 C

Wäschetrockner

Bedienungsanleitung; Seite 3

Sèche-linge

Mode d'emploi; page 12

Asciugatrice

Istruzioni per l'uso; pagina 21

Drying machine

Instructions for use; page 30



Machine operation

Additional information (including troubleshooting and service) can be found in the individual chapters of the instructions for use.

Sort laundry according to care symbols:

-  Do not tumble dry
-  Suitable for tumble drying - at low drying temperature
-  Suitable for tumble drying

Sort by:

Material thickness: Whenever there is greater load than the dryer can handle, separate laundry according to weight (e.g. dry towels and thin underwear separately).

Type of material: Cotton (linen); synthetic textiles (easy care).

Degree of drying: Cupboard dry, iron dry etc.

Do not tumble dry: Woollens, silk, nylon stockings, delicate embroidery, fabrics with metallic decorations, bulky items such as sleeping bags, etc.

Preparing laundry

Check that all fastenings are closed and that pockets are empty. Please ensure that there are no cigarette lighters in the wash. Turn laundry inside out.

Opening door

Pull the door handle. If the child safety lock is activated, please deactivate it (additional information can be found in the "Door Reversibility/Child Safety Lock" chapter of the instructions for use).

Loading dryer

Place laundry loosely in the drum to achieve equal drying throughout. Then close the door.

Selecting programme

Select the drying programme required by turning the programme selector knob (for information, refer to programme table).

Selecting options (if available)

Select the option required by pressing the corresponding button.

The indicator lamp above the relevant button lights up to confirm your selection. A fast blinking led indicates a wrong selection is made (incompatible options). Press the button again to cancel the option.

Starting dryer

The drying programme is started by pressing the "Start (Pause)" button. The relevant indicator lamp lights up.

Changing programme selection: If the programme selected is changed during drying, the dryer stops. The Drying indicator lamps flashes. To operate the new programme, again press the "Start (Pause)" button.

Interrupting programme: To interrupt the dryer during the drying cycle, set the programme selector knob to "Airing"  and press the "Start (Pause)" button. Wait at least 5 minutes before opening the door to allow the dryer to cool down. For your safety the drying cycle stops automatically if you open the door. To restart, after door opening, close the door and press the "Start (Pause)" button again.

Warning: Never stop a tumble dryer before the end of the drying cycle, unless all items are quickly removed and spread out so that the heat is dissipated.

The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.

Programme end - unloading dryer



End: Take the laundry out of the dryer. The drying process is complete and the anti-crease phase has been reached (active).



Anti-Crease: If the laundry is not removed at the end of the drying cycle, an automatic anti-crease cycle will operate for maximum 60 min. The drum rotates at regular intervals to prevent the laundry from creasing.

Set the programme selector knob to "Off".








 

 





Switching dryer off

Cleaning the lint filter: Open door, pull lint filter up and out of machine and open it. Brush lint using a soft brush or your fingertips. Close lint filter and push firmly back into place.

Emptying water container: Pull container out by the handle and empty. Replace the container when empty by pushing it completely back into place.

If required, activate child safety lock (additional information can be found in the "Door Reversibility/Child Safety Lock" chapter of the instructions for use).

Please note: Only use additives/plastic items specified as dryer safe and rinse items that have been treated with stain remover thoroughly in plenty of water before drying. Never dry rubber objects or objects stained with vegetable oils in the dryer.

Overview of programmes					Options		Approximate drying times (in minutes)		
Programmes / Drying levels			Type of textile	Fabrics	Volume of load kg	Gentle 	Buzzer 	Very wet load	Wet load
Cotton	 Extra	Ready to wear	Multi-layered, thick laundry such as: terry towels, dish cloths and dry towels, bed linen, underwear, terry towelling bath robes.	Cotton or linen hot wash / coloured laundry  Max. 5.5 kg	3.0 5.5	X	X	95' 145'	80' 120'
		Cupboard dry *	Similar types of laundry which do not require ironing such as: dry towels, bed linen, underwear, baby clothes, T-shirts, cotton socks.		3.0 5.5	X	X	85' 135'	70' 105'
		Iron dry *	Laundry which requires ironing such as: bed and table linen, dry towels, T-shirts, polo shirts, work clothes.		3.0 5.5	X	X	70' 105'	60' 85'
Mixed fabrics	 Extra	Ready to wear	Laundry with thick, multi-layered areas such as: bed and table linen, track suits, anoraks, blankets.	Synthetic, mixed fibre or cotton easy care (ironing not required) laundry  Max. 2.5 kg	1.0 2.5	X	X	50' 70'	40' 50'
		Cupboard dry *	Laundry which does not require ironing such as: shirts, blouses, T-shirts, sportswear.		1.0 2.5	X	X	40' 60'	30' 40'
		Iron dry	Laundry which requires ironing such as: trousers, dresses, skirts, shirts, blouses.		1.0 2.5	X	X	30' 50'	20' 30'
Delicate plus		Cupboard dry	Low drying intensity for delicates and items labelled with  , such as: trousers, dresses, shirts, blouses.	Laundry made from synthetic fibres such as polyamide, nylon, polyacrylic, etc.  Max. 2.5 kg	2.5	X	X	115'	100'
Airing	Laundry is aired and refreshed for 30 minutes without heating.				-	-	-	-	-
Drying times	Completes drying for min.3-5 full size textiles (suitable for all fabrics).				-	X	X	10' 20' 30' 40' 60' 90'	

* Test programme in accordance with EN 61121.

How to proceed if ...

...you want to correctly care for and clean your dryer:

Clean the filter at the end of every cycle.



- Open the door.
- Pull the filter upwards.
- Open the filter.
- Brush lint using a soft brush or your fingertips.
- Close the filter.
- Push the filter back into place.

Empty the water container at the end of each drying cycle.



- Pull the handle to remove the water container.
- Empty the water container.
- Replace the water container when empty by pushing it **completely** back in place.

Clean the heat exchanger at least every month. (For further information see chapter "Heat Exchanger" in the Instructions for Use).

- Remove fibres in and around the water evacuation hole at least once per month.

...you want to check the dryer yourself first:

(If your machine is not functioning correctly, please check the following points before phoning for the customer service – also refer to relevant chapter in the instructions for use)

Drying takes too long / laundry is not dry enough.



- Has the correct drying programme been selected?
- Was the inserted laundry too wet (washing machine spin speed less than 1000 rpm)?
- Is the lint filter dirty (filter indicator light on)?
- Is the heat exchanger dirty? (for more information, refer to the instructions for use)
- Is the room temperature too high?
- Are the "End" "G" and "Anticrease" "E" indicator lamps lighting up? The drying cycle is complete and the laundry can be taken out.
- If the drying result does not meet your expectation, select a more dry programme.

The dryer will not operate (after a power failure, always press the "Start (Pause)" button).



- Is the plug properly inserted into the mains electricity socket?
- Is there a power failure?
- Has the fuse blown?
- Is the door properly closed?
- Has a drying programme been selected?
- Has the "Start (Pause)" button been pressed?

Lint filter, water container or heat exchanger indicator lamps on.



- Is the lint filter clean?
- Is the water container empty?
- Has the water container been inserted correctly?
- Is the heat exchanger clean?

Water droplets underneath the dryer.



- Has the heat exchanger been inserted correctly?
- Has any fluff on the heat exchanger seal been wiped away?
- Has any fluff on the door seal been wiped away?
- Has the water container been inserted correctly?

AFTER-SALES SERVICE

If the fault is still present once the above checks have been undertaken or should the fault occur for a second time, switch the machine off. Please contact your after-sales service representative (for more information, refer to the warranty manual).

Please have the following details ready when calling your After-Sales service representative:

- The nature of the fault.
- The dryer type and model.
- The service code (the number after the word Service on the adhesive rating plate) on the right-hand side when the door is open.

SERVICE 0000 000 00000





Before using the machine, please also read the instructions for use carefully!

MKT 5510 C
Art. Nr. 7172.045

Quick Reference Guide

GB

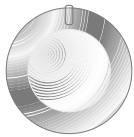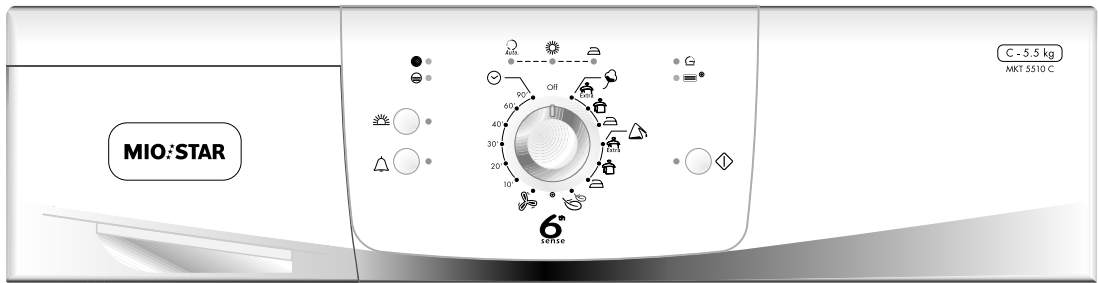

Programme selector knob


The drying programme is selected by turning this knob.





"Start (Pause)" button

The drying programme is started by pressing this button. The indicator lamp flashes during the selection phase and lights up during drying.

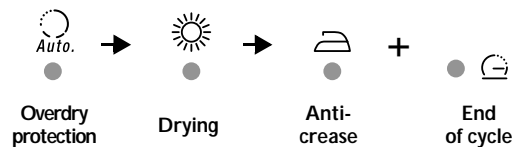Programme sequence



Options

  **Gentle**
Reduces drying intensity (recommended for delicate items).

Indicator lamps



Filter

The indicator lamp lights up when the filter and/or heat exchanger need cleaning.
Clean the filter at the end of every cycle.



Water container

The indicator lamp lights up when the water container needs to be emptied. The drying cycle is automatically interrupted. Empty the container and restart the drying programme.
Empty the water container after every drying cycle.



Clean heat exchanger

The Led lights up after 30 cycles when the heat exchanger needs to be cleaned. Clean the heat exchanger. Then for reset the led indication, turn the programme selector knob to the vertical position indicated by the symbol "☉" and press the "Start (Pause)" button during 3 seconds until led switches off.



Overdry protection

The indicator lamp lights up when a humidity controlled program is selected, to indicate the working protection function. Function is not active in time controlled programmes 10', 20', 30', 40', 60', 90' and "Airing" "☼".




Buzzer

Signals/sounds end of drying cycle.

CONTENTS

QUICK REFERENCE GUIDE

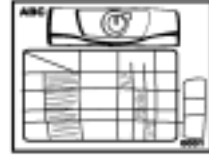

PROGRAMME CHART

PREPARING THE LAUNDRY

SELECTING A PROGRAMME AND OPTIONS


STARTING AND COMPLETING A PROGRAMME

CHANGING A PROGRAMME

INTERRUPTING A PROGRAMME

DAILY MAINTENANCE AND CLEANING

INSTRUCTIONS FOR USE

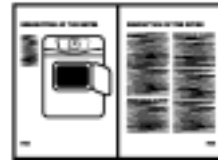

BOOKLET

SAFETY ADVICES BEFORE USING THE
DRYER / CONNECTIONS

PAGE 31

ELECTRICAL CONNECTION

PAGE 32

SAFETY ADVICES AND GENERAL
RECOMMENDATIONS

PAGE 33

DESCRIPTION OF THE DRYER

PAGE 34

REMINDER - MAINTENANCE AND CLEANING

PAGE 34

DRAINAGE SYSTEM

PAGE 35

DOOR REVERSIBILITY / CHILD SAFETY LOCK

PAGE 36

HEAT EXCHANGER

PAGE 37

TROUBLESHOOTING GUIDE /
AFTER-SALES SERVICE

PAGE 38

SERVICE INFORMATION

PAGE 39

SAFETY ADVICES BEFORE USING THE DRYER / CONNECTIONS

1. Removing the packaging and check

- After unpacking, make sure that the dryer is undamaged. If in doubt, do not use the dryer. Contact After-Sales Service or your local retailer.
- If the appliance was exposed to the cold prior to delivery, keep it at room temperature for a few hours before operating.
- Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous.
- Remove the protective foil from the control panel.

2. Electrical Connections

- Electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions and current standard safety regulations.
- Electrical connection must comply with local Electricity Board regulations.
- Voltage information, power consumption and the required fuse protection is shown on the rating plate mounted at the rear of the dryer.
- The manufacturer cannot accept any liability for personal injury or damage to property resulting from failure to adhere to these instructions.
- The dryer must be earthed as prescribed by law.
- Do not use extension leads or multiple adaptors.
- Before any maintenance on the dryer disconnect it from the mains supply.
- Do not operate the dryer if it has been damaged during transport. Contact one of our After-Sales Service technicians.
- Mains cable replacement is only to be carried out by After-Sales Service.
- After installation access to the mains plug has to be guaranteed, or the all-pole disconnection has to be possible with a switch.

3. Installation

- Do not install your dryer where it can be subject to extreme conditions, such as: poor ventilation, temperatures below 5°C or above 35°C.
- Before running the first cycle ensure the water container and heat exchanger are correctly positioned.
- Only for water container top version: if possible use a hose to drain the water directly into the domestic plumbing system. This will avoid having to empty the water container at the end of each drying cycle since the condensation water can be directly drained away. See also chapter "Drainage System".
- Take care not to install the dryer on a deep-pile carpet.
- Take care not to trap the mains cable between the dryer and the wall.

Stability:

When installing the dryer always carefully level the dryer adjusting the four feet and check the correct levelling with a spirit level.

To built in the dryer

Remove the work-top and replace it with the Built-In kit (according to Eec Electrical Regulations), available at your dealer. As prescribed by law, only a qualified technician has to do the installation.

Stacking kit

Depending on the model, your dryer can be stacked on top of your front loading washing machine. Please contact your dealer or our After-Sales Service.

Minimum housing dimensions:

Width: 600 mm
Height: 855 mm
Depth: 600 mm



ELECTRICAL CONNECTION

1) For Great Britain only

Warning - this appliance must be earthed

Fuse replacement

If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:


1. Remove the fuse cover (A) and fuse (B).
2. Fit replacement 13A fuse into fuse cover.
3. Refit both into plug.

Important:

The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted.

Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug.

Replacement fuse covers are available from your local electrical store.

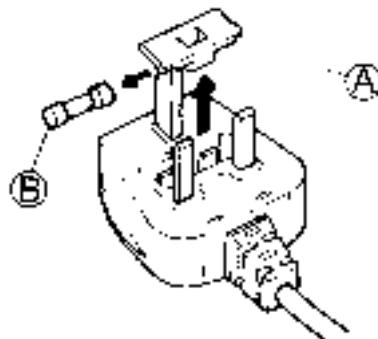

2) For the Republic of Ireland only

The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type.


3) Socket outlet / plug (valid for both countries)

If the fitted plug is not suitable for your socket outlet, please contact Whirlpool Service for further instruction. Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified Whirlpool technician in compliance with the manufactures instructions and current standard safety regulations.

SAFETY ADVICES AND GENERAL RECOMMENDATIONS

1. Packing



The packing box may be fully recycled as confirmed by the recycling symbol .

2. Energy saving tips

- Always dry a full load: depending on the type of laundry and the programme/drying time.
- By preference use the maximum spin speed allowed by your washing machine, since draining the water mechanically requires less energy. You will save time and energy when running your drying cycle.
- Do not overdry the laundry.
- Clean the lint filter after **every** drying cycle.
- Place your dryer in a room with a temperature between 15° C and 20° C. In case of higher temperature ventilate the room.
- Always select the correct programme/drying time for the load in order to obtain the desired drying results.
- Select the *gentle* option only with small loads.
- When drying cotton, for example, dry *iron dry* and *cupboard dry* loads together. Start with the *iron dry* programme/drying time setting, remove the laundry to be ironed at the end of that cycle and dry the remainder of the load on the *cupboard dry* setting.

3. Disposing of packaging and old Dryer:

The dryer is built from reusable materials. The dryer must be disposed of in compliance with local waste disposal regulations.

- Before scrapping, cut off the power cable so that the dryer cannot be connected to the mains.

4. Child safety:

Children must not be allowed to play with the dryer.

5. General recommendations:

- Always set the programme/time selector knob to the "0" position after use. This prevents the dryer from being switched on accidentally.
- Before cleaning or carrying out maintenance, switch off the dryer and disconnect it from the mains supply.
- To clean the outside of the dryer, use a neutral detergent and a damp cloth.
- Do not use abrasive detergents.
- Do not use inflammable cleansing agents.
- Do not use the tumble dryer if chemicals have been used for cleaning.
- Garments treated or contaminated with flammable cleaning sprays or liquids such as petrol, cooking oil or aerosol sprays must not be put in this dryer.
- Lighters must not be left in pockets.
- Never use and store flammable materials nearby the dryer.

- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Wipe away lint from the door seal and the door using a damp cloth.
- If the lint filter mesh is clogged, clean it with water and a soft brush.
- Since lint can go through the filter it is necessary to clean, from time to time, the complete filter area (including below the filter) with a brush, a damp cloth or with a vacuum cleaner.
- If necessary, the power cable may be replaced with an identical one obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician.
-  Attention rear panel can be hot.

EC Declaration of Conformity


- This dryer has been designed, constructed and distributed in compliance with the safety requirements of EC Directives:
 - 2006/95/EG Low Voltage Directive
 - 89/336/EEC EMC Directive



This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.




The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

- The dryer must be used in the household for the described uses.

DESCRIPTION OF THE DRYER

- A. Work top.
- B1. Water Container bottom version or
- B2. Water Container top version.
- C. Contact pin.
- D. Door:
To open the door: pull the handle.
To close the door: push gently until closed.
- E. Filter.
- F. Child Safety Lock.
- G. Button for heat exchanger flap opening.
- H. Heat exchanger.

Note: Depending on the model, the opening of the flap can be horizontal or vertical. This doesn't change the functioning of the flap.

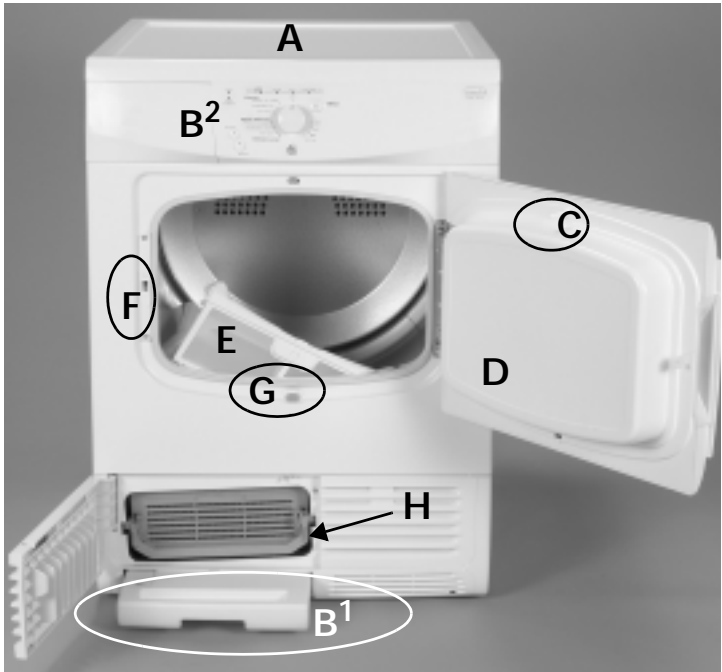

REMINDER - MAINTENANCE AND CLEANING


EACH DRYING CYCLE

- **Clean the lint filter at the end of every drying cycle.**
Open the door.
Pull the filter upwards.
Open the filter.
Remove lint using a soft brush or your fingertips.
Close the filter.
Push the filter back into place.
- **Empty the water container at the end of each drying cycle.**

EACH MONTH

- **Clean the heat exchanger at least every month (see "HEAT EXCHANGER" chapter).**
Wipe away any lint/fluff from the door seal and interior using a damp cloth.

Remove fibres in and around the water evacuation hole (at least once per month).

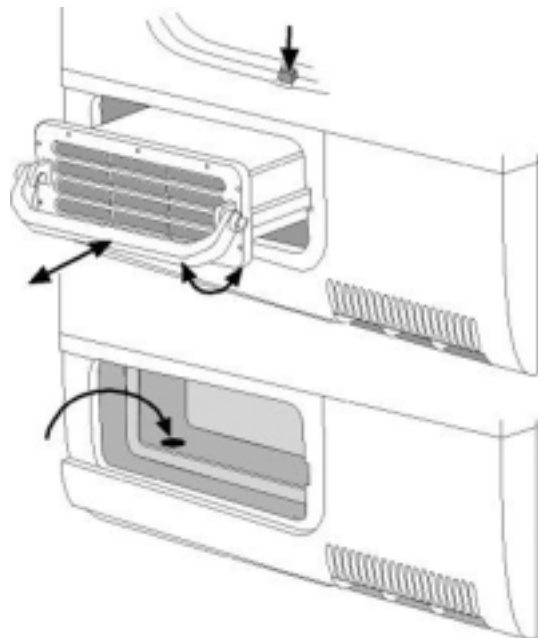

DRAINAGE SYSTEM

For water container top only

To avoid having to empty the water container at the end of each cycle, the condensation water can be drained away.



Note: normally the drain hose is not supplied; the accessory kit, available at your dealer or our After-Sales Service should be used.

Please contact your dealer or our After-Sales Service to get the reference of this accessory, which should be used.

The connection for direct draining is at the rear of the dryer.

- A. Place an absorbent cloth underneath to collect water spillage.
- B. Remove the hose located at the lower rear part of the dryer and insert it in the nearby hole.
- C. Fix the hose (length: 1.5 m) to the outlet connection. The height difference between the two drainage connections should not exceed 1 m.


Notice: To avoid siphoning, the end of the hose must not be immersed in the drain water. Avoid bending and twisting the hose.

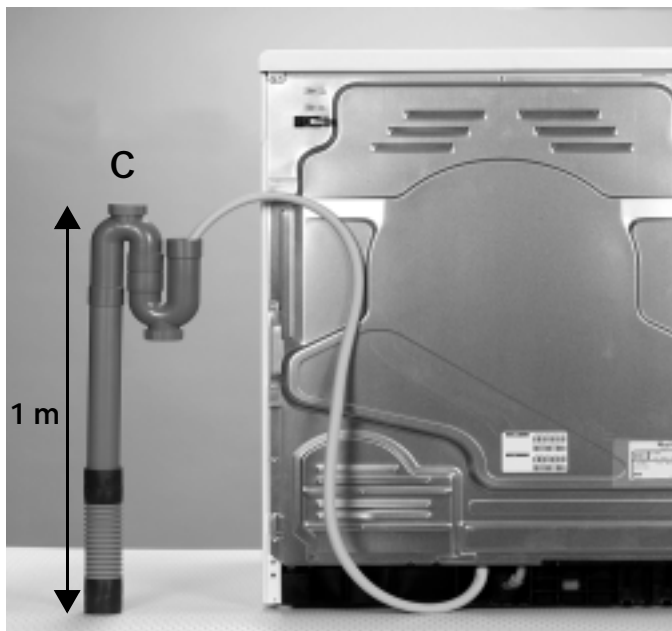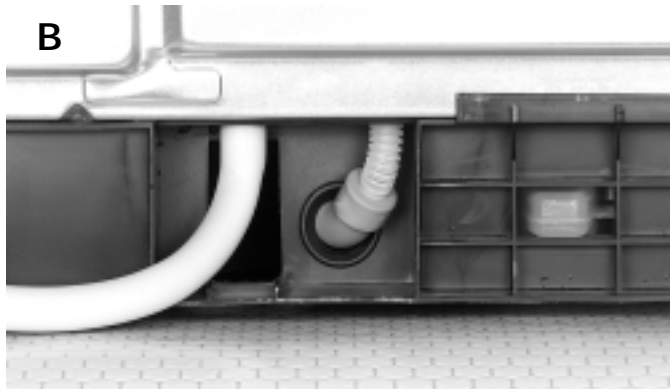

DOOR REVERSIBILITY / CHILD SAFETY LOCK

Door Reversibility

- A. Unplug the dryer.
- B. Open the door.
- C. Using a spanner, turn the contact pin in the upper part of the door by 90° and remove it.
- D. Unscrew the 2 screws of the door hinge and remove the door.
- E. Removing the door lock:
Unscrew the 2 screws above and below the door lock system.
Lift the door lock from the bottom, sliding it upwards about 1.5 cm, and remove it.
- F. Reverse the door:
Fasten the door on the desired side with the 2 screws.
Take care to screw in horizontal position to avoid pinching of the seal.
- G. Insert the door lock system on the opposite side of the hinge fixation and push it down 1.5 cm.
- H. Fix the 2 screws above and below the door lock system.
- I. Take care not to reverse the sense of the door lock system.
The child safety must be above the locking mechanism.
- J. Replace the contact pin in the inside of the door (top).

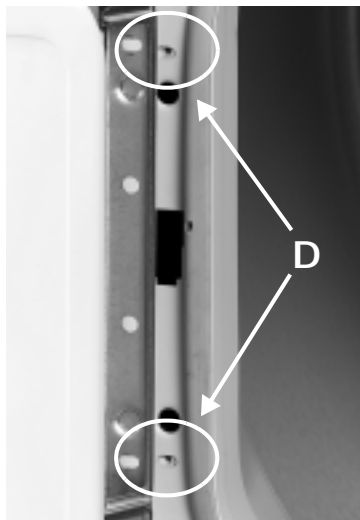

Child Safety Lock

How to use the child safety lock

1. Open the door.
2. Using a coin or a screwdriver, turn the plastic screw (I) clockwise 90°.
Slot vertical: the door cannot be locked.
Slot horizontal: the door can be locked.

HEAT EXCHANGER




Before cleaning or carrying out maintenance, switch off the dryer.

Clean the heat exchanger at least every month, proceeding as follows:

- A. Open the door and press the heat exchanger flap button on the bottom of the door entrance.
- B. The heat exchanger flap opens.
- C. Fold the heat exchanger handle upwards to the horizontal position and remove the heat exchanger.
- D. Clean the heat exchanger under running water by turning it around to reach all sides, especially in front and behind.
- E. Wipe away dust and lint from the seals and the heat exchanger plates.
- F. Remove the lint in the heat exchanger housing. Keep the drainage hole (left side in front in the housing) free from lint.
- G. Insert completely the heat exchanger in its housing (TOP or HAUT mark upwards) keeping the handle in horizontal position, and then push down the handle.
- H. Close the flap.

The heat exchanger aluminium plates may become discoloured over time.

Note: Depending on the model, the opening of the flap can be horizontal or vertical. This doesn't change the functioning of the flap.

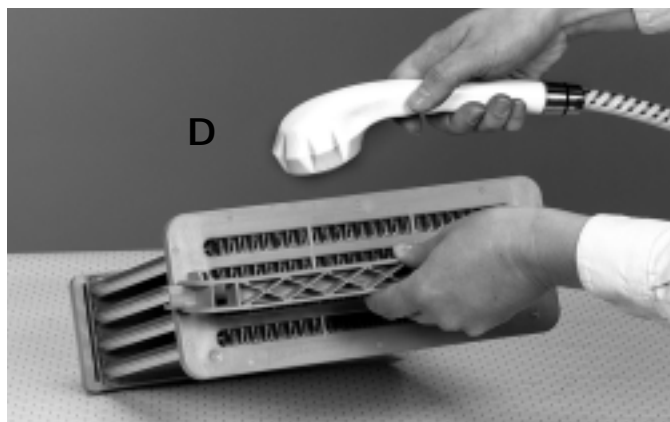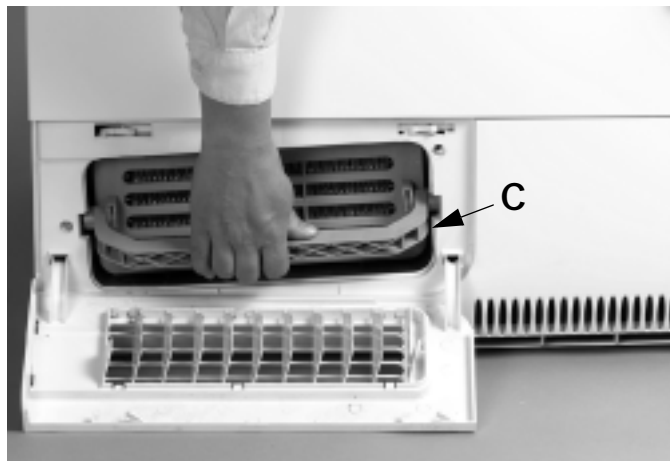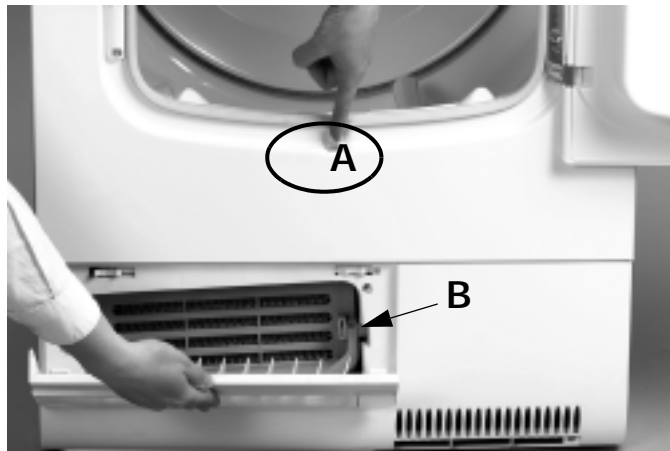

TROUBLESHOOTING GUIDE / AFTER-SALES SERVICE

Troubleshooting Guide

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem:

Drying takes too long / laundry is not dry enough:

- Was the correct programme selected?
- Was the inserted laundry too wet (Washing machine spin speed less than 800 rpm? When the spinning speed is less than 800 rpm the water container fault may occur during the drying cycle)?
- Is the lint filter dirty (filter indicator lamp on)?
- Is the heat exchanger dirty? (refer to the Instructions for use)
- Is the ambient temperature too high?
- Are the END and Anti-crease indicator lamps lighting up? The drying cycle is complete and the laundry can be taken out.
- Is the gentle option selected ?

The dryer does not operate:

(after a power failure and/or interruption to the mains supply, always press the Start/Pause button).

- Is the plug properly inserted into the mains electricity socket?
- Is there a power failure?
- Has the fuse blown?
- Is the door properly closed?
- Has the programme been selected?
- Has the start delay option been selected?
- Has the **Start/Pause** button been pressed?

Lint filter, water container or heat exchanger indicator lamp on:

- Is the lint filter clean?
- Is the water container empty?
- Is the water container correctly positioned?
- Is the heat exchanger clean and the reset operation done?

Water droplets underneath the dryer:

- Is the heat exchanger correctly positioned?
- Has any fluff on the heat exchanger seal been wiped away?
- Has any fluff on the door seal been wiped away?
- Has the water container been positioned correctly?
- Is the dryer levelled?

After-Sales Service

If, after carrying out the above checks the malfunction persists or appears again, turn the dryer off and call our After-Sales Service (refer to guarantee).

Please specify:

- The nature of the fault.
- The dryer type and model.
- The service code (the number after the word Service on the adhesive rating plate) on the right-hand side when the door is open.
- Your full address and phone number.

SERVICE 0000 000 00000



SERVICE INFORMATION



2 year warranty

This MIGROS warranty covers efficient operation of the appliance, guaranteeing it against any defects for two years from the date of purchase.

In the event any defects are found, MIGROS may choose to repair the appliance free of charge, replace it with another of equivalent value or refund the original purchase price. No other claims will be considered.

This warranty does not cover damage or malfunction attributable to normal wear and tear or improper use, damage occasioned by the owner or third parties or deriving from external causes.

The warranty obligation is limited to MIGROS after-sales service and authorized service centres only.

Keep the warranty certificate or proof of purchase (receipt, invoice). Failure to produce proof of purchase when requested will void the warranty.



5 year service warranty

MIGROS guarantees after-sales service for five years. Appliances which require maintenance service or repair can be taken to any point of sale.



M-INFOLINE
0848 84 0848
www.migros.ch

Any other queries? Please contact the M-Infoline, which will be happy to provide any further information required:

0848 84 0848 from Monday to Friday,
8am to 6.30pm

(8 cent./min from 8am to 5 pm;

4 cent./min from 5pm to 6.30pm).

E-mail: m-infoline@mgb.ch