 
 
 
 


 

 
 

 
 





 

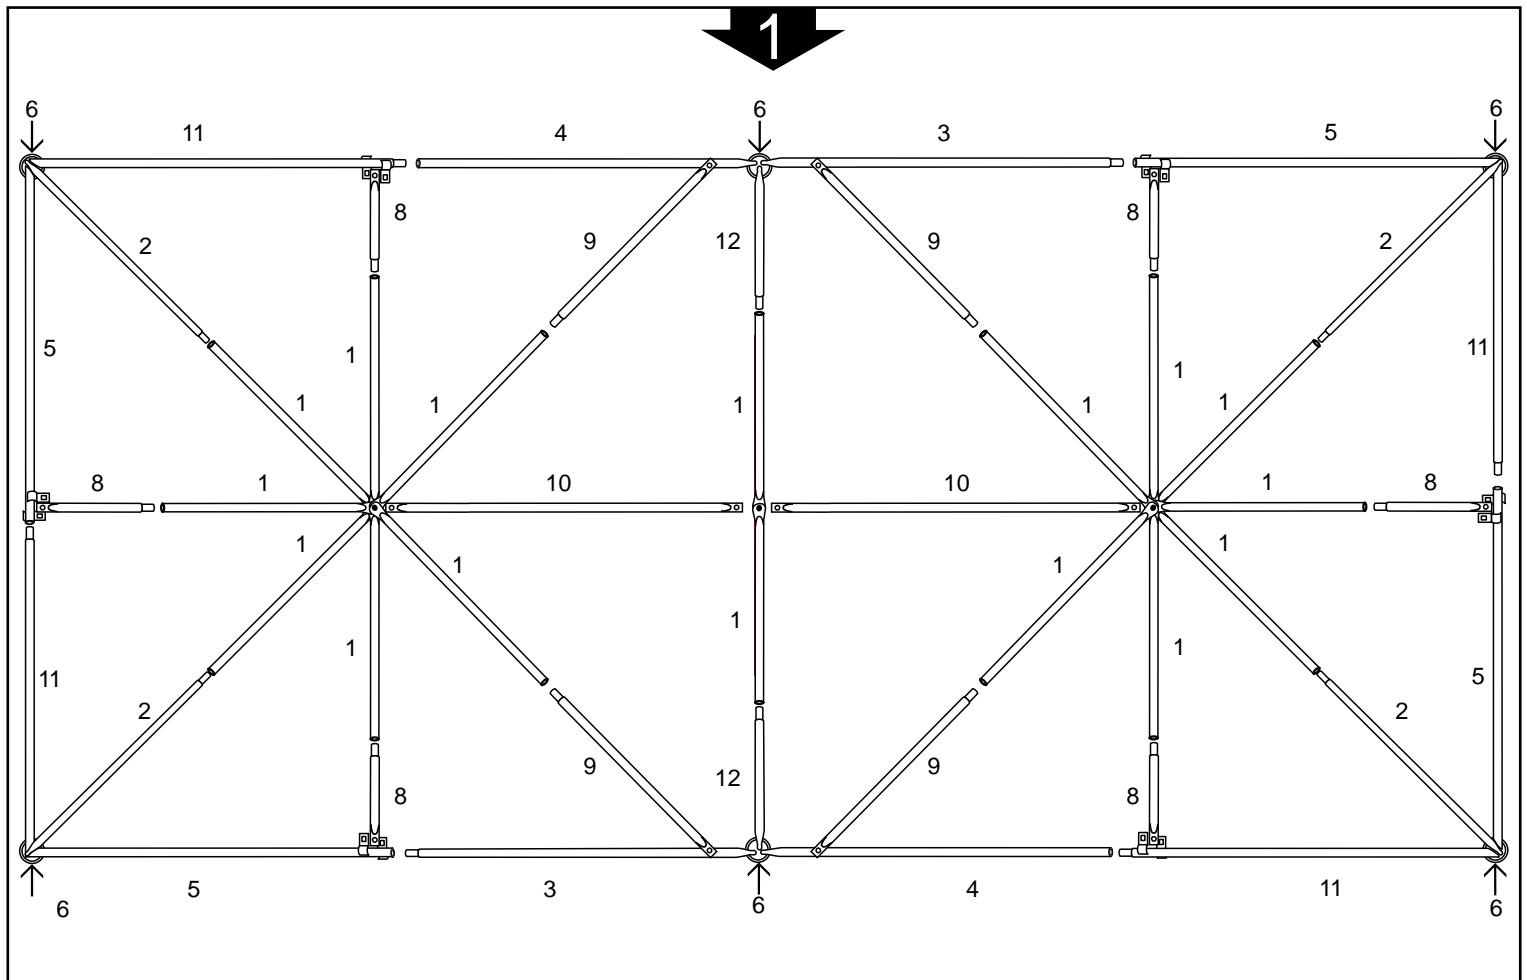


Nummer/Numéro/Numero	Stück/pcs/pezzi
1 	16
2 	4
3 	2
4 	2
5 	4
6 	6
7 	6
8 	6
9 	4
10 	2
11 	4
12 	2
13 	6
14 	12
15 	4
16 	6
17 	4
18 	3
19 	12
20 	
21 Seitenwände/Parois laterales/Tende laterali	6
22 Dach/Toit/Tetto	1


# MONTAGEANLEITUNG INSTRUCTIONS D'ASSEMBLAGE ISTRUZIONI DI MONTAGGIO



3 x 6 m PARTYZELT Art. 7532.220  
TENTE PARTY 3 x 6 m  
TENDA PARTY 3 x 6 m



2

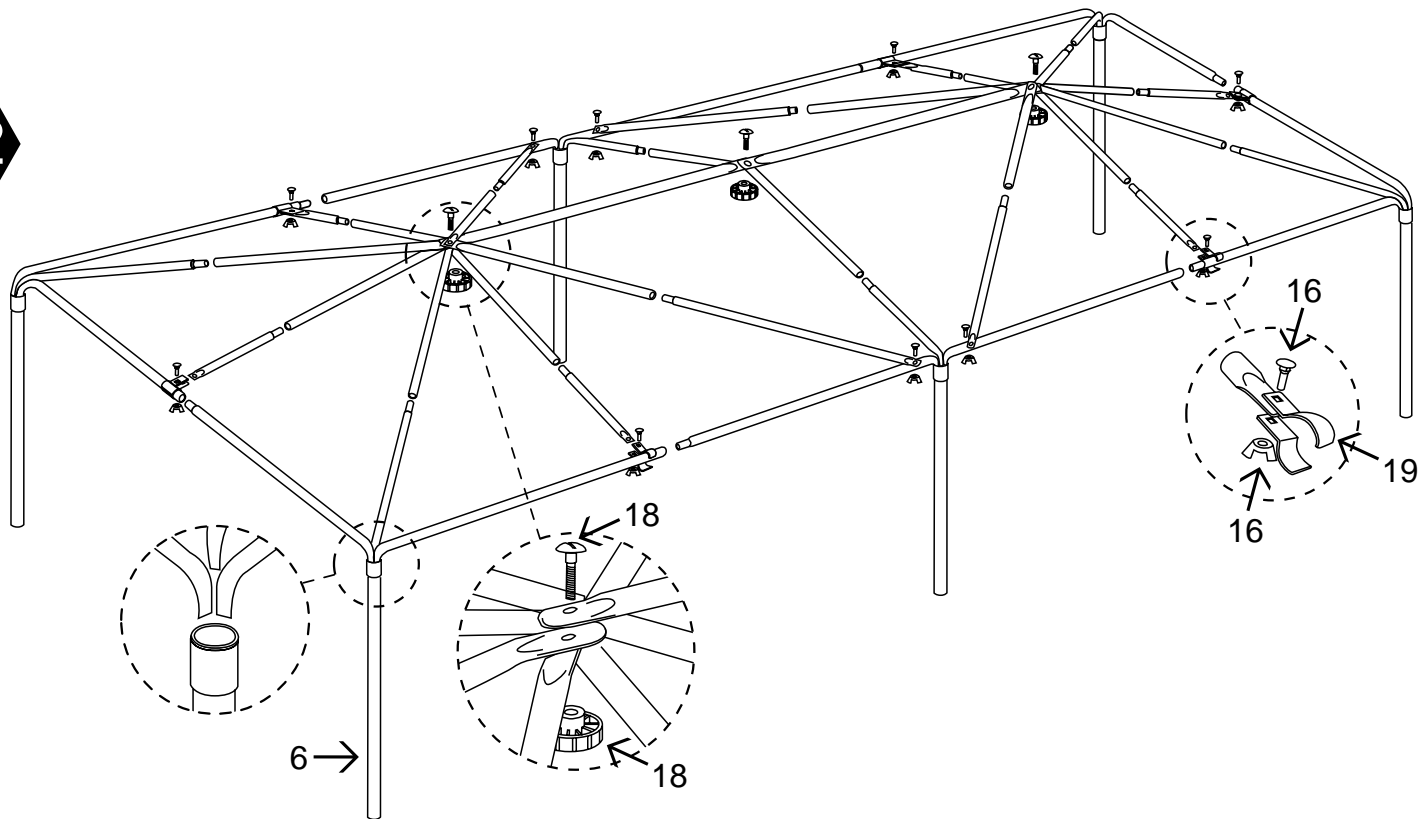

3

