

# Panasonic®

Model No.

**TX-L32ET5E**

**TX-L42ET5E**

**TX-L32ET5EW**

**TX-L42ET5EW**

**TX-L37ET5E**

**TX-L47ET5E**

**TX-L37ET5EW**

**TX-L55ET5E**

## Operating Instructions LCD Television



# VIERA

Thank you for purchasing this Panasonic product.

Please read these instructions carefully before operating this product and retain them for future reference.

The images shown in this manual are for illustrative purposes only.

Please refer to Pan European Guarantee Card if you need to contact your local Panasonic dealer for assistance.

English



TQB0E2276U-1



### Notice for DVB / Data broadcasting / IPTV functions

- This TV is designed to meet the standards (as of August, 2011) of DVB-T (MPEG2 and MPEG4-AVC(H.264)) digital terrestrial services and DVB-C (MPEG2 and MPEG4-AVC(H.264)) digital cable services. Consult your local dealer for availability of DVB-T services in your area. Consult your cable service provider for availability of DVB-C services with this TV.
- This TV may not work correctly with the signal which does not meet the standards of DVB-T or DVB-C.
- Not all the features are available depending on the country, area, broadcaster, service provider and network environment.
- Not all CI modules work properly with this TV. Consult your service provider about the available CI module.
- This TV may not work correctly with CI module that is not approved by the service provider.
- Additional fees may be charged depending on the service provider.
- The compatibility with future services is not guaranteed.
- Check the latest information on the available services at the following website. (English only)  
<http://panasonic.jp/support/global/cs/tv/>

Transport only in upright position

Panasonic does not guarantee operation and performance of peripheral devices made by other manufacturers; and we disclaim any liability or damage arising from operation and/or performance from usage of such other maker's peripheral devices.

This product is licensed under the AVC patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard ("AVC Video") and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

Rovi Corporation and/or its subsidiaries and related affiliates are not in any way liable for the accuracy or availability of the program schedule information or other data in the GUIDE Plus+/Rovi Guide system and cannot guarantee service availability in your area. In no event shall Rovi Corporation and/or its related affiliates be liable for any damages in connection with the accuracy or availability of the program schedule information or other data in the GUIDE Plus+/Rovi Guide system.

# Contents

## Be Sure to Read

Safety Precautions ..... 4

## Quick Start Guide

Accessories / Options ..... 6  
Identifying Controls ..... 9  
Basic Connection ..... 11  
Auto Setup ..... 14

## Enjoy your TV!

### Basic

Using "VIERA Connect" ..... 18  
Watching TV ..... 19  
Using TV Guide ..... 23  
Viewing Teletext ..... 26  
Watching External Inputs ..... 28  
Viewing 3D images ..... 30  
How to Use VIERA TOOLS ..... 34  
How to Use Menu Functions ..... 35

### Advanced

Retuning from Setup Menu ..... 44  
Tuning and Editing Channels ..... 46  
Timer Programming ..... 50  
Child Lock ..... 53  
Using Data Service Application ..... 54  
Using Common Interface ..... 55  
Shipping Condition ..... 56  
Updating the TV Software ..... 57  
Displaying PC Screen on TV ..... 58  
Advanced Picture Settings ..... 59  
Using Media Player ..... 60  
Using Network Services (DLNA / VIERA Connect) ..... 69  
Link Functions (Q-Link / VIERA Link) ..... 79  
External Equipment ..... 87

### Others

Technical Information ..... 89  
FAQs ..... 97  
Maintenance ..... 100  
Licence ..... 100  
Specifications ..... 102

 
# Safety Precautions

## Warning

### Handling the mains plug and lead

- Insert the mains plug fully into the socket outlet. (If the mains plug is loose, it could generate heat and cause fire.)
- Ensure that the mains plug is easily accessible.
- Do not touch the mains plug with a wet hand. This may cause electrical shock.
- Do not use any mains lead other than that provided with this TV. This may cause fire or electrical shock.
- Do not damage the mains lead, damaged lead may cause fire or electrical shock.
  - Do not move the TV with the lead plugged into a socket outlet.
  - Do not place a heavy object on the lead or place the lead near a high temperature object.
  - Do not twist the lead, bend it excessively or stretch it.
  - Do not pull on the lead. Hold onto the mains plug body when disconnecting the plug.
- Do not use a damaged mains plug or socket outlet.
- Ensure the TV does not crush the mains lead.

If you find any abnormality, remove the mains plug immediately!



AC 220-240 V  
50 / 60 Hz



### Power source / Installation

- This TV is designed for:
  - AC 220-240 V, 50 / 60 Hz
  - Table-top use

### Do not remove covers and NEVER modify the TV yourself

- High voltage components may cause serious electrical shock, do not remove the rear cover as live parts are accessible when it is removed.
- There are no user serviceable parts inside.
- Have the TV checked, adjusted or repaired at your local Panasonic dealer.

### Do not expose the TV to direct sunlight and other sources of heat

- Avoid exposing the TV to direct sunlight and other sources of heat.



To prevent the spread of fire, keep candles or other open flames away from this product at all times

### Do not expose to rain or excessive moisture

- To prevent damage which might result in electric shock or fire, do not expose this TV to rain or excessive moisture.
- This TV must not be exposed to dripping or splashing water and objects filled with liquid, such as vases, must not be placed on top of or above the TV.

### Do not place foreign objects inside the TV

- Do not allow any objects to drop into the TV through the air vents as fire or electric shock may result.

### Do not place the TV on sloped or unstable surfaces, and ensure that the TV does not hang over the edge of the base

- The TV may fall or tip over.

### Use only original dedicated pedestal / mounting equipment

- Using an unapproved pedestal or other fixtures may make the TV unstable, risking injury. Be sure to ask your local Panasonic dealer to perform the setup or installation.
- Use approved pedestals (p. 7) / wall-hanging brackets (p. 6).

### Do not allow children to handle SD Card or dangerous parts

- As with any small object, the SD Card could be swallowed by young children. Please remove SD Card immediately after use and store out of reach of children.
- This product contains possibly dangerous parts that can be breathed in or swallowed by young children accidentally. Keep these parts out of reach of young children.

### Radio waves

- Do not use the TV in any medical institutions or locations with medical equipment. Radio waves from the TV may interfere with the medical equipment and cause accidents due to the malfunction.
- Do not use the TV near any automatic control equipment such as automatic doors or fire alarms. Radio waves from the TV may interfere with the automatic control equipment and cause accidents due to the malfunction.
- Keep the distance at least 22 cm from the built-in wireless LAN part when you have a cardiac pacemaker. Radio waves from the part may interfere with the operation of the pacemaker.
- Do not disassemble or alter the built-in wireless LAN in any way.

### Caution

#### When cleaning the TV, remove the mains plug

- Cleaning an energised TV may cause electric shock.

#### Remove the mains plug from the wall socket when the TV is not in use for a prolonged period of time

- This TV will still consume some power even in the Off mode, as long as the mains plug is still connected.

#### Do not expose your ears to excessive volume from the headphones

- Irreversible damage can be caused.

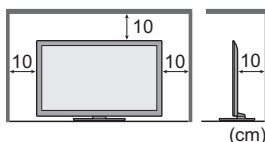
#### Do not apply strong force or impact to the display panel

- This may cause damage resulting in injury.

#### Do not block the rear air vents

- Adequate ventilation is essential to prevent failure of electronic components.
- Ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table cloths and curtains.
- We recommend that a gap of at least 10 cm is left all around this TV even when placed inside a cabinet or between shelves.
- When using the pedestal, keep the space between the bottom of the TV and the surface where the TV is set.
- If pedestal is not used, ensure the vents in the bottom of the TV are not blocked.

Minimum distance



#### Built-in wireless LAN

- To use the built-in wireless LAN, an access point needs to be obtained.
- Do not use the built-in wireless LAN to connect to any wireless network (SSID\*) for which you do not have usage rights. Such networks may be listed as a result of searches. However, using them may be regarded as illegal access. \*SSID is a name for identifying a particular wireless network for transmission.
- Do not subject the built-in wireless LAN to high temperatures, direct sunlight or moisture.
- Data transmitted and received over radio waves may be intercepted and monitored.
- The built-in wireless LAN uses 2.4 GHz and 5 GHz frequency bands. To avoid malfunctions or slow response caused by radio wave interference, keep the TV away from the devices such as other wireless LAN devices, microwaves, mobile phones and the devices that use 2.4 GHz and 5 GHz signals when using the built-in wireless LAN.
- When noises occur due to the static electricity, etc., the TV might stop operating for the protection of the devices. In this case, turn the TV off with Mains power On / Off switch, then turn it on again.
- Additional information for built-in wireless LAN and access point may be on the following website. (English only) <http://panasonic.jp/support/global/cs/tv/>

# Accessories / Options

## Standard accessories

### Remote Control



 
- N2QAYB000752  
(TX-L32ET5E  
TX-L37ET5E  
TX-L42ET5E  
TX-L47ET5E  
TX-L55ET5E)
- N2QAYB000785  
(TX-L32ET5EW  
TX-L37ET5EW  
TX-L42ET5EW)

### Batteries for the Remote Control (2)

- R6  
➔ (p. 7)




### Pedestal ➔ (p. 7)



### Clamper ➔ (p. 13)


 
### Mains lead ➔ (p. 11)



### 3D Eyewear (4) ➔ (p. 30)



### Terminal adaptors

- AV1 (SCART) adaptor  
➔ (p. 12)



- AV2 (COMPONENT / VIDEO) adaptor  
➔ (p. 87, 88)



### Operating Instructions

### Pan European Guarantee Card

- Accessories may not be placed all together. Take care not to throw them away unintentionally.
- This product contains possibly dangerous parts (such as plastic bags), that can be breathed in or swallowed by young children accidentally. Keep these parts out of reach of young children.

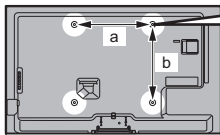
## Optional accessories

Please contact your local Panasonic dealer to purchase the recommended optional accessories. For additional details, please read the manual of the optional accessories.


### Wall-hanging bracket

Please contact your local Panasonic dealer to purchase the recommended wall-hanging bracket.

- Holes for wall-hanging bracket installation



Rear of the TV

 

**Depth of screw:**  
minimum 10 mm  
maximum 14 mm  
**Diameter: M6**

Screw for fixing the TV onto the wall-hanging bracket  
(not supplied with the TV)

(View from the side)

- TX-L32ET5E / TX-L32ET5EW /  
TX-L37ET5E / TX-L37ET5EW  
**a: 200 mm**  
**b: 200 mm**

- TX-L42ET5E / TX-L42ET5EW /  
TX-L47ET5E / TX-L55ET5E  
**a: 400 mm**  
**b: 400 mm**

### Warning

- Failure to use a Panasonic bracket or choosing to mount the unit yourself will be done at the risk of the consumer. Always be sure to ask a qualified technician to carry out set up. Incorrect fitting may cause equipment to fall, resulting in injury and product damage. Any damage resulting from not having a professional installer mount your unit will void your warranty.
- When any optional accessories or wall hanging brackets are used, always ensure that the instructions provided are followed fully.
- Do not mount the unit directly below ceiling lights (such as spotlights or halogen lights) which typically give off high heat. Doing so may warp or damage plastic cabinet parts.
- Take care when fixing wall brackets to the wall. Wall mounted equipment shall not be grounded by metal within the wall. Always ensure that there are no electrical cables or pipes in the wall before hanging bracket.
- To prevent fall and injury, remove the TV from its fixed wall position when it is no longer in use.

### 3D Eyewear

- TY-EP3D10EB  
(1 pack includes 2 eyewears)



- If you need 3D Eyewears additionally, please purchase this optional accessory.
- Use Panasonic 3D Eyewear for passive 3D.
- For more information (English only):  
<http://panasonic.net/avc/viera/3d/eu.html>

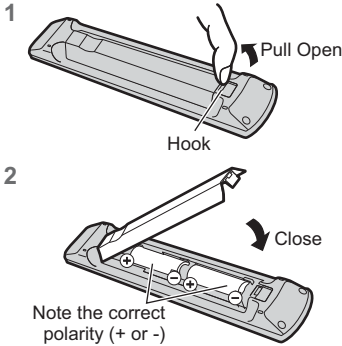
### Communication Camera

- TY-CC20W



- This camera can be used on VIERA Connect (p. 18, 78).
- Depending on the area, this optional accessory may not be available.  
For details, consult your local Panasonic dealer.

## Installing / removing remote's batteries



### Caution

- Incorrect installation may cause battery leakage and corrosion, resulting in damage to the remote control.
- Do not mix old and new batteries.
- Replace only with same or equivalent type. Do not mix different battery types (such as alkaline and manganese batteries).
- Do not use rechargeable (Ni-Cd) batteries.
- Do not burn or break up batteries.
- Do not expose batteries to excessive heat such as sunshine, fire or the like.
- Make sure you dispose of batteries correctly.
- Ensure batteries are replaced correctly, there is danger of explosion and fire if battery is reversed.
- Do not disassemble or modify the remote control.

## Attaching / removing the pedestal

### Warning

**Do not disassemble or modify the pedestal.**

- Otherwise the TV may fall over and become damaged, and personal injury may result.

### Caution

**Do not use any pedestal other than the one provided with this TV.**

- Otherwise the TV may fall over and become damaged, and personal injury may result.

**Do not use the pedestal if it becomes warped or physically damaged.**

- If you use the pedestal while it is physically damaged, personal injury may result. Contact your local Panasonic dealer immediately.

**During set-up, make sure that all screws are securely tightened.**

- If insufficient care is taken to ensure screws are properly tightened during assembly, the pedestal will not be strong enough to support the TV, and it might fall over and become damaged, and personal injury may result.

**Ensure that the TV does not fall over.**

- If the TV is knocked or children climb onto the pedestal with the TV installed, the TV may fall over and personal injury may result.

**Two or more people are required to install and remove the TV.**

- If two or more people are not present, the TV may be dropped, and personal injury may result.

**When removing the pedestal from the TV, do not remove the pedestal by the methods other than the specified procedure. ➔ (p. 8)**

- Otherwise the TV and / or pedestal may fall over and become damaged, and personal injury may result.

**(A) Assembly screw (4)**

 
M5 × 15

**(B) Assembly screw (4)**


M4 × 25

**(C) Bracket**

- TBL5ZA32911 (TX-L32ET5E)
- TBL5ZA32912 (TX-L32ET5EW)
- TBL5ZA32831 (TX-L37ET5E)
- TBL5ZA32832 (TX-L37ET5EW)
- TBL5ZA32922 (TX-L42ET5EW)
- TBL5ZA32921 (TX-L42ET5E)
- TX-L47ET5E
- TX-L47ET5E
- TX-L55ET5E


**(D) Base**

 - TBL5ZX03551 (TX-L32ET5E)
- TBL5ZX03553 (TX-L32ET5EW)
- TBL5ZX03541 (TX-L37ET5E)
- TBL5ZX03543 (TX-L37ET5EW)
- TBL5ZX03531 (TX-L42ET5E)
- TBL5ZX03535 (TX-L42ET5EW)
- TBL5ZX03511 (TX-L47ET5E)
- TBL5ZX03851 (TX-L55ET5E)

**1 Assembling the pedestal**


Use the assembly screws (A) to fasten the bracket (C) to the base (D) securely.

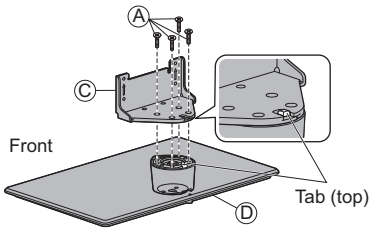- Make sure that the screws are securely tightened.
- Forcing the assembly screws the wrong way will strip the threads.

**2 Securing the TV**

Use the assembly screws (B) to fasten securely.

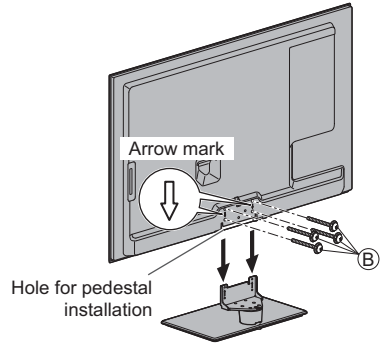- Tighten the four assembly screws loosely at first, then tighten them firmly to fix securely.
- Carry out the work on a horizontal and level surface.


**Removing the pedestal from the TV**

Be sure to remove the pedestal in the following way when using the wall-hanging bracket or repacking the TV.

- 1 Remove the assembly screws (B) from the TV.
- 2 Pull out the pedestal from the TV.
- 3 Remove the assembly screws (A) from the bracket.


**Adjusting the panel to your desired angle**

 - Do not place any objects within the full rotation range.

**Preventing the TV from falling over**

Using the fall-prevent screw hole and a screw (commercially available), securely fix the body of the pedestal to the installation surface.

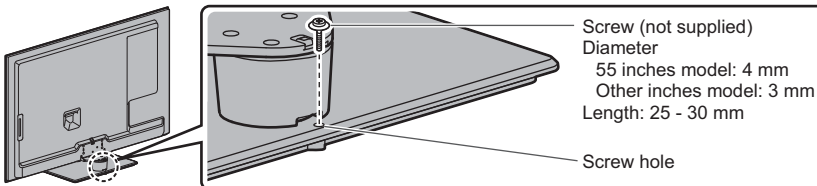
- The place where the pedestal is to be fixed should be thick enough and made of hard material.





# Identifying Controls
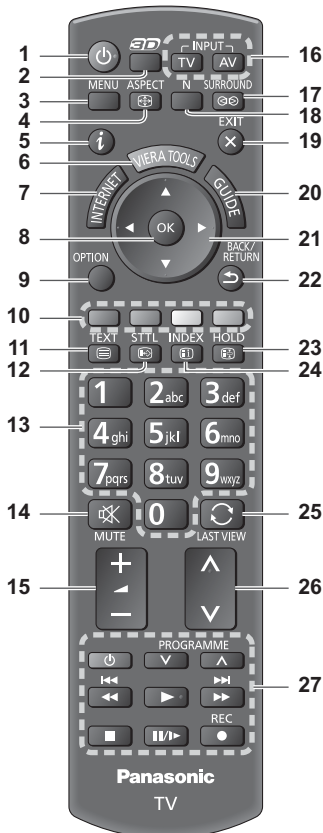
## Remote Control



### 1 Standby On / Off switch

- Switches TV on or off standby.

### 2 3D button → (p. 31)

- Switches the viewing mode between 2D and 3D.

### 3 [Main Menu] → (p. 35)

- Press to access Picture, Sound, Network, Timer and Setup Menus.

### 4 Aspect → (p. 22)

- Changes aspect ratio.

### 5 Information → (p. 20)

- Displays channel and programme information.

### 6 VIERA TOOLS → (p. 34)

- Displays some special feature icons and accesses easily.

### 7 INTERNET ([VIERA Connect]) → (p. 18, 78)

- Displays VIERA Connect home screen.

### 8 OK

- Confirms selections and choices.
- Press after selecting channel positions to quickly change channel.
- Displays the Channel List.

### 9 [Option Menu] → (p. 21)

- Easy optional setting for viewing, sound, etc.

### 10 Coloured buttons (red-green-yellow-blue)

- Used for the selection, navigation and operation of various functions.

### 11 Teletext → (p. 26)

- Switches to teletext mode.

### 12 Subtitles → (p. 20)

- Displays subtitles.

### 13 Numeric buttons

- Changes channel and teletext pages.
- Sets characters.
- When in Standby mode, switches TV on (Press for about 1 second).

### 14 Sound Mute

- Switches sound mute on or off.

### 15 Volume Up / Down

### 16 Input mode selection

- TV - switches DVB-C / DVB-T / Analogue mode. → (p. 19)
- AV - switches to AV input mode from Input Selection list. → (p. 28)

### 17 Surround → (p. 38)

- Switches surround sound setting.

### 18 Normalise → (p. 35)

- Resets picture and sound settings to their default levels.

### 19 Exit

- Returns to the normal viewing screen.

### 20 TV Guide → (p. 23)

### 21 Cursor buttons

- Makes selections and adjustments.

### 22 Return

- Returns to the previous menu / page.

### 23 Hold

- Freezes / unfreezes the picture. → (p. 21)
- Holds the current teletext page (teletext mode). → (p. 26)

### 24 Index → (p. 26)

- Returns to the teletext index page (teletext mode).

### 25 Last view → (p. 22)

- Switches to previously viewed channel or input mode.

### 26 Channel Up / Down

### 27 Operations for contents, connected equipment, etc. → (p. 29, 61, 75)

## Indicator / Control panel

### 1 Function select

- [Volume] / [Contrast] / [Brightness] / [Colour] / [Sharpness] / [Tint] (NTSC signal) / [Bass]\* / [Treble]\* / [Balance] / [Auto Setup] (p. 44, 45) \* [Music] or [Speech] mode in the Sound Menu

2 Channel Up / Down, Value change (when using the F button), Switching the TV on (press either button for about 1 second when in Standby mode)

### 3 Changes the input mode

### 4 Mains power On / Off switch

- Use to switch the mains power.
- If you turned the TV off during Standby mode by the remote control last time, the TV will be in Standby mode when you turn the TV on with Mains power On / Off switch.

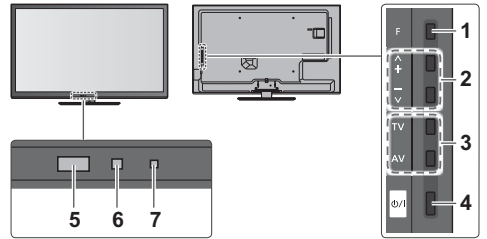
When pressing the control panel button (1 - 4), the control panel guide appears on the right side of the screen for 3 seconds to highlight the pressed button.

### 5 Remote control signal receiver

- Do not place any objects between the TV remote control signal receiver and remote control.

### 6 C.A.T.S. (Contrast Automatic Tracking System) sensor

- Senses brightness to adjust picture quality when [Eco Mode] in the Picture Menu is set to [On].
- ➔ (p. 36)



Rear side of the TV

### 7 Power and Timer LED

**Red:** Standby

**Green:** On

**Orange:** Timer Programming On

**Orange (flash):**

Recording of Timer Programming or Direct TV Recording in progress

**Red with orange flash:**

Standby with Timer Programming On or Direct TV Recording

- The LED blinks when the TV receives a command from the remote control.

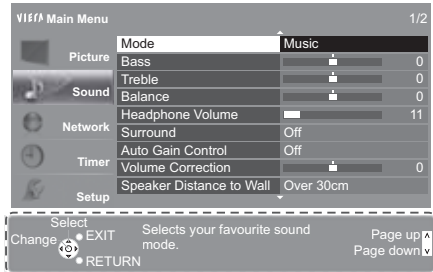
## Using the On Screen Displays - Operation guide

Many features available on this TV can be accessed via the On Screen Display menu.

### ■ Operation guide

Operation guide will help you to operate by using the remote control.

Example: [Sound Menu]



Operation guide

### ■ How to use remote control

MENU



Open the main menu



Move the cursor / select from a range of options / select the menu item (up and down only) / adjust levels (left and right only)



Access the menu / store settings after adjustments have been made or options have been set

BACK/RETURN



Return to the previous menu

EXIT



Exit the menu system and return to the normal viewing screen

## Auto power standby function

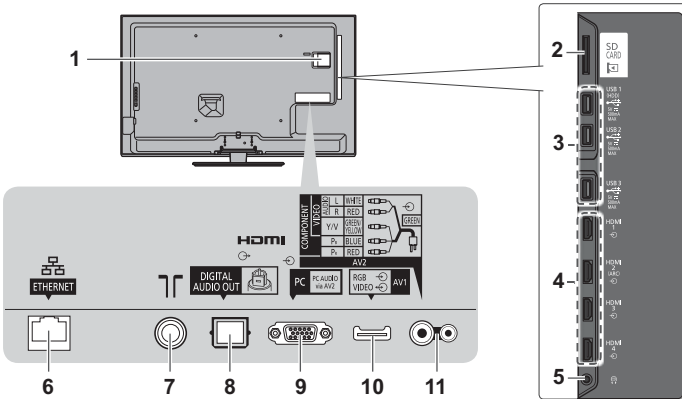
The TV will automatically go into Standby mode in the following conditions:

- No signal is received and no operation is performed for 30 minutes in Analogue TV mode.
- [Off Timer] is active in the Timer Menu. (p. 21)
- No operation is performed for the period selected in [Auto Standby] (p. 40).
- This function does not affect the recording of Timer Programming and Direct TV Recording.

# Basic Connection

External equipment and cables shown are not supplied with this TV.  
Please ensure that the unit is disconnected from the mains socket before attaching or disconnecting any leads.


## Terminals



- 1 CI slot → (p. 55)
- 2 SD Card slot → (p. 60)
- 3 USB 1 - 3 port → (p. 60, 87)
- 4 HDMI 1 - 4 → (p. 12, 87)
- 5 Headphone jack → (p. 88)
- 6 ETHERNET → (p. 13)
- 7 Terrestrial / cable terminal (see below)
- 8 DIGITAL AUDIO OUT → (p. 87)
- 9 PC terminal → (p. 87)
- 10 AV1 (SCART) → (p. 12)
- 11 AV2 (COMPONENT / VIDEO) → (p. 87, 88)

## Connections
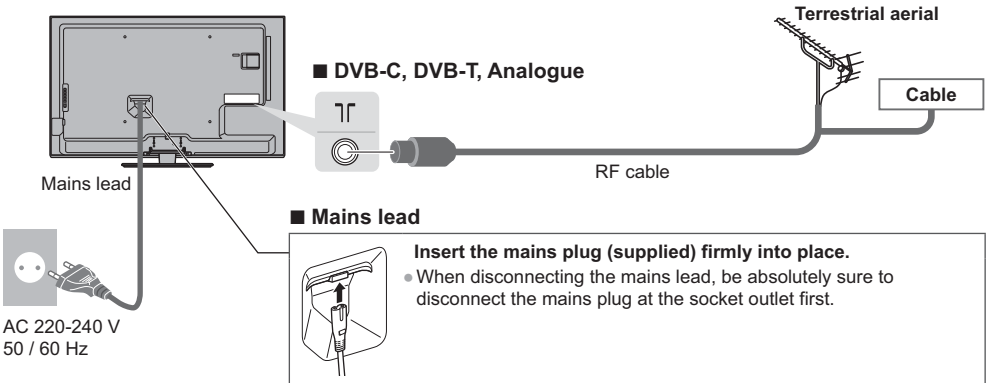
### Mains lead and aerial



## AV devices

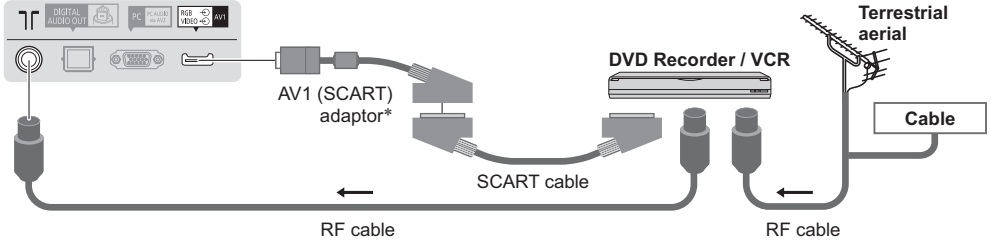
### ■ Player / 3D compatible player

TV




### ■ DVD Recorder / VCR

TV



### ■ DVD Recorder / VCR and Set top box

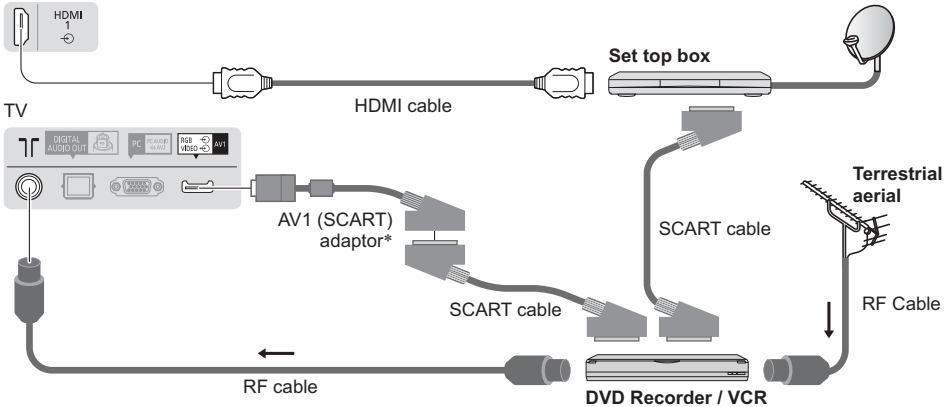TV



\*Supplied with this TV

#### Note

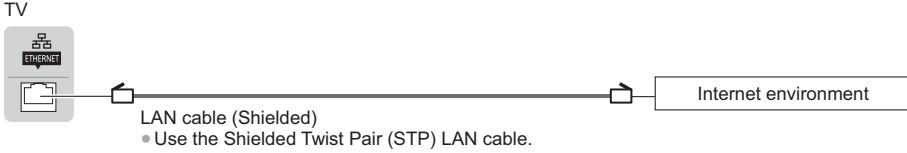
- Connect to the TV's AV1 for a DVD Recorder / VCR supporting Q-Link (p. 81).
- Q-Link and VIERA Link connection → (p. 79, 80)
- Please also read the manual of the equipment being connected.
- Keep the TV away from electronic equipment (video equipment, etc.) or equipment with an infrared sensor. Otherwise, distortion of image / sound may occur or operation of other equipment may be interfered.
- When using a SCART or HDMI cable, use the fully wired one.
- Check the type of terminals and cable plugs are correct when connecting.

## Network


To enable the network service functions (VIERA Connect, etc.), you need to connect the TV to a broadband network environment.

- If you do not have any broadband network services, please consult your retailer for assistance.
- Prepare the internet environment for wired connection or wireless connection.
- Setup of the network connection will start after the tuning (when first using the TV). ➔ (p. 15 - 17)


### ■ Wired connection



### ■ Wireless connection

 

## Using clamper

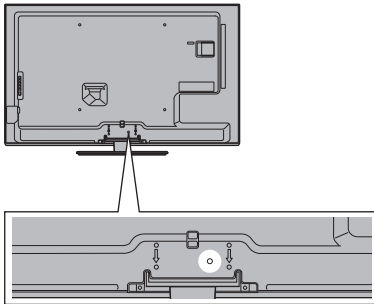

- Do not bundle the RF cable and mains lead together (could cause distorted image).
- Fix cables with clampers as necessary.
- When using the optional accessory, follow the option's assembly manual to fix cables.


### ■ Clamper (Standard accessory)
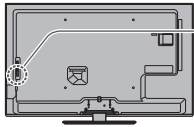
<p><b>Attach the clamper</b></p> <p>Insert the clamper in a hole</p> <p>hole</p>	<p><b>Bundle the cables</b></p> <p>① ② Set the tip in the hooks</p> <p>hooks</p>
<p><b>To remove from the TV:</b></p> <p>① snaps</p> <p>②</p> <p>① Keep pushing both side snaps</p>	<p><b>To loosen:</b></p> <p>②</p> <p>① Keep pushing the knob</p> <p>knob</p>

# Auto Setup

Search and store TV channels automatically.

- These steps are not necessary if the setup has been completed by your local dealer.
- Please complete connections (p. 11 - 13) and settings (if necessary) of the connected equipment before starting Auto Setup. For details of settings for the connected equipment, read the manual of the equipment.




## 1 Plug the TV into mains socket and switch on

- /
- Takes a few seconds to be displayed.
  - If the red LED shows on the TV, press the Standby On / Off switch on the remote control for about 1 second.



## 2 Select the language

 Menüsprache			
Deutsch	Dansk	Polski	Srpski
English	Svenska	čeština	Hrvatski
Français	Norsk	Magyar	Slovenščina
Italiano	Suomi	Slovenčina	Latviešu
Español	Türkçe	Български	eesti keel
Português	Ελληνικά	Română	Lietuvių
Nederlands			



## 3 Select your country

 
Country		
Germany	Denmark	Poland
Austria	Sweden	Czech
France	Norway	Hungary
Italy	Finland	Slovakia
Spain	Luxembourg	Slovenia
Portugal	Belgium	Croatia
Switzerland	Netherlands	Estonia
Malta	Turkey	Lithuania
Andorra	Greece	Others



- Depending on the country you select, select your Region or store the Child Lock-PIN number ("0000" cannot be stored) by following the on-screen instructions.

## 4 Select the mode to tune

TV Signal Selection	
<input type="checkbox"/>	DVB-C
<input checked="" type="checkbox"/>	DVB-T
<input type="checkbox"/>	Analogue
Start Auto Setup	



- : tune (search for the available channels)
- : skip tuning

## 5 Select [Start Auto Setup]

TV Signal Selection	
<input type="checkbox"/>	DVB-C
<input checked="" type="checkbox"/>	DVB-T
<input type="checkbox"/>	Analogue
Start Auto Setup	

 
 


- Auto Setup will start to search for TV channels and store them. The stored channels and sorted channel order vary depending on the country, area, broadcasting system and conditions of signal reception.

Auto Setup screen varies depending on the country you select.

## 1 [DVB-C Network Settings]


- Depending on the country you select, select your cable provider beforehand by following the on-screen instructions.



Normally set [Frequency] and [Network ID] to [Auto].

If [Auto] is not displayed or if necessary, enter [Frequency] and [Network ID] specified by your cable provider with numeric buttons.

## 2 [DVB-C Auto Setup]

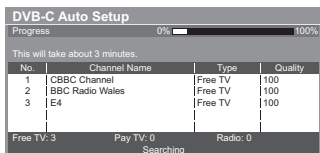


## 3 [DVB-T Auto Setup]




- Depending on the country you select, the channel selection screen will be displayed after DVB-T Auto Setup if multiple channels have the same logical channel number. Select your preferred channel or exit the screen for automatic selections.
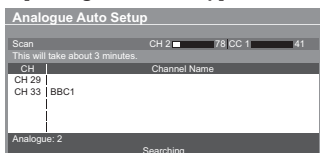
## 4 [Analogue Auto Setup]



## 5 Preset Download

 If Q-Link, VIERA Link or similar technology (p. 81, 82) compatible recorder is connected, channel, language and country / region settings are automatically downloaded to the recorder.




- If downloading has failed, you can download later through the Setup Menu. ➔ [Download] (p. 41)

## Setup the network connection

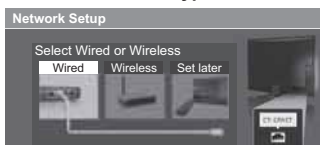Setup the network connection to enable the network service functions such as VIERA Connect, etc. (p. 18, 69).


- Please note that this TV does not support wireless public access points.
- Ensure the network connections (p. 13) and network environment are completed before starting setup.


### Select the network type



[Wired] ➔ "Wired connection" (p. 13)

 [Wireless] ➔ "Wireless connection" (p. 13)



- To setup later on or skip this step ➔ Select [Set later] or 

### ■ [Wired]

#### 1. Select [Auto]



#### 2. Go to the next step **7**



#### Connection Test

- Check network cable connection.
- Check acquired IP address.
- Check for devices using same IP address.
- Check gateway connection.
- Check server connection.

Automatically setup is done and the test of the network connection starts.

- To set manually, select [Manual] and set each item. For details ➔ (p. 72)

: **succeeded**

The test is successful and the TV is connected to the network.

: **failed**

Check the settings and connections. And then select [Retry].

## ■ [Wireless]

Access points found automatically are listed.

1. Select your desired access point

Available Wireless Networks			
No.	Network Name(SSID)	Wireless type	Status
1	Access Point A	11n(2.4GHz)	
2	Access Point B	11n(5GHz)	
3	Access Point C	11n(5GHz)	



- For [WPS(Push button)] (p. 17)  
 (red)

: Encrypted access point

- To search access points again  
 (blue)

- For the information of the highlighted access point
- To set manually (p. 74)  
 (yellow)

2. Access the encryption key input mode

**Encryption Key Setting**

Connection will be made with the following settings:-  
 Network Name(SSID) : Access Point A  
 Security type : WPA-PSK  
 Encryption type : TKIP

Please input the encryption key.

Encryption key



- If the selected access point is not encrypted, the confirmation screen will be displayed. It is recommended to select the encrypted access point.

 
3. Enter the encryption key of the access point

**Wireless Network Settings**

Encryption key

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T
U	V	W	X	Y	Z	0	1	2	3	4	5	6	7	8	9	*	#		
a	b	c	d	e	f	g	h	i	j	k	l	m	n	o	p	q	r	s	t
u	v	w	x	y	z	( )	+ -	* /	@	!	"	#	\$	%	&	'			
[	]	=	\$	{	}		<	>	(	)	^	_	~	!	@	#			

Set characters



- You can set characters by using numeric buttons.



4. After the access point setting is finished, perform the connection test



**Connection Test**

Check wireless network connection.  
 Check acquired IP address.  
 Check for devices using same IP address.  
 Check gateway connection.  
 Check server connection.

: succeeded

The test is successful and the TV is connected to the network.

: failed

Check the settings and connections. And then select [Retry].

- To set manually, select [Manual] and set each item.  
For details ➔ (p. 72)

5. Go to the next step **7**



(Press twice)



## 6

**[WPS(Push button)]**

1. Press the WPS button on the access point until the light flashes
2. Connect the TV with the access point

**WPS(Push button)**

- 1) Please press the 'WPS' button on the wireless access point until its light flashes.
- 2) When the light is flashing select 'Connect' on TV.

If you are unsure, please check the instruction manual of the wireless access point.

Connect



- Ensure that your access point supports WPS for this setup.
- WPS: Wi-Fi Protected Setup™
- If the connection has failed, check the settings and positions of your access point. And then, follow the on-screen instructions.

3. After the access point setting is finished, perform the connection test

**Connection Test**

- Check wireless network connection.
- Check acquired IP address.
- Check for devices using same IP address.
- Check gateway connection.
- Check server connection.

: **succeeded**

The test is successful and the TV is connected to the network.

: **failed**

Check the settings and connections. And then select [Retry].

- To set manually, select [Manual] and set each item. For details ➔ (p. 72)

4. Go to the next step **7**



(Press twice)

## 7

**Select [Home]**

Select [Home] viewing environment to use in your home environment.

Please select your viewing environment.

Home Shop



- 1 select
- 2 set

### ■ [Shop] viewing environment (for shop display only)

[Shop] viewing environment is the demonstration mode to explain main features of this TV.

#### Select [Home] viewing environment to use in your home environment.

- You can return to viewing environment selection screen at the stage of Shop confirmation screen.

#### 1 Return to viewing environment selection screen

Shop

You have selected shop mode



#### 2 Select [Home]

Please select your viewing environment.

Home Shop



- 1 select
- 2 set

To change viewing environment later on, you will need to initialise all settings by accessing Shipping Condition. ➔ [Shipping Condition] (p. 56)

## Auto Setup is now complete and your TV is ready for viewing.

If tuning has failed, check the connection of the RF cable, and then, follow the on-screen instructions.

### Note

- To check the channel list ➔ "Using TV Guide" (p. 23)
- To edit or hide (skip) channels ➔ "Tuning and Editing Channels" (p. 46 - 49)
- To retune all channels ➔ [Auto Setup] (p. 44, 45)
- To add the available TV mode later ➔ [Add TV Signal] (p. 41)
- To initialise all settings ➔ [Shipping Condition] (p. 56)

# Using “VIERA Connect”

VIERA Connect is a gateway to the internet services unique to Panasonic. VIERA Connect allows you to access some specific websites supported by Panasonic, and enjoy internet contents such as videos, games, communication tools, etc. from VIERA Connect home screen.

- This TV does not support full web browser function and some features of the websites may not be available.

Using “VIERA Connect”

 


## 1 Turn power on



- Press for about 1 second.
- Mains power On / Off switch should be on. (p. 10)

- Every time you turn on the TV, VIERA Connect introduction banner appears. The banner is subject to change.



## 2 Access VIERA Connect

While the banner is displayed



or



- Depending on the usage conditions, it may take a while to read all the data.
- Messages might be displayed before VIERA Connect home screen. Please read these instructions carefully and follow the on-screen instructions.

Example: VIERA Connect home screen



- To go to the next level, select [MORE].
- To back to the previous level, select [BACK].
- To return to VIERA Connect home screen

### ■ To exit from VIERA Connect



- To set the VIERA Connect introduction banner display off  
➔ [VIERA Connect Banner] (p. 42)

- Video communication (for example Skype™) requires an exclusive Communication Camera TY-CC20W.  
➔ “Optional accessories” (p. 6)  
For details, read the manual of the Communication Camera.
- You can connect a keyboard and a gamepad via USB port for character input and playing games in VIERA Connect. You can also operate the TV with a keyboard or a gamepad other than VIERA Connect features.  
For more information ➔ “USB connection” (p. 94)

### Note

- If you cannot access VIERA Connect, check the network connections (p. 13) and settings (p. 15 - 17).
- For more information of VIERA Connect ➔ (p. 78)

# Watching TV



## 1 Turn power on

- Press for about 1 second.
- Mains power On / Off switch should be on. (p. 10)

### ■ VIERA Connect introduction banner appears

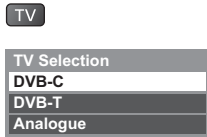
Every time you turn on the TV, this banner appears at the bottom of the screen.

You can access to VIERA Connect easily and enjoy the various contents. ➔ (p. 18)

- To remove this banner, leave for about 5 seconds or press any buttons (except the buttons to access VIERA Connect).
- To set this banner display off ➔ [VIERA Connect Banner] (p. 42)
- The banner is subject to change.



## 2 Select the mode



- The selectable modes vary depending on the stored channels (p. 14).



- You can also select the mode pressing the TV button repeatedly on the remote control or the TV (p. 10).
- If [TV Selection] menu is not displayed, press the TV button to switch the mode.


## 3 Select a channel



 - To select a more than two-digit channel position number, e.g. 399



### ■ To select from the Channel List




- To sort channel names in alphabetical order
- To change the category

### ■ To select a channel using Information banner (p. 20)
 
#### 1 Display Information banner if it is not displayed



#### 2 While the banner is displayed, select the channel



### ■ To select a channel using TV Guide (p. 23)

#### 1 Display TV Guide



#### 2 Select the current programme or channel



#### 3 Select [View] (DVB)



- The postcode entry or update may be required depending on the country you select (p. 14). Follow the on-screen instructions.

### Note

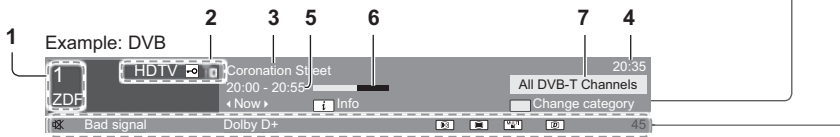
- To watch pay-TV ➔ "Using Common Interface" (p. 55)

## Other useful functions

### Display Information banner

#### Display Information banner

- Also appears when changing a channel.



- 1 Channel position and name
- 2 Channel type ([Radio], [Data], [HDTV], etc.) / Encrypted channel ( ) / TV mode ( , , )
- 3 Programme
- 4 Current time
- 5 Programme Start / Finish time (DVB) Channel number, etc. (Analogue)
- 6 Progress time indicator of the selected programme (DVB)
- 7 Category
  - To change the category (DVB)



#### Features available / Message meanings

		<b>[Stereo], [Mono]</b> Audio mode
Sound mute on	Teletext service available	
<b>[Bad signal]</b>		
Poor TV signal quality	Multiple audio available	Data service (Hybrid Broadcast Broadband TV application) available (p. 54)
<b>[Dolby D+], [Dolby D], [HE-AAC]</b>		<b>1 - 90</b>
Dolby Digital Plus, Dolby Digital or HE-AAC audio track	Multiple video available	Off Timer remaining time
		• For settings ➔ (p. 21)
Subtitle service available	Multiple audio and video available	

- To confirm another tuned channel name
- To watch the channel listed in the banner
- Information on the next programme (DVB)
- To hide  
EXIT
- Extra information (DVB)  
 (Press again to hide the banner)
- To set display timeout  
➔ **[Banner Display Timeout]** (p. 42)

### Display subtitles

#### Display / hide subtitles (if available)

- STIL
- To change the language for DVB (if available)  
 ➔ **[Preferred Subtitles]** (p. 42)

#### Note

- If you press this button in Analogue mode, it switches to teletext service and calls up a favourite page (p. 26). Press the EXIT button to return to TV mode.
- Subtitles may not be displayed properly in 3D images.

 
## Hold

### Freeze / unfreeze picture



## Display the selectable settings for the current status

### Confirm or change the current status instantly



#### [Multi Video] (DVB)

Selects from a group of multiple videos (if available)

- This setting is not memorised and it will return to the default setting once you exit the current programme.

#### [Multi Audio] (DVB)

Selects between alternative language for sound tracks (if available)

- This setting is not memorised and it will return to the default setting once you exit the current programme.

#### [Dual Audio] (DVB)

Selects stereo / monaural (if available)

#### [Sub Channel] (DVB)

Selects the multifeed programme - sub channel (if available)

#### [Subtitle Language] (DVB)

Selects the language in which subtitles should appear (if available)

#### [Teletext Character Set]

Sets the teletext language font  
➔ (p. 42)

#### [Teletext Language] (DVB)

Selects between alternative language for teletext (if available)

#### [MPX] (Analogue)

Selects multiplex sound mode (if available)

➔ (p. 38)

#### [Volume Correction]

Adjusts volume of individual channel or input mode

## Off Timer

### Turn the TV to Standby mode automatically after a fixed period

 
 
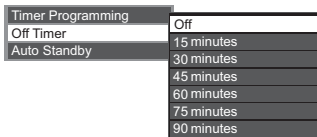
#### 1 Display the menu



#### 2 Select [Timer]



#### 3 Select [Off Timer] and set the time in 15-minute increments



- To cancel, set to [Off] or turn the TV off.
- To confirm the remaining time ➔ “Display Information banner” (p. 20)
- When the remaining time is within 3 minutes, the remaining time will flash on the screen.

## Aspect

### Change the aspect ratio (image size)

ASPECT Enjoy viewing the image at its optimum size and aspect.

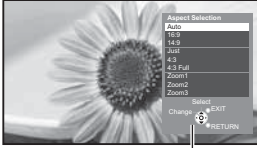


Programmes usually contain an "Aspect Control Signal" (Widescreen signal, etc.), and the TV will choose the aspect ratio automatically according to the "Aspect Control Signal" (p. 89).

### ■ To change the aspect ratio manually

#### 1 Display Aspect Selection list

ASPECT



Aspect Selection list

#### 2 While the list is displayed, select the mode



- You can also change the mode only using the ASPECT button.

ASPECT



(Press repeatedly until you reach the desired mode.)

#### [Auto]



The best ratio is chosen and the image expanded to fill the screen.  
For details ➔ (p. 89)

#### [16:9]



Directly displays the image at 16:9 without distortion (anamorphic).

#### [14:9]



Displays the image at the standard 14:9 without distortion.

#### [Just]



Displays a 4:3 image full-screen. Stretching is only noticeable at the left and right edges.

#### [4:3]



Displays the image at the standard 4:3 without distortion.

#### [4:3 Full]



 
Displays a 4:3 image enlarged horizontally to fit the screen.

#### [Zoom1]




Displays a 16:9 letterbox or 4:3 image without distortion.

#### [Zoom2]



Displays a 16:9 letterbox (anamorphic) image full-screen without distortion.

#### [Zoom3]

 

Displays a 2.35:1 letterbox (anamorphic) image full-screen without distortion. At 16:9, displays the image at its maximum (with slight enlargement).

#### Note

- Only [16:9] and [4:3] are available in PC input mode.
- Aspect cannot be changed in teletext service and 3D mode.
- Aspect mode can be memorised separately for SD (Standard definition) and HD (High definition) signals.

## Last view

### Switch to previously viewed channel or input mode easily



LAST VIEW

- Press again to return to the current view.

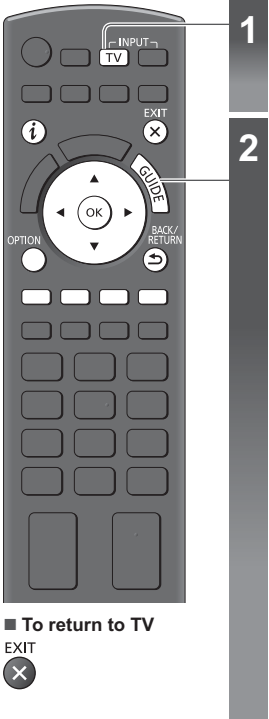
#### Note

- Switching channel is not available while the recording of Timer Programming or Direct TV Recording is in progress.
- Watching less than 10 seconds is not regarded as the previously viewed channel or input mode.

# Using TV Guide

TV Guide - Electronic Programme Guide (EPG) provides an on-screen listing of the programmes currently broadcast and the forthcoming broadcasts over the next seven days (depending on the broadcasters).

- This function varies depending on the country you select (p. 14).
- The postcode entry or update may be required to use the GUIDE Plus+ system depending on the country you select.
  - ➔ **“View advertisement”** (p. 24)
- DVB-T and Analogue channels are displayed on the same TV Guide screen. [D] and [A] may be displayed to distinguish DVB-T and Analogue channels. There will be no programme listings for Analogue channels.
- When this TV is turned on for the first time, or the TV is switched off for more than a week, it may take some time before TV Guide is completely shown.



## 1 Select the mode

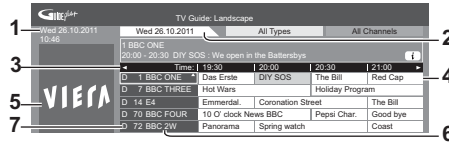
➔ (p. 19)



## 2 View TV Guide


- Press again to change the layout ([Landscape] / [Portrait]).
- View [Landscape] to see several channels.
- View [Portrait] to see one channel by time.

Example: [Landscape]



- 1 Current date and time
- 2 TV Guide date
- 3 TV Guide time
- 4 Programme
- 5 Advertisement
- 6 Channel position and name
- 7 [D]: DVB-T  
[A]: Analogue

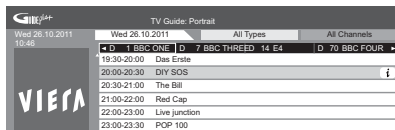Example: [Portrait]



**Depending on the country you select, you can select the TV Guide type**

➔ **[Default Guide]** (p. 42)

 
If you select [Channel List], the channel list will appear when the GUIDE button is pressed.

## ■ To watch the programme

### 1 Select the current programme or channel



### 2 Select [View] (DVB)




• To use Timer Programming ➔ (p. 25)


### ■ To the previous day (DVB)

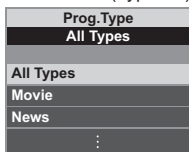 (red)

### ■ To view a channel list of the selected type (DVB)

 (yellow)

(Type list)





### ■ To the next day (DVB)

 (green)

### ■ To view a channel list of the selected category (DVB)

 (blue)

 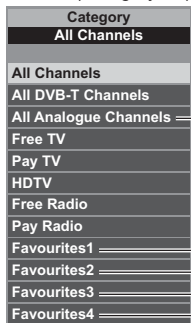(Category list)



Only Analogue channels are listed

To list favourite channels  
➔ (p. 46)

## Other useful functions

### View details of the programme (DVB)

#### 1 Select the programme



#### 2 View details



• Press again to return to TV Guide.

### View advertisement

Depending on the country you select, this TV supports the **GUIDE Plus+** system in DVB-T or Analogue mode

The postcode entry or update is required. Follow the on-screen instructions.

• You can also setup manually from the Setup Menu.

➔ **[Update] / [Postcode]** in **[GUIDE Plus+ Settings]** (p. 43)

• Enter your postcode when using this function for the first time. If you enter an incorrect postcode for your area, or no postcode is entered, advertisements may not be displayed correctly.

#### Display advertisement information

OPTION • To display the latest advertisement



➔ **[Update]** in **[GUIDE Plus+ Settings]** (p. 43)

#### ■ To change advertisements



#### ■ To return to TV Guide

OPTION or 

#### Note

 
• To update the information continuously, the TV must be left in Standby mode.



## Timer Programming (DVB)

The Timer Programming menu allows you to choose programmes that you want to remind watching or record to the external recorder. At the correct time, the TV will tune to the correct channel even if the TV is in Standby mode.

### 1 Select the forthcoming programme




- LED will turn to orange if Timer Programming is set. (Orange LED will flash if the recording of Timer Programming is in progress.)
- ➔ "Indicator / Control panel" (p. 10)

### 2 Select the function ([Ext Rec.] or [Reminder])

 (Timer Programming screen)

Timer Programming					Wed 26.10.2011 10:46	
Function	No.	Channel Name	Date	Start	End	
⊕	12	BBC ONE	Wed 26.10.2011	20:00	20:30	[←] [→]
		<TIMER>				[←] [→]
						[←] [→]
						[←] [→]
						[←] [→]



[Ext Rec.] / [Reminder]

- ➔ "Set timer programming event details" (p. 51)

### ■ To check / change / cancel a timer programming event

 
- ➔ "Timer Programming" (p. 50 - 52)

### ■ To return to TV Guide



### ■ If you select the current programme

A confirmation screen asking whether you want to watch or record the programme appears. Select [Timer Programming] and set [Ext Rec.] to record from the time you finish the timer programming event setting.



#### Note

- This function is not available in Analogue mode.
  - Timer Programming only works reliably if correct time information is received via the signal from the broadcaster or service provider.
  - No other channel can be selected while the recording of Timer Programming is in progress.
  - When recording programmes to the external recorder, be sure to make the proper settings on the recorder connected to the TV.
- If a compatible recorder with Q-Link, VIERA Link or similar technologies is connected to the TV (p. 81, 82) and [Link Settings] (p. 40) are completed, no setting of the recorder is required. Also read the manual of the recorder.

# Viewing Teletext





Teletext services are the text information provided by the broadcasters. The features may vary depending on the broadcasters.

## What is FLOF (FASTTEXT) mode?

In FLOF mode, four differently coloured subjects are situated at the bottom of the screen. To access more information about one of these subjects, press the appropriate coloured button. This facility enables fast access to information on the subjects shown.

## What is TOP mode? (in case of TOP text broadcasting)

TOP is a particular improvement of the standard teletext service that results in an easier search and effective guide.

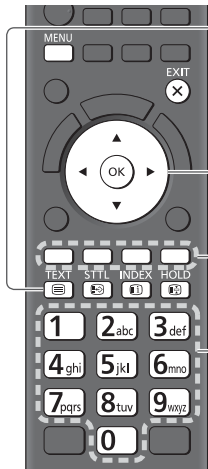
- Fast overview of the teletext information available
- Easy to use step-by-step selection of the topical subject
- Page status information at the bottom of the screen
- Available page up / down
  -  (red)  (green)
  -  (blue)
  -  (yellow)
- To select among subject blocks
- To select next subject within the subject block (After the last subject, it moves to the next subject block.)

## What is List mode?

In List mode, four differently coloured page numbers are situated at the bottom of the screen. Each of these numbers can be altered and stored in the TV's memory. ➔ **"Store frequently viewed pages"** (p. 27)

■ **To change mode** ➔ [Teletext] (p. 42)


Viewing Teletext



## 1 Switch to Teletext



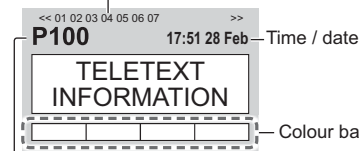Sub page number



Current page number

- Displays the index page (content varies depending on the broadcasters).

## 2 Select the page



up or  down



or Coloured button (Corresponds to the colour bar)

## ■ To adjust contrast



(Press three times)



As the blue bar is displayed



## ■ To return to TV



## Reveal hidden data

Reveal hidden words e.g. quiz page answers



- Press again to rehide.

## HOLD

### Stop automatic updating

(If you want to hold the current page without updating.)



- Press again to resume.

## INDEX

Return to the main index page



## Call up a favourite page

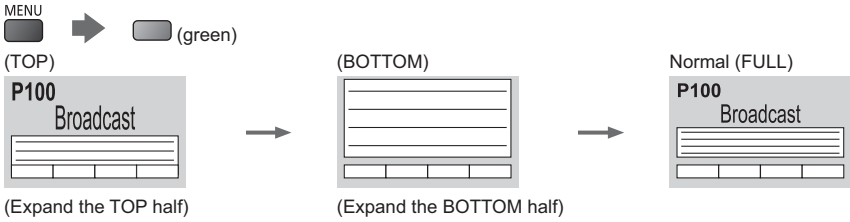
View a favourite page stored

Call up the page stored on the blue button (List mode).



- Factory setting is "P103".

## FULL / TOP / BOTTOM



## View in multi window

### Watch TV and Teletext in two windows at once

 


- Operations can be made only in teletext screen.

## Store frequently viewed pages


### Store frequently viewed pages in the colour bar (List mode only)

As page is displayed



The number changes to white.

### ■ To change stored pages

 

## View sub page

### View sub page (Only when Teletext is more than one page)



- The number of sub pages varies depending on the broadcasters (up to 79 pages).
- It may take some time for searching, during which time you can watch TV.

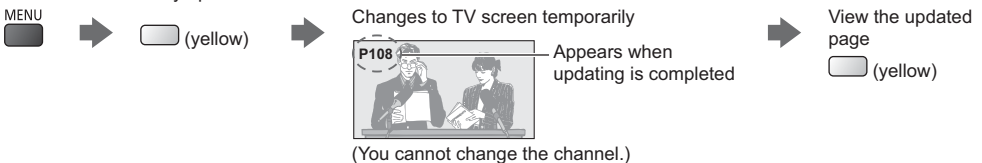
### ■ To view specific sub page



## Watch TV while waiting for update

### View the TV picture while searching for a teletext page

Teletext automatically updates itself when new information becomes available.



- The news page provides a function that indicates arrival of the latest news ("News Flash").

# Watching External Inputs

Connect the external equipment (VCRs, DVD equipment, etc.) and you can watch through the input.

- To connect the equipment ➔ (p. 11 - 13, 87, 88)

The remote control is capable of operating the contents or external equipment. ➔ (p. 29)



■ To return to TV



## 1 Turn the TV on



### When connecting with SCART (p. 12)

Receives input signals automatically when playback starts

- Input signals are automatically identified by the SCART (pin 8) terminal.
- This function is also available for HDMI connections (p. 87).

### If input mode is not switched automatically

 
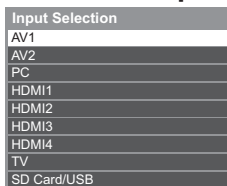
Perform **2** and **3**

- Check the setup of the equipment.

## 2 Display the input selection menu




## 3 Select the input mode connected to the equipment



- You can also select the input using the AV button on the remote control or the TV (except [SD Card/USB]). Press the button repeatedly until the desired input is selected.
  - To switch between [COMPONENT] and [VIDEO] in [AV2], move the indicator by pressing left and right cursor button.
  - [SD Card/USB]: Switches to Media Player. ➔ **“Using Media Player”** (p. 60)
  - You can label or skip each input mode (except [SD Card/USB]). ➔ **“Input Labels”** (p. 42)
- Skipped inputs will not be displayed when the AV button is pressed.

## 4 View

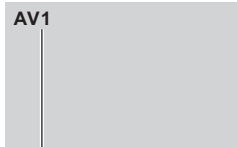




 



 
Displays the selected mode

### Note

- If the external equipment has an aspect adjustment function, set it to “16:9”.
- For details, read the manual of the equipment or ask your local dealer.

## Operating the contents or equipment with the TV remote control

You can operate the contents in Media Player / media servers, recording functions or the connected equipment with the below buttons of this TV remote control.

	<b>Standby</b> Set to Standby mode / Turn on
	<b>Play</b> Playback videocassette / DVD / video content
	<b>Stop</b> Stop the operations
	<b>Rewind / Skip / Search</b> VCR: Rewind, view the picture rapidly in reverse DVD / video content: Skip to the previous track, title or chapter Press and hold to search backward
	<b>Fast-forward / Skip / Search</b> VCR: Fast-forward, view the picture rapidly forward DVD / video content: Skip to the next track, title or chapter Press and hold to search forward
	<b>Pause</b> Pause / Resume DVD: Press and hold to play at slow speed
	<b>Channel Up / Down</b> Select channel
	[Direct TV Rec] ➔ (p. 81, 83)

### How to change the code

Each type of the Panasonic equipment has its own remote control code. To use in some features of this TV, you have to select the code "73". Change to the appropriate code according to the equipment or features below.

**Press and hold**  **during the following operations**

Enter the appropriate code, see table below



Press



Type of the equipment, features	Code
DVD Recorder, DVD Player, Blu-ray Disc Player	70 (default)
Player theatre, Blu-ray Disc theatre	71
VCR	72
Using in Media Player (p. 61), DLNA features (p. 75) or Direct TV Recording (p. 81, 83) Equipment using in VIERA Link (p. 84)	73

#### Note

- Confirm if the remote control works correctly after changing the code.
- The codes may be reset to default values if batteries are replaced.
- Some operations may not be possible on some equipment models.

# Viewing 3D images

You can enjoy viewing 3D images with contents or programmes corresponding to the 3D effect by wearing the 3D Eyewear. ➔ **“Standard accessories” (p. 6)**

This TV supports [Frame Sequential]\*<sup>1</sup>, [Side by Side]\*<sup>2</sup> and [Top and Bottom]\*<sup>3</sup> 3D formats.

\*1: The 3D format that the images for the left and right eyes are recorded with the high definition quality and alternately played back.

\*2, \*3: Other available 3D formats

• How to view the 3D images ➔ (p. 31)

## Warning

• Do not disassemble or modify the 3D Eyewear. Doing so may result in injury, or may cause the user to feel unwell.

## Caution

To use 3D Eyewear safely and comfortably, please read these instructions fully.

### 3D Eyewear

- Do not drop, exert pressure on, or step on the 3D Eyewear. Doing so may damage the glass section, which may result in injury.
- Be careful of the tips of the frame and the hinge section when putting on the 3D Eyewear. Failure to heed this warning may result in injury. Pay special attention when children are using this product.

### Viewing 3D Content

- Do not use the 3D Eyewear if you have a history of over-sensitivity to light, heart problems, or have any other existing medical condition. Using the 3D Eyewear may cause the symptoms to worsen.
- Stop using the 3D Eyewear immediately if you feel tired, discomfort, or any other abnormality. Continuing to use the 3D Eyewear in such cases may cause you to feel unwell. Please take the necessary rest before continuing use. When you set the effect by using [3D Adjustment], take into account that the vision of 3D images varies among different individuals.
- When using the 3D Eyewear, be careful not to strike the TV screen or other people by mistake. As the images are in 3D, the distance between the user and screen may be mistaken, causing the user to strike the screen which may result in injury.
- When using the 3D Eyewear, make sure your eyes are on an approximately horizontal level, and keep a position where you do not see double images.
- If you suffer from myopia (short-sightedness), hyperopia (far-sightedness), astigmatism, or have eyesight differences between the left and right eyes, please use corrective glasses or other such methods to correct your eyesight before putting on the 3D Eyewear.
- Stop using the 3D Eyewear if you can clearly see double images when viewing 3D content. Prolonged use may cause eyesight fatigue.
- View the screen at a distance at least 3 times further than the effective height of the screen.

Recommended distance:

TX-L32ET5E / TX-L32ET5EW: 1.2 m or more

TX-L37ET5E / TX-L37ET5EW: 1.4 m or more

TX-L42ET5E / TX-L42ET5EW: 1.6 m or more

TX-L47ET5E: 1.8 m or more

TX-L55ET5E: 2.1 m or more

Using the 3D Eyewear at a distance closer than the recommended distance may cause eyesight fatigue.

### 3D Eyewear Use

- Do not use the 3D Eyewear for any other purpose except viewing 3D images.
- As a guide, 3D Eyewear should not be used by children younger than 5 - 6 years old. As it is difficult to judge younger children's reactions to fatigue or discomfort, it may be difficult to prevent them from suddenly feeling unwell. When this product is being used by a child, the parent or guardian should check to ensure that the child's eyes are not becoming tired.
- Do not use if the 3D Eyewear is cracked or broken. Doing so may result in injury or eyesight fatigue.
- Stop using the 3D Eyewear immediately if your skin feels unusual. In rare cases, the paint or materials used in the 3D Eyewear may cause an allergic reaction.

## Note

• 3D Eyewear can be worn over vision correction glasses.

## Storing and cleaning the 3D Eyewear

- Clean using a soft, dry cloth.
- Wiping the 3D Eyewear with a soft cloth that is covered in dust or dirt may scratch the eyewear. Shake off any dust from the cloth before use.
- Do not use benzene, thinner, or wax on the 3D Eyewear, as doing so may cause the paint to peel off.
- Do not dunk the 3D Eyewear in liquid such as water when cleaning.
- Avoid storing the 3D Eyewear in hot or highly humid locations.

## To view the 3D images

You can enjoy the 3D images in a variety of ways.  
(Frame Sequential, Side by Side and Top and Bottom are the supported 3D format.)

### ■ Playing back 3D-compatible Blu-ray disc (Frame Sequential format)

- Connect the 3D-compatible player via a fully wired HDMI compliant cable.
- If input mode is not switched automatically, select the input mode connected to the player. (p. 28)
- If you use the non 3D-compatible player, the images will be displayed on 2D mode.

### ■ 3D-supported broadcast

- Please consult the suppliers of contents or programmes for availability of this service.

### ■ 3D photos and 3D videos taken by 3D-compatible Panasonic products

- Available in Media Player (p. 60) and Network services (p. 75)

### ■ 2D images converted to 3D

- Set to [2D→3D] mode in [3D Mode Selection]. (p. 32)

## 1 Put on the 3D Eyewear

## 2 View the 3D images

- Safety precautions will be displayed when you first watch the 3D image. Select [Yes] or [No] to continue to view 3D images.

If you select [Yes], this message will be displayed again in the same condition after Mains power On / Off switch is next turned on. Select [No] if you do not want to display this message again.

### Note

- The 3D image or 3D effect may not be available in the following conditions:
  - VIERA Connect home screen (p. 18) is displayed.
  - [Ext Rec.] of Timer Programming (p. 50) is in progress.
  - Direct TV Recording (p. 81, 83) is in progress.

As for the contents of the Frame Sequential format and Side by Side (Full), no images will be displayed in these conditions.

- 3D content will not be correctly visible if the 3D Eyewear is worn upside down or back-to-front.
- Do not wear the 3D Eyewear when watching anything other than 3D images. Liquid crystal displays (such as computer screens, digital clocks or calculators, etc.) may be difficult to see while wearing the 3D Eyewear.
- Do not use the 3D Eyewear as sunglasses.
- 3D effects may be perceived differently depending on the person.

## Changing 2D - 3D mode

You can easily change the viewing mode between 2D and 3D using the 3D button.

- This function is not available in PC mode.

**3D**



Select the mode



- Items of [3D Mode Selection] vary depending on the condition.

### [3D] / [2D] / [2D→3D]:

Displays the appropriate image that you desire without selecting 3D format.

- This mode may not work properly depending on the source image format. In this case, select the appropriate 3D format manually.

## ■ To change 3D format manually

 
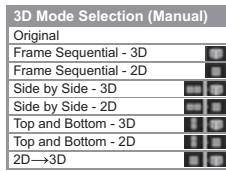
When the image is not changed properly using [3D], [2D] or [2D→3D] mode, use this manual setting.

During the above operation

 (red)



Select the mode



### [Original]:

Displays the source image as it is.

- Use to identify the format type of the source image.

➔ “Table of images that can be seen for each [3D Mode Selection (Manual)] and the source image format” (see below)

### [Frame Sequential - 3D] / [Frame Sequential - 2D] / [Side by Side - 3D] / [Side by Side - 2D] / [Top and Bottom - 3D] / [Top and Bottom - 2D]:

Displays the mode you select.

- Not valid on Analogue and AV mode

### [2D→3D]:

Converts 2D images into 3D.

- Please note the 3D images appear slightly different from the originals.
- Using this function for profit-making purposes, or publicly showing images converted from 2D to 3D in places such as shops or hotels etc. may infringe on the rights of the copyright holder protected under copyright law.

### Table of images that can be seen for each [3D Mode Selection (Manual)] and the source image format

If the picture appears to be abnormal, refer to the table below to choose the correct 3D mode.

[3D Mode Selection]	[Original]	[Frame Sequential - 3D]	[Side by Side - 3D]	[Top and Bottom - 3D]	[2D→3D]
Frame Sequential		 Normal 3D*1			
Side by Side (Full)			 Normal 3D*1		
Side by Side			 Normal 3D*1		
Top and Bottom				 Normal 3D*1	
Normal format (2D)					 Normal 3D

\*1: When selecting [Frame Sequential - 2D], [Side by Side - 2D] or [Top and Bottom - 2D], the images will be displayed without 3D effect.

- Depending on the player or broadcasts, the image may be different from the above illustrations.



## 3D Settings

If the 3D images are not displayed correctly or seem unusual, adjust and setup the 3D settings.



■ To return to TV

EXIT



### 1 Display the menu

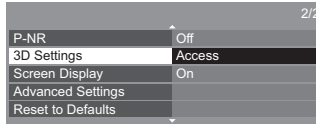
MENU




### 2 Select [Picture]



### 3 Select [3D Settings]



### 4 Select one of the following functions and set

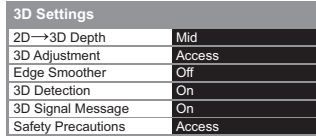

Item	Adjustments / Configurations (alternatives)
<b>2D→3D Depth</b>	Selects a level of 3D-image depth for viewing converted 2D images <b>[Min]</b> / <b>[Mid]</b> / <b>[Max]</b>
<b>3D Adjustment</b>	Adjustment of the 3D effect (except in [2D→3D] mode) <b>[Off]</b> / <b>[On]</b> <ul style="list-style-type: none"> <li>● Set to [On] to enable [Effect] setting.</li> <li>● When setting to [On], a safety precaution message will appear. Read it carefully and press the BACK/RETURN button to go to [Effect] setting.</li> </ul> <b>[Effect]:</b> Adjusts the 3D depth according to the contents or to your preference.
<b>Edge Smoother</b>	Set to [On] if you feel the contoured parts of an image are not smooth enough (except in [2D→3D] mode) <b>[Off]</b> / <b>[On]</b>
<b>3D Detection</b>	Automatically detects the 3D format signals <b>[Off]</b> / <b>[On]</b> / <b>[On (Advance)]</b> <b>[On (Advance)]:</b> Detects all the 3D format signals and displays the 3D image automatically. <b>[On]:</b> Detects the particular 3D format signals (Frame Sequential, etc.) and displays the 3D image automatically. <ul style="list-style-type: none"> <li>● To view 3D images without any notifications and operations, set to [On (Advance)].</li> </ul>
<b>3D Signal Message</b>	Selects whether to give a notification message when a signal of 3D format is found <b>[Off]</b> / <b>[On]</b> <ul style="list-style-type: none"> <li>● For DVB, Component and HDMI input</li> <li>● This function is not available when [3D Detection] is set to [On (Advance)].</li> </ul>
<b>Safety Precautions</b>	Displays the precautions for viewing 3D images

#### Note

- [3D Adjustment] will not be memorised when changing the input mode or channel.

# How to Use VIERA TOOLS

You can access some special features easily by using the VIERA TOOLS function.



## 1 Display icons of the feature



## 2 Select a feature



### ■ To return to TV

EXIT



or



### ■ Follow the operations of each feature



[VIERA Link]  
➔ (p. 83 - 86)



[Photo]\*  
➔ (p. 62)



[Video]\*  
➔ (p. 66)



[Music]\*  
➔ (p. 68)



[VIERA Connect]  
➔ (p. 18, 78)



[Media Server]\*  
➔ (p. 75)

\*When two or more available devices are connected, a selection screen will be displayed.  
Please select the correct description and access.

### Note

- If the selected feature is not available, the demonstration to explain how to use it can be displayed. Press the OK button to view the demonstration after selecting the unavailable feature.

# How to Use Menu Functions

Various menus allow you to make settings for the picture, sound, and other functions.



■ To return to TV at any time



■ To return to the previous screen



 
■ To change menu pages





## 1 Display the menu

MENU • Displays the functions that can be set (varies according to the input signal).

## 2 Select the menu




## 3 Select the item

 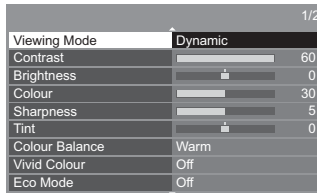



### ■ Choose from among alternatives


 
### ■ Adjust using the slide bar



### ■ Go to the next screen

  

### ■ Enter characters by free input menu

You can enter names or numbers freely for some items.



Set characters one by one



• You can set characters by using numeric buttons. ➔ “Characters table for numeric buttons” (p. 96)

### ■ To reset the settings

• Picture or sound settings only  
➔ [Reset to Defaults] in the Picture Menu (p. 37) or Sound Menu (p. 39)

• Picture and sound settings together

N (Also volume level and aspect mode are reset)

• To initialise all settings ➔ [Shipping Condition] (p. 43)

## Menu list

Menu	Item	Adjustments / Configurations (alternatives)
Picture	Viewing Mode	<p>Selects your favourite picture mode for each input  <b>[Dynamic]</b> / <b>[Normal]</b> / <b>[Cinema]</b> / <b>[True Cinema]</b> / <b>[Game]</b>  <b>[Dynamic]:</b>            Improves contrast and sharpness for viewing in a bright room.  <b>[Normal]:</b>            Normal use for viewing in a normal lighting condition.  <b>[Cinema]:</b>            Improves the performance of contrast, black and colour reproduction for watching movies in a darkened room.  <b>[True Cinema]:</b>            Reproduces the original image quality precisely without any revision.  <b>[Game]:</b>            Provides suitable images for fast response signal when playing games.</p> <ul style="list-style-type: none"> <li>• Not valid on TV mode</li> <li>• To display a continuous record of time spent using Game mode              ➔ [Playing Time Display] (p. 42)</li> </ul> <p>In each Viewing Mode, [Contrast], [Brightness], [Colour], [Sharpness], [Tint], [Colour Balance], [Vivid Colour], [Eco Mode], [P-NR] and [3D-COMB] can be adjusted and stored for each input.            Additionally, you can adjust the detailed settings when [Advance] in the Setup Menu is set to [On]. ➔ (p. 43)</p> <ul style="list-style-type: none"> <li>• You can set [Viewing Mode] in 2D and 3D mode for each.</li> </ul>
	Contrast, Brightness, Colour, Sharpness	Adjusts the levels of these options according to your personal preference
	Tint	Adjusts the picture hue to suit your taste <ul style="list-style-type: none"> <li>• For NTSC signal reception</li> </ul>
	Colour Balance	Sets the overall colour tone of the picture <b>[Cool]</b> / <b>[Normal]</b> / <b>[Warm]</b> <ul style="list-style-type: none"> <li>• Not valid when [Viewing Mode] is set to [True Cinema]</li> </ul>
	Vivid Colour	Automatically adjusts colours to vivid ones <b>[Off]</b> / <b>[On]</b> <ul style="list-style-type: none"> <li>• Not valid on PC mode</li> </ul>
	Eco Mode	Automatic Brightness Control function Adjusts picture settings automatically depending on ambient lighting conditions <b>[Off]</b> / <b>[On]</b>
	P-NR	Picture Noise Reduction Reduces unwanted picture noise and flicker noise in the contoured parts of a picture <b>[Off]</b> / <b>[Min]</b> / <b>[Mid]</b> / <b>[Max]</b> / <b>[Auto]</b> <ul style="list-style-type: none"> <li>• Not valid on PC mode or when [Viewing Mode] is set to [Game]</li> </ul>
	3D-COMB	Makes still or slow moving pictures more vivid <b>[Off]</b> / <b>[On]</b> <ul style="list-style-type: none"> <li>• Occasionally, while viewing still or slow moving pictures, colour patterning may be seen. Set to [On] to display sharper and more accurate colours.</li> <li>• For PAL / NTSC signal reception in TV mode or from composite (except 3D mode)</li> </ul>
	3D Settings	Adjusts and sets to view 3D images (p. 33)

Menu	Item	Adjustments / Configurations (alternatives)
Picture Advanced Settings	<b>Screen Display</b>	Turns the screen off when you select [Off] <b>[Off] / [On]</b> <ul style="list-style-type: none"> <li>• The sound is active even if the screen turns off.</li> <li>• Press any buttons (except Standby) to turn the screen on.</li> <li>• This function is effective in reducing power consumption when listening to the sound without watching the TV screen.</li> </ul>
	<b>Intelligent Frame Creation</b>	Automatically compensates the picture frame rate and removes juddering movements to make the images smooth <b>[Off] / [Min] / [Mid] / [Max]</b> <ul style="list-style-type: none"> <li>• Depending on the contents, images may be noisy. To prevent the noise, change the setting.</li> <li>• Not valid on PC mode or when [Viewing Mode] is set to [Game]</li> </ul>
	<b>24p Smooth Film</b>	Automatically compensates the picture frame rate to make the 24p source movie images smooth <b>[Off] / [Min] / [Mid] / [Max]</b> <ul style="list-style-type: none"> <li>• This is available only for 24p signal input and displayed instead of [Intelligent Frame Creation].</li> <li>• Not valid on PC mode or when [Viewing Mode] is set to [Game]</li> </ul>
	<b>Film Cadence Detection</b>	Improves vertical resolution for movie images <b>[Off] / [On]</b> <ul style="list-style-type: none"> <li>• This function is available for the interlaced signal (except in the mode of PC, VIERA Connect or when [Viewing Mode] is set to [Game]).</li> </ul>
	<b>16:9 Overscan</b>	Selects the screen area displaying the image <b>[Off] / [On]</b> <b>[On]:</b> Enlarges the image to hide the edge of the image. <b>[Off]:</b> Displays the image in the original size. <ul style="list-style-type: none"> <li>• Set to [On] if noise is generated on the edge of the screen.</li> <li>• This function is available when aspect is set to [Auto] (16:9 signal only) or [16:9].</li> <li>• This function can be memorised separately for SD (Standard definition) and HD (High definition) signals.</li> <li>• Not valid on PC mode or VIERA Connect</li> </ul>
	<b>AV Colour System</b>	Selects optional colour system based on video signals in AV mode <b>[Auto] / [PAL] / [SECAM] / [M.NTSC] / [NTSC]</b>
	<b>DVI Input Setting</b>	Changes the black level of the image for HDMI input mode with DVI input signal manually <b>[Normal] / [Full]</b> <ul style="list-style-type: none"> <li>• When the DVI input signal from the external equipment (especially from PC) is displayed, the black level may not be suitable. In this case, select [Full].</li> <li>• The black level for HDMI input signal will be adjusted automatically.</li> <li>• For HDMI input mode with DVI input signal</li> </ul>
<b>Reset to Defaults</b>	Press the OK button to reset the current Picture Viewing Mode of the selected input to the default settings	

Menu	Item	Adjustments / Configurations (alternatives)
Sound	Mode	<p>Selects your favourite sound mode <b>[Music]</b> / <b>[Speech]</b> / <b>[User]</b></p> <ul style="list-style-type: none"> <li>• The selected mode affects all input signals.</li> </ul> <p><b>[Music]:</b> Improves sound quality for watching music videos, etc.</p> <p><b>[Speech]:</b> Improves sound quality for watching news, drama, etc.</p> <ul style="list-style-type: none"> <li>• In Music and Speech modes, you can adjust <b>[Bass]</b> and <b>[Treble]</b> settings, and those settings will be stored for each mode.</li> </ul> <p><b>[User]:</b> Adjusts the sounds manually by using the equaliser to suit your favourite sound quality.</p> <ul style="list-style-type: none"> <li>• For the User mode, <b>[Equaliser]</b> will appear on the Sound Menu instead of <b>[Bass]</b> and <b>[Treble]</b>. Select <b>[Equaliser]</b> and adjust the frequency. ➔ <b>[Equaliser]</b> (see below)</li> </ul>
	Bass	Adjusts level to enhance or minimise lower, deeper sound output
	Treble	Adjusts level to enhance or minimise sharper, higher sound output
	Equaliser	<p>Adjusts the frequency level to suit your favourite sound quality</p> <ul style="list-style-type: none"> <li>• This function is available when <b>[Mode]</b> is set to <b>[User]</b>.</li> <li>• Select the frequency and change the frequency level by using the cursor button.</li> <li>• To enhance the bass sound, raise the level of the lower frequency. To enhance the treble sound, raise the level of the higher frequency.</li> <li>• To reset the levels of each frequency to the default settings, select <b>[Reset to Defaults]</b> by using the cursor button, and then press the OK button.</li> </ul>
	Balance	Adjusts volume level of right and left speakers
	Headphone Volume	Adjusts the volume of the headphones
	Surround	<p>Surround sound settings <b>[Off]</b> / <b>[V-Audio]</b> / <b>[V-Audio Surround]</b></p> <p><b>[V-Audio]:</b> Provides a dynamic enhancer of width to simulate improved spatial effects.</p> <p><b>[V-Audio Surround]:</b> Provides a dynamic enhancer of width and depth to simulate improved spatial effects.</p> <ul style="list-style-type: none"> <li>• Switching is also possible by the SURROUND button on the remote control (p. 9).</li> </ul>
	Auto Gain Control	Automatically regulates large sound level differences between channels and inputs <b>[Off]</b> / <b>[On]</b>
	Volume Correction	Adjusts the volume of individual channel or input mode
	Speaker Distance to Wall	<p>Compensates for the low frequency sound due to the distance between the speakers and the wall <b>[Over 30cm]</b> / <b>[Up to 30cm]</b></p> <ul style="list-style-type: none"> <li>• If the back space between the TV and wall is over 30 cm, <b>[Over 30cm]</b> is recommended.</li> <li>• If the back space between the TV and wall is within 30 cm, <b>[Up to 30cm]</b> is recommended.</li> </ul>
MPX	<p>Selects multiplex sound mode (if available)</p> <p><b>[Stereo]:</b> Use this normally.</p> <p><b>[Mono]:</b> When stereo signal cannot be received.</p> <p><b>[M1]</b> / <b>[M2]:</b> Available while mono signal is transmitted.</p> <ul style="list-style-type: none"> <li>• For Analogue mode</li> </ul>	

Menu	Item	Adjustments / Configurations (alternatives)
Sound	Audio Preference	<p>Selects the initial setting for audio tracks  <b>[Auto]</b> / <b>[Multichannel]</b> / <b>[Stereo]</b> / <b>[MPEG]</b></p> <ul style="list-style-type: none"> <li>Selectable options vary depending on the country you select.</li> </ul> <p><b>[Auto]:</b> Automatically selects the audio tracks if programme has more than two tracks. The priority is given in the following order - Dolby Digital Plus, HE-AAC, Dolby Digital, MPEG.</p> <p><b>[Multichannel]:</b> The priority is given to multi-channel audio track.</p> <p><b>[Stereo]:</b> The priority is given to stereo (2ch) audio track.</p> <p><b>[MPEG]:</b> The priority is given to MPEG.</p> <ul style="list-style-type: none"> <li>Dolby Digital Plus and Dolby Digital are the methods of coding digital signals developed by Dolby Laboratories. Apart from stereo (2ch) audio, these signals can be multi-channel audio.</li> <li>HE-AAC is a perceptual coding method used to compress digital audio for efficient storage and transmission.</li> <li>MPEG is an audio compression method that compresses audio to the smaller size without any considerable loss of audio quality.</li> <li>Dolby Digital Plus and HE-AAC are the technologies for HD (High definition) programmes.</li> <li>For DVB mode</li> </ul>
	Audio Type	<p>Narration settings for visually impaired users (only available in some countries)  <b>[Standard]</b> / <b>[Visual Impaired]</b></p> <ul style="list-style-type: none"> <li>Set to [Visual Impaired] to activate the narration sound track when available on the broadcast.</li> <li>For DVB mode</li> </ul>
	SPDIF Selection	<p>SPDIF: A standard audio transfer file format  Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals <b>[Auto]</b> / <b>[PCM]</b></p> <p><b>[Auto]:</b> Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bitstream. MPEG is output as PCM.</p> <p><b>[PCM]:</b> Digital output signal is fixed to PCM.</p> <ul style="list-style-type: none"> <li>For DVB mode or video contents of Media Player / Network services (p. 67, 78)</li> <li>ARC (Audio Return Channel): A function of digital audio output using HDMI cable</li> </ul>
	HDMI1 / 2 / 3 / 4 Input	<p>Selects to fit the input signal <b>[Digital]</b> / <b>[Analogue]</b> (p. 94)  <b>[Digital]:</b> When sound is carried via the HDMI cable connection  <b>[Analogue]:</b> When sound is not carried via the HDMI-DVI adaptor cable connection</p> <ul style="list-style-type: none"> <li>For HDMI input</li> </ul>
	SPDIF Delay	<p>Adjusts the delay time of the sound output from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals if the sound does not synchronise the image</p> <ul style="list-style-type: none"> <li>For DVB mode</li> </ul>
	Reset to Defaults	<p>Press the OK button to reset the current Sound Mode, [Balance], [Headphone Volume] and [Surround] to the default settings</p>
Network	Connection Test, Network Connection, Wireless Network Settings, IP/DNS Settings	<p>Sets the network setting to use in your network environment (p. 72, 73)</p>
	Network Link Settings	<p>Sets to control the TV with the devices connected to the network (p. 71)</p>

Menu	Item	Adjustments / Configurations (alternatives)
Network	Software Update	Checks for available software updates from the Panasonic website
	New Software Message	Selects whether to give a notification message when new software is found via network <b>[Off] / [On]</b>
	Network Status	Displays the network status (MAC Address, current network settings, etc.)
Timer	Timer Programming	Sets a timer to record or remind forthcoming programmes (p. 50) • For DVB mode
	Off Timer	Sets the duration of time until the TV automatically goes into Standby mode <b>[Off] / [15] / [30] / [45] / [60] / [75] / [90] (minutes)</b> (p. 21)
	Auto Standby	Sets the duration of time that the TV will remain on when no operation is performed <b>[Off] / [2] / [4] (hours)</b> • Starting Timer Programming automatically does not affect this function. • Automatic input switching with the connected equipment affects this function and time-count will be reset. • The notification message will appear 3 minutes before going into Standby mode.
Setup	Eco Navigation	Automatically sets the TV to the most suitable energy-saving mode • If you press the OK button, the following items are set as below: [Eco Mode], [VIERA Link], [Power off Link], [Standby Power Save], [Power Save] ➔ [On] [Intelligent Auto Standby] ➔ [On (No reminder)] [Auto Standby] ➔ [2 hours]
	VIERA Link	Sets to use VIERA Link functions <b>[Off] / [On]</b> (p. 82)
	HDMI Content Type	Automatically adjusts the picture settings according to the received HDMI content via HDMI cable <b>[Off] / [Auto]</b> • This function is available if the connected equipment supports HDMI Content Type. • The content type information will be displayed for several seconds when this function works.
	AV1 out	Chooses the signal to be transmitted from the TV to Q-Link <b>[TV] / [AV2] / [Monitor]</b> <b>[Monitor]:</b> Image displayed on screen • Component and HDMI signals cannot be output.
	Power on Link	Sets to use Power on Link function <b>[Off] / [On]</b> (p. 81, 82)
	Power off Link	Sets to use Power off Link function <b>[Off] / [On]</b> (p. 81, 82)
	Standby Power Save	Controls the connected equipment to reduce power consumption in Standby <b>[Off] / [On]</b> (p. 83) • This function is available when [VIERA Link] is set to [On] and [Power off Link] is set to [On].
	Link Settings	



Menu	Item	Adjustments / Configurations (alternatives)
Link Settings	Intelligent Auto Standby	Makes non-watched or non-used connected equipment go into Standby mode to reduce the power consumption <b>[Off] / [On (With reminder)] / [On (No reminder)]</b> (p. 83) • This function is available when [VIERA Link] is set to [On].
	Download	Downloads channel, language and country / region settings to Q-Link or VIERA Link compatible equipment connected to the TV • DVB-C channel setting cannot be downloaded.
Setup	Child Lock	Applies access control for channels or inputs to prevent unwanted access (p. 53)
	Favourites Edit	Creates a list of favourite channels (p. 46) • Not valid on Analogue mode
	Channel List	Skips the unwanted channels or edits channels (p. 47)
	Auto Setup	Automatically searches for the receivable channels (p. 44, 45)
	Manual Tuning	Searches for the channels manually (p. 48)
	Update Channel List	Updates the channel list while keeping your settings (p. 49) • For DVB mode
	Favourite Network	Selects your favourite network for each broadcasters (only available in some countries) • For DVB mode
	New Channel Message	Selects whether to give a notification message when a new channel is found <b>[Off] / [On]</b> (p. 49) • For DVB mode
	Service Replacement	Set to [On] to enable a message to switch to the available service (only available in some countries) <b>[Off] / [On]</b> • For DVB-C mode
	Signal Condition	Checks the signal condition (p. 49) • Not valid on Analogue mode
Attenuator	Automatically reduces the DVB-C signal to avoid the interference <b>[Off] / [On]</b> • If the DVB-C signal is too strong, the interference may occur. In this case set to [On] to reduce the signal automatically.	
Add TV Signal	Adds the TV mode • This function is available if you skip any modes to tune in [Auto Setup] for first using the TV. • To operate, refer to the "Auto Setup" operations for first using the TV (p. 14).	

Menu	Item	Adjustments / Configurations (alternatives)
Language	OSD Language	Changes language for on-screen displays
	Preferred Audio 1 / 2	Selects the first and second preferred language for DVB multi audio (depending on the broadcaster)
	Preferred Subtitles 1 / 2	Selects the first and second preferred language for DVB subtitles (depending on the broadcaster) • To display subtitles ➔ (p. 20)
	Preferred Teletext	Selects the preferred language for DVB teletext service (depending on the broadcaster)
Setup Display Settings	Preferred Subtitle Type	Selects the preferred subtitle type <b>[Standard]</b> / <b>[Hard of Hearing]</b> • [Hard of Hearing] provides aids in understanding and enjoyment with DVB subtitles (depending on the broadcaster). • [Preferred Subtitles 1 / 2] in [Language] are given priority.
	Teletext	Teletext display mode <b>[TOP (FLOF)]</b> / <b>[List]</b> (p. 26)
	Teletext Character Set	Selects teletext language font <b>[West]</b> / <b>[East1]</b> / <b>[East2]</b> <b>[West]</b> : English, French, German, Greek, Italian, Spanish, Swedish, Turkish, etc. <b>[East1]</b> : Czech, English, Estonian, Lettish, Rumanian, Russian, Ukrainian, etc. <b>[East2]</b> : Czech, Hungarian, Lettish, Polish, Rumanian, etc.
	Default Guide	Selects the default TV Guide type when the GUIDE button is pressed (only available in some countries) <b>[Channel List]</b> / <b>[TV Guide]</b> <b>[TV Guide]</b> : Electronic Programme Guide (EPG) is available. • To use EPG ➔ (p. 23) <b>[Channel List]</b> : The channel list will appear instead of EPG.
	Input Labels	Accesses the input labels list to select the label of each input mode or set to skip unconnected one for easier identification and selection in [TV Selection] (p. 19), [Input Selection] (p. 28) or banner • To name each input mode freely, select [User input] and set characters (maximum 10 characters). • To skip the input mode, select [Skip].
	Banner Display Timeout	Sets how long the Information banner stays on screen <b>[0 (No display)]</b> / <b>[1]</b> / <b>[2]</b> / <b>[3]</b> / <b>[4]</b> / <b>[5]</b> / <b>[6]</b> / <b>[7]</b> / <b>[8]</b> / <b>[9]</b> / <b>[10] (seconds)</b>
	VIERA Connect Banner	Sets the VIERA Connect introduction banner display <b>[Off]</b> / <b>[On]</b> (p. 18, 19)
	Playing Time Display	Set to [On] to display a continuous record of time spent using Game mode in the top right of the screen every 30 minutes <b>[Off]</b> / <b>[On]</b> • This function is available when [Viewing Mode] is set to [Game]. ➔ (p. 36)
	Data Service Application	Sets to use Hybrid Broadcast Broadband TV application (depending on the selected country and broadcaster) <b>[Off]</b> / <b>[Auto Start Off]</b> / <b>[Auto Start On]</b> (p. 54) • For DVB mode
	Radio Mode	Sets the timer for turning off the screen automatically when a radio channel is selected <b>[Off]</b> / <b>[5]</b> / <b>[10]</b> / <b>[15]</b> / <b>[20] (seconds)</b> • The sound is active even if the screen turns off. This function is effective in reducing power consumption when listening to a radio channel. • Press any buttons except Standby, Volume Up / Down and MUTE buttons to turn the screen on. • Not valid on Analogue mode

Menu	Item	Adjustments / Configurations (alternatives)		
Setup	Common Interface	Sets to watch encrypted channels, etc. (p. 55)		
	DivX® VOD	Displays DivX VOD registration code (p. 92)		
	Advance	Enables the advanced picture settings <b>[Off]</b> / <b>[On]</b> <ul style="list-style-type: none"> <li>• Set to <b>[On]</b> to display the advanced items in the Picture Menu. (p. 59)</li> </ul>		
	System Menu	USB Keyboard Layout	Selects the language that your USB Keyboard supports <ul style="list-style-type: none"> <li>• For the information of using USB Keyboard ➔ (p. 94)</li> </ul>	
		Shipping Condition	Resets all settings to the original condition (p. 56)	
		System Update	Downloads new software to this TV (p. 57)	
		Software Licence	Displays the software licence information	
		System Information	Displays the system information of this TV	
		Device Information	Displays the device information of this TV	
	Other Settings	GUIDE Plus+ Settings	Update	Performs the update of the GUIDE Plus+ schedule and advertising information for the GUIDE Plus+ system (only available in some countries) (p. 24)
			Postcode	Sets your postcode to display advertisements in the GUIDE Plus+ system (only available in some countries) (p. 24)
			System Information	Displays the system information of the GUIDE Plus+ system (only available in some countries)
		Power on Preference	Automatically selects the input when the TV is turned on <b>[TV]</b> / <b>[AV]</b> <ul style="list-style-type: none"> <li>• Set to <b>[TV]</b> to view picture from TV tuner. Set to <b>[AV]</b> to view input from the external equipment connected to the AV1 or HDMI1 terminal, e.g. set top box.</li> <li>• The external equipment must be switched on and sending a control signal for automatic switching at power on to occur.</li> </ul>	
		Power Save	Reduces brightness of the picture to economise on power consumption <b>[Off]</b> / <b>[On]</b>	
Time Zone		Adjusts the time data <ul style="list-style-type: none"> <li>• The time data will be corrected based on GMT.</li> </ul>		

\*The settings in [Tuning Menu] are applicable only for the selected TV mode. The menu name varies depending on the TV mode. ([DVB-C Tuning Menu] / [DVB-T Tuning Menu] / [Analogue Tuning Menu])

- A different menu will be displayed when [Advance] in the Setup Menu is set to [On] or in the mode of PC input, Media Player or network service operations. (p. 58, 59, 61 - 68, 75 - 78)
- Only available items can be selected.

# Retuning from Setup Menu

Automatically retune the channels received in the area.

- This function is available if channel tuning is already performed.
- Only the selected mode is retuned. All the previous tuning settings are erased.
- If Child Lock PIN number (p. 53) has been set, the PIN number is required.
- If tuning has not been done completely → **[Manual Tuning]** (p. 48)

 
## DVB-C, DVB-T, Analogue channels

### 1 Select DVB-C, DVB-T or Analogue

→ (p. 19)




### 2 Display the menu and select [Setup]



① select  
② access

### 3 Select [DVB-C Tuning Menu], [DVB-T Tuning Menu] or [Analogue Tuning Menu]

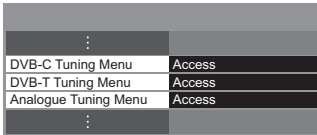


① select  
② access

### 4 Select [Auto Setup]



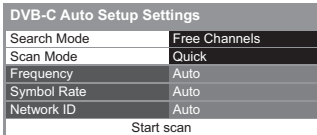① select  
② access

### 5 Set the Auto Setup settings (DVB-C)



select  
access / store





- After settings, select [Start scan].


- [Scan Mode]  
**[Full]**: Scans the whole frequency range.  
**[Quick]**: Scans the suitable frequency in your country.
- Normally set [Frequency], [Symbol Rate] and [Network ID] to [Auto].  
 If [Auto] is not displayed or if necessary, enter the value specified by your cable provider with numeric buttons.

## Start Auto Setup (Settings are made automatically)

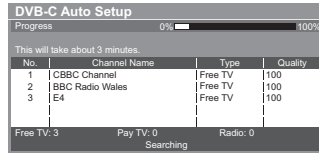
 
DVB-C:



DVB-T:

 

Analogue:

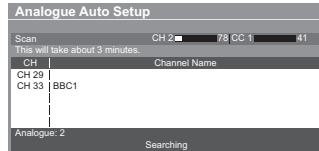 


- The channel, language and country / region settings are downloaded to Q-Link or VIERA Link compatible equipment connected to the TV.

**When the operation is completed, the channel at the lowest position will be displayed.**
 
## Auto setup using the buttons on the TV

For Auto Setup, using the buttons on the TV (p. 10)

- 1 Press the F button repeatedly until [Auto Setup] appears  
F
- 2 Access [Auto Setup]  
TV
- 3 Set the search mode and scan mode (DVB-C)  
↑ ↓ (select the item)  
TV (set)  
AV (store)
- 4 Start [Auto Setup]  
TV



- To return to TV  
F
- Control panel OSD appears when pressing the control panel button.

# Tuning and Editing Channels

You can retune channels or make your favourite channel lists, skip unwanted channels, etc.

## 1 Select the mode

➔ (p. 19)

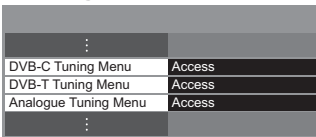


## 2 Display the menu and select [Setup]



① select  
② access


## 3 Select [DVB-C Tuning Menu], [DVB-T Tuning Menu] or [Analogue Tuning Menu]



① select  
② access

• The displayed item depends on the selected mode.

## 4 Select one of the following functions

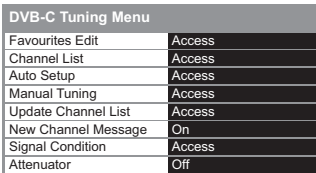

① select  
② access


• The function items vary depending on the country you select (p. 14).  
• [Auto Setup] ➔ **“Retuning from Setup Menu”** (p. 44, 45)

### List favourite DVB channels [Favourites Edit]

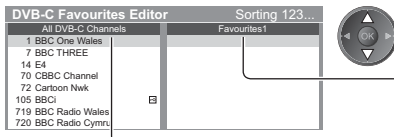Create your favourite channel lists from various broadcasters (up to 4: [Favourites]1 to 4). The DVB Favourites lists are available from “Category” in the Information banner (p. 20) and the TV Guide screen (p. 23).

#### 1 Select a channel to list (🔒: Encrypted channel)

Example: DVB-C



• To sort channel names in alphabetical order



• To display other Favourites



• To change the category



• To add continuous block of channels to the list at once




① make the block



② add

#### 2 Add it to the Favourites list

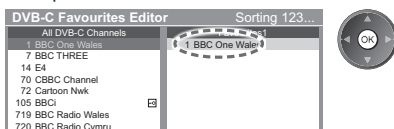Example: DVB-C



• To add all channels to the list




② add

## ■ To edit Favourites list

 While the cursor is in the Favourites field to edit

- To move the channel




- To delete the channel



- To delete all channels



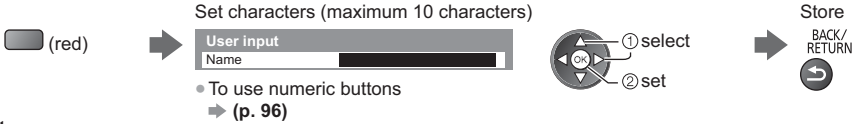- To name the Favourites



- To use numeric buttons  
➔ (p. 96)

### 3 Store



## Skip unwanted channels, Edit Channels [Channel List]

 
You can hide (skip) unwanted channels.

The hidden channels cannot be displayed except in this function.

Select a channel and reveal / hide

Example: DVB-C

All DVB-C Channels		Sorting 123...
<input type="checkbox"/>	70	CBBC Channel
<input type="checkbox"/>	72	Cartoon Nwk
<input type="checkbox"/>	105	BBCi
<input type="checkbox"/>	719	BBC Radio Wales
<input type="checkbox"/>	720	BBC Radio Cymru
<input type="checkbox"/>	1	BBC ONE Wales
<input type="checkbox"/>	7	BBC THREE



- : [Reveal]
- : [Hide] (skip)

- To reveal all channels



- To sort channel names in alphabetical order (DVB)




- To change the category (DVB)



## ■ To edit channels

 - To swap / move the channel position (if available)



Example: Analogue

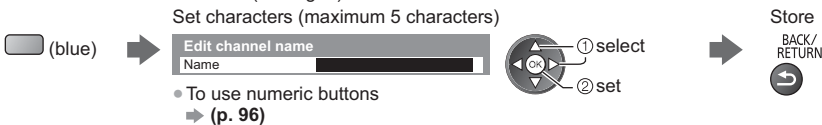


Channel name  
Channel position

- To retune each channel ([Manual Tuning] (p. 48)) (Analogue)



- To rename the channel name (Analogue)



- To use numeric buttons  
➔ (p. 96)

### Note

- If a VCR is connected only with the RF cable in Analogue mode, edit [VCR].

## Set DVB channel manually [Manual Tuning]

Normally use [Auto Setup] or [Update Channel List] to retune DVB channels.

If tuning has not been done completely or for adjusting the direction of the aerial, use this function.

- All channels found will be added to the Channel List.

### DVB-C:

#### 1 Enter the frequency

DVB-C Manual Tuning			
Frequency	474.00 MHz		
Symbol Rate	Auto		
Service ID	Auto		
Start scan			
Signal Quality	100%		
Signal Strength	100%		
No.	Channel Name	Type	New



#### 2 Select [Start scan]

 


- Normally set [Symbol Rate] and [Service ID] to [Auto].

### DVB-T:

#### 1 Adjust frequency for each channel

DVB-T Manual Tuning			
Frequency	[CH21]	474.00 MHz	
Signal Quality	100%		
Signal Strength	100%		
No.	Channel Name	Type	New



#### 2 Search



- Set where the level of [Signal Quality] becomes the maximum.

## Set Analogue channel manually [Manual Tuning]

### [Fine Tuning]:

Use to make small adjustments to the tuning of an individual programme (affected by weather conditions, etc.).

### [Manual Tuning]:

Set Analogue channel manually after Auto Setup.

- Set [Sound System] and [Colour System], and then perform this function. Normally set [Colour System] to [Auto].
- If a VCR is connected only with the RF cable, select channel position [0].

Analogue Manual Tuning			
1 BBC1	CH33		
Fine Tuning	← 2 →		
Manual Tuning	2	78	41
Sound System	SC1		
Colour System	Auto		
Store			

SC1: PAL B, G, H / SECAM B, G  
 SC2: PAL I  
 SC3: PAL D, K / SECAM D, K  
 F: SECAM L, L'

#### 1 Select the channel position



 
#### 3 Search



#### 2 Select the channel




#### 4 Select [Store]





## Update DVB channel automatically [Update Channel List]

 
You can add new channels, delete removed channels, update channel name and position automatically to the channel list.



- The channel list is updated while keeping your settings in [Favourites Edit], [Channel List], [Child Lock], etc.
- Depending on the signal condition, the update may not work properly.

## Display a notification message [New Channel Message] (DVB)

 Selects whether to give a notification message when a new DVB channel is found.



- Selecting OK will perform [Update Channel List].

## Check DVB signal [Signal Condition]

Selects a channel and checks the DVB signal condition.

A good Signal Strength is not an indication of suitable signal for DVB reception.

 
Use the Signal Quality indicator as follows.

- Green bar: Good
- Yellow bar: Poor
- Red bar: Bad (Check the Terrestrial aerial or cable)

- To change the channel



Example:



These bars show the maximum signal value of the selected channel.

# Timer Programming

## Timer Programming from Menu

The Timer Programming menu allows you to choose programmes that you want to remind watching or record to the external recorder. At the correct time, the TV will tune to the correct channel even if the TV is in Standby mode. TV Guide may also be used to set timer programming event (p. 25).

- This function is not available in Analogue mode.
- Timer Programming can store up to 15 events.
- Timer Programming only works reliably if correct time information is received via the signal from the broadcaster or service provider.
- For recording using Timer Programming, the TV must be either on or in Standby. For reminders to be displayed, the TV must be on.
- No other channel can be selected while the recording of Timer Programming is in progress.
- Recording an encrypted (copy-protected) programme may not be possible.
- When recording programmes to the external recorder, be sure to make the proper settings on the recorder connected to the TV. If a recorder compatible with Q-Link, VIERA Link or similar technologies is connected to the TV (p. 81, 82) and [Link Settings] (p. 40) are completed, no setting of the recorder is required. Also read the manual of the recorder.
- If the recorder is not compatible with Q-Link, VIERA Link or similar technologies, make timer programming of the recorder. For preparations of a recorder, read the manual of the recorder.
- Recording to the external equipment via SCART is always in standard definition (composite video), even if the original programme is in high definition.
- 2 minutes before the starting time, a reminder message appears if you are watching TV.
  - To remove the message and start the programming
  - To cancel the programming



### 1 Select DVB-C or DVB-T

→ (p. 19)

TV

### 2 Display the menu and select [Timer]

MENU



### 3 Select [Timer Programming]

Timer Programming	Access
Off Timer	Off
Auto Standby	Off



## Set timer programming event details

### 1 Start making the settings



### 2 Select the function ([Ext Rec.] or [Reminder])



#### [Ext Rec.]:

Records the programme to the external recorder.

When the start time comes, the channel will be switched automatically and the video and audio signals will be output. 2 minutes before the starting time, a reminder message appears if you are watching TV.

#### [Reminder]:

Reminds you to watch the programme.

When you are watching TV, a reminder message appears 2 minutes before the start time.

Press the OK button to switch to the programmed channel.

### 3 Set the channel, date and time (repeat the operations as below)

Set items in the order of 1 to 4.



select the item



set

• 1, 3 and 4 can also be entered with numeric buttons.



### ! Overlapped timer programming events

Timer Programming		Wed 26.10.2011 10:46			
Function	No.	Channel Name	Date	Start	End
Reminder	D 7	BBC7 <TIMER>	Wed 26.10.2011	17:00	18:30 (90 min.)
Ext Rec.	D 1	BBC1 <TIMER>	STTL Wed 26.10.2011	18:00	20:00 (120 min.)
Ext Rec.	C 3	ITV1 <TIMER>	Thu 27.10.2011	21:30	22:30 (60 min.)
---	--	--	--	--	--

Records with subtitles (if available)  
 • To indicate this  
 (yellow)  
 (Press again to remove subtitles)

Duration (automatic display)

[C]: DVB-C

[D]: DVB-T

• You cannot change the mode within the menu.

#### 1 Channel number

#### 2 Date



one day ahead

daily or weekly (press repeatedly)

- [Daily Sun-Sat]: Sunday to Saturday
- [Daily Mon-Sat]: Monday to Saturday
- [Daily Mon-Fri]: Monday to Friday
- [Weekly Sat/Fri/Thu/Wed/Tue/Mon/Sun]: Same time on the same day every week

#### 3 Starting time

#### 4 Ending time

### 4 Store



## ■ To edit a timer programming event

### Select the event



- To change a timer programming event



Correct as necessary (p. 51)

- To delete a timer programming event



- To record with subtitles (if available)



• Each time pressed:  
auto ↔ off

- To cancel a timer programming event temporarily



• Each time pressed:  
cancel ↔ stop cancelling

## ■ To unlock the tuner and stop recording



EXIT



### Note

- Check that the LED is orange. If not, timer programming events are not active or not stored.
- Timer Programming reminder messages will remain displayed until one of the following occurs:
  - You press the OK button to view the programme or the EXIT button to cancel the reminder.
  - The timer programming event that the reminder is set for ends.
- “!”” identifies that two or more timer programming events are overlapped. [Ext Rec.] is given priority over [Reminder]. As for the overlapped recording events, the first event starts and finishes as programmed. The next event can then start.
- The recording of Timer Programming will automatically change to the programmed channel a few seconds before the start time.
- To stop recording the timer programming event, it may be necessary to stop the recorder manually.
- The recording of Timer Programming will be performed even if the TV is in [Pause Live TV] recording (p. 84). In this case, [Pause Live TV] recording will be cancelled.

# Child Lock

You can lock specific channels / AV input terminals and control who watches them. When the locked channel / input is selected, a message appears. Enter the PIN number to watch.

## 1 Display the menu and select [Setup]

 


## 2 Select [Child Lock]



### Control channel audience [Child Lock]

#### 1 Enter the PIN number (4 digits)





- Enter the PIN number twice at first setting.
- Make a note of the PIN number in case you forget it.
- "0000" may be stored as the default PIN number which depends on the country you select (p. 14).

#### 2 Select [Child Lock List]


  
#### 3 Select the channel / input to be locked



🔒 : Appears when the channel / input is locked

#### • To cancel

Select the locked channel / input



#### • To sort channel names in alphabetical order



#### • To cancel all locks



#### • To lock all



#### • To jump to the top of the next input



### ■ To change the PIN number

#### 1. Select [Change PIN]



 
#### 2. Enter a new PIN number twice



### ■ To set Parental Rating

To watch the DVB programme that has the rating information over the selected age, enter the PIN number to watch (depending on the broadcaster).

Select [Parental Rating] and set an age for the restriction of programmes.



- The availability of this function depends on the country you select (p. 14).

#### Note

- Setting [Shipping Condition] (p. 56) erases the PIN number and all settings.

# Using Data Service Application

You can enjoy Hybrid Broadcast Broadband TV application that is one of the interactive data services for digital broadcasting.

- To use Hybrid Broadcast Broadband TV application fully, you need a broadband network environment. Ensure the network connections and network settings are completed.
  - ➔ “Network connections” (p. 70), “Network Setup” (p. 71 - 74)
- Not all the data service are available depending on the country, area and broadcaster.
- Depending on the connection environment, the internet connection may be slow or may not be successful.

## 1 Select DVB-C or DVB-T

➔ (p. 19)



 
 
## 2 Display the menu and select [Setup]



## 3 Select [Display Settings]



## 4 Select [Data Service Application] and set to [Auto Start On]



**Notification message will appear when the application is available. Follow the on-screen instructions.**

### Note

- Operations may vary depending on the broadcaster. Follow the on-screen instructions.
- On-screen instructions may not correspond to the remote control buttons.

### ■ To check the availability of the application



“D” is displayed if programme has Hybrid Broadcast Broadband TV application

### ■ To stop the application



# Using Common Interface

The Common Interface Module menu provides access to software contained on Common Interface (CI) Modules.

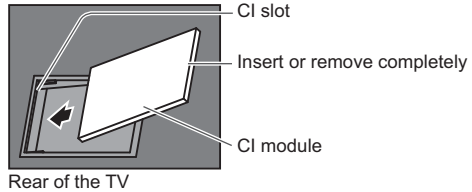
- This function may not be available in some countries or regions.
- Video and audio signals may not be output depending on broadcasts or services.
- Although CI module may enable you to view some services, this TV does not guarantee all services (e.g. encrypted pay-TV channels).

Please use only the approved CI module by the broadcaster.

Consult your local Panasonic dealer or broadcasters for more information and conditions of the services.

## Caution

- Turn off Mains power On / Off switch whenever inserting or removing the CI module.
- If a view card and a card reader come as a set, first insert the card reader, then insert the view card into the card reader.
- Insert the module in the correct direction.
- Remove the CI module from the TV when placing the TV facing upward. This may cause damages to the CI module and CI slot.



## Insert the CI module (optional)

- The features that appear on screen are dependent on the contents of the selected CI module.
- Normally encrypted channels will appear. Follow the on-screen instructions.  
If encrypted channel does not appear, perform below.
- For more details, read the manual of the CI module, or check with the broadcaster.

## 1 Select DVB-C or DVB-T

➔ (p. 19)



## 2 Display the menu and select [Setup]

MENU



- ① select
- ② access

## 3 Select [Common Interface]



- ① select
- ② access

## 4 Access Common Interface and follow the on-screen instructions



- On-screen instructions may not correspond to the remote control buttons.

# Shipping Condition

Resets the TV to its original condition, i.e. no channels tuned in. All settings are reset (channels, picture, sound settings, etc.).

- To retune TV channels only, e.g. after moving house ➔ **“Retuning from Setup Menu”** (p. 44, 45)

 
## 1 Display the menu and select [Setup]



## 2 Select [System Menu]




## 3 Select [Shipping Condition]



### Restore Settings [Shipping Condition]
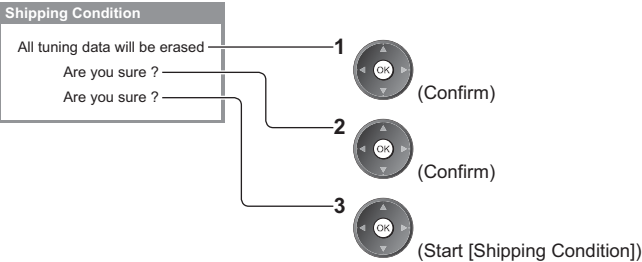
#### 1 Check the message and initialise



#### 2 Follow the on-screen instructions

Reset to Factory Shipping Condition Completed.  
TV will automatically restart.  
Do not turn off

- [Auto Setup] will automatically start. (p. 14)



# Updating the TV Software

A new version of software may be released for download to enhance the performance or operations of the TV. If there is an update available, a notification message is displayed when the channel has the update information.

- To download



(Press the EXIT button not to download)

You can update new software automatically or update manually.

## 1 Display the menu and select [Setup]



① select  
② access

## 2 Select [System Menu]



① select  
② access

## 3 Select [System Update]

 


① select  
② access

## Update TV's software system [System Update]

### ■ To update automatically

Select [Auto Update Search in Standby]




select  
access / store

- Every time you set, the TV automatically performs a search in Standby and downloads an update, if any software updates are available.
- The automatic updating is performed under the following conditions:
  - Standby (TV turned off with the remote control)
  - Recording of Timer Programming or Direct TV Recording is not in progress.

If System Update is performed, the software will be updated (it may change TV functions). If you do not want to do so, set [Auto Update Search in Standby] to [Off].

### ■ To update immediately
 
#### 1 Select [System Update Search Now]



① select  
② access

#### 2 Searches for an update (for several minutes) and displays a corresponding message if any

#### 3 Download



### Note

- Download may take for about 60 minutes.
- During software download and update, DO NOT switch off the TV.
- The notification message might be a reminder. In this case, the schedule information (the date that the new version can be used) will appear. You can set the reservation for update. The update will not start when the TV is off.

# Displaying PC Screen on TV

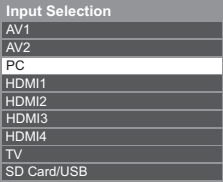
The screen of the PC connected to the TV can be displayed on the TV.  
 You can also listen to PC sound with the audio cable connected.

- To connect PC ➔ (p. 87)

## 1 Select the external input

AV



## 2 Select [PC]



- Corresponding signals ➔ (p. 95)
- If [H-freq.] or [V-freq.] is shown in red, the signals may not be supported.

## PC menu setting

- To make settings ➔ “How to Use Menu Functions” (p. 35)

Menu	Item	Adjustments / Configurations (alternatives)
Setup PC Setup	Input Resolution	Switches to a wide view: VGA (640 × 480 pixels) / WVGA (852 × 480 pixels) / XGA (1,024 × 768 pixels) / WXGA (1,280 × 768 pixels, 1,366 × 768 pixels) • Options change depending on signals
	Clock	Set to the minimum level if noise occurs
	H-pos	Adjusts horizontal position 
	V-pos	Adjusts vertical position 
	Clock Phase	Eliminates flicker and distortion • Adjust after Clock adjustment • Set to the minimum level if noise occurs
	Sync	Chooses another synchronous signal if the image is distorted <b>[H &amp; V] / [On Green]</b> <b>[H &amp; V]:</b> by the horizontal and vertical signals from your PC <b>[On Green]:</b> by the green signal from your PC (if available)
	Reset to Defaults	Press the OK button to reset [PC Setup] to the default settings

- Other items ➔ (p. 36 - 43, 59)

### Note

- For HDMI-compatible PC, possible to connect to HDMI terminals (HDMI1 / HDMI2 / HDMI3 / HDMI4) by using HDMI cable (p. 94).

# Advanced Picture Settings

You can adjust and setup the detailed picture settings for each input and Viewing Mode.

- To use this function completely, set [Advance] to [On] in the Setup Menu. ➔ (p. 43)
- For PC input mode, some functions are available without setting [Advance].

 
## 1 Select the input mode to adjust and setup

➔ (p. 19, 28)




## 2 Display the menu and select [Picture]

MENU



## 3 Select [Viewing Mode] and set the mode

 

## 4 Select [Advanced Settings]



## Adjust the detailed picture settings [Advanced Settings]

Advanced Settings	
White Balance	Access
Colour Management	Access
Gamma	Access
...	



- [Colour Management] is available when [Viewing Mode] in the Picture Menu is set to [True Cinema].

Menu	Item	Adjustments / Configurations (alternatives)	
Picture	White Balance	R-Gain, G-Gain, B-Gain	Adjusts the white balance of bright red / green / blue area
		R-Cutoff, G-Cutoff, B-Cutoff	Adjusts the white balance of dark red / green / blue area
		Reset to Defaults	Press the OK button to reset to the default White Balance
	Colour Management	R-Hue, G-Hue, B-Hue	Adjusts the picture hue of red / green / blue area
		R-Saturation, G-Saturation, B-Saturation	Adjusts the saturation of red / green / blue area
		R-Luminance, G-Luminance, B-Luminance	Adjusts the luminance of red / green / blue area
		Reset to Defaults	Press the OK button to reset to the default Colour Management
	Gamma	Gamma	Switches the gamma curve [1.8] / [2.0] / [2.2] / [2.4] / [2.6] • Please note the numerical values are reference for the adjustment.
		Reset to Defaults	Press the OK button to reset to the default Gamma

# Using Media Player

Media Player allows you to enjoy photo, video or music recorded on an SD Card and a USB Flash Memory. VIERA IMAGE VIEWER is the function of the easy viewing for photos or videos recorded on an SD Card on the TV screen by simply inserting into the SD Card slot.

Photo mode:

Still pictures recorded by digital cameras will be displayed.

Video mode:

Moving pictures recorded by digital video cameras will be played back.

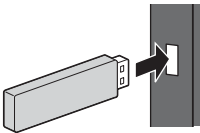
Music mode:

Digital music data will be played back.

- During the operation, audio signal is output from AV1, DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals. But no video signals are output. AV1 can output audio signal if [AV1 out] is set to [Monitor] in the Setup Menu (p. 40). To use HDMI2 with ARC function, connect an amplifier that has ARC function (p. 80) and set to use theatre speakers (p. 86).
- [Date] shows the date on which the recording was made by the recording equipment. The file without record of the date is shown "\*/\*\*/\*\*\*\*\*".
- The picture may not appear correctly on this TV depending on the recording equipment used.
- Display may take some time when there are many files and folders.
- Partly degraded files might be displayed at a reduced resolution.
- Picture setting may not work depending on the conditions.
- The folder and file names may be different depending on the digital camera or digital video camera used.

## ■ To insert or remove the SD Card / USB Flash Memory

### USB Flash Memory




- Insert or remove straightly and completely.
- Connect the USB Flash Memory to the USB 1, 2 or 3 port.

### SD Card

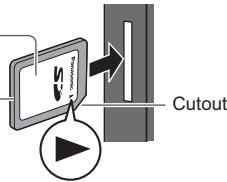① Gently insert the SD Card with the label surface facing front.

② Push until a click is heard. To remove, push it again.



- When connecting a USB device to the USB 1 port, there may be a difficulty to insert / remove the SD Card. In this case, confirm a USB device is not active and insert / remove the SD Card carefully.

- Check the type of terminals and devices are correct when connecting.
- For the information of the devices ➡ **"Devices for recording or playing back"** (p. 93)
- For the supported file format ➡ **"Supported file format in Media Player and media servers"** (p. 90, 91)

## Starting Media Player

### 1 Insert the SD Card or USB Flash Memory to the TV

➔ (p. 60)

### 2 Confirm the message and start Media Player



• You can also start by pressing following button.



➔ “Watching External Inputs” (p. 28)

### 3 Select the device to access



① select  
② access

Selected device name

• If two or more devices are not connected, this step will be skipped.

### 4 Select the content



① select  
② access

[Photo] ➔ (p. 62)

[Video] ➔ (p. 66)

[Music] ➔ (p. 68)

### 5 Enjoy Media Player

Example: Thumbnail - [All photos]



• To display the information of the highlighted content



File name	1/48
Date	p1010001.JPG
Pixel	23/10/2011
	1600X1200

File number / Total file number

Selected device name

#### Note

- You can also access each mode directly by using VIERA TOOLS. ➔ (p. 34)
- Select the appropriate device and content for playing back each file.
- You can use the following buttons during playback. Set the code of the remote control to “73” (p. 29).



## Change the device

You can change to the other device directly in the same mode if two or more devices are connected.

### 1 While the thumbnail is displayed, display the device selection

(yellow)

### 2 Select the device to access



Selected device name



① select  
② access

## Change the contents

You can switch to the other mode of Media Player from the thumbnail view.

- The mode can be switched in the current device.

### 1 While the thumbnail is displayed, display the contents selection

 (blue)

### 2 Select the content



## Photo mode

- Supported file format ➔ (p. 90)


The thumbnail of all the photos in the SD Card or USB Flash Memory will be displayed.

Example: Thumbnail - [All photos]



- To change the size of photos on a thumbnail screen



 : Error display

### [Single view] - Photos are displayed one at a time.

Select the file from the thumbnail of photos to be viewed



Example:



Operation guide

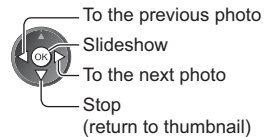
- To display / hide the operation guide



- To return to thumbnail



- To operate Single view



- To rotate 90°

 (blue)

### [Slideshow] - Slideshow completes when all photos are viewed within the current thumbnail.

#### 1 Select the file from the thumbnail of photos for the first view



- To display / hide the operation guide



- To pause (return to Single view)



#### 2 Start Slideshow

 (red)



- To return to thumbnail



- To change the back ground music ➔ "Photo Settings" (p. 64)

## ■ To sort by folder, recorded date or recorded month

### 1 Display the view selection in the thumbnail view

 (green)

### 2 Select the sort type



#### [Folder view]:

Displays the thumbnail grouped by folder.

- The files which are not into a folder will be collected to the folder named “/”.


#### [Sort by Date] / [Sort by Month]:

Displays the thumbnail grouped by the same date or month.

- The group of the photos without a recorded date is shown as [Unknown].

- To return to the thumbnail of all photos

  (green)



## Multi Shot 3D

This TV can create the 3D photo using a pair of photos in the SD Card and save it into the same SD Card.

- This TV can also create the 3D photo from photos in the USB Flash Memory, but cannot save it.
- This function is available with photos recorded by digital cameras.
- Depending on the photos you select, the created 3D photo may not be suitable or the 3D photo creation may not be possible. It is recommended to take a photo (for L) and then move your camera to the right about 5 cm and take another photo (for R).
- To view the created 3D photo with 3D effect, you need the 3D Eyewear ➔ **“Standard accessories”** (p. 6)

### 1 Display the option menu in the thumbnail view

OPTION



### 2 Select [Multi Shot 3D]



### 3 Select two photos for L (left) and R (right)




- You can only select photos of the same recorded date and same pixels.
- You may not be able to view the created 3D photo properly if you select the photos for L and R oppositely.

### 4 Create the 3D photo



 - If your selected photos are not suitable for the 3D photo, the error message will be displayed and will return to the photo selection screen (step 3).
- To save the 3D photo in the SD Card



After finishing saving the photo, the photo selection screen will be displayed (step 3). Select photos again to create another 3D photo or exit from [Multi Shot 3D] mode.

## ■ To enjoy the saved 3D photos

Saved 3D photos are displayed in the Thumbnail screen. Wear the 3D Eyewear and enjoy the 3D photos.

Example: Thumbnail



## Photo Settings

Setup the settings for Photo mode.

### 1 Display the option menu

OPTION



### 2 Select [Slideshow Settings]



### 3 Select the items and set

Slideshow Settings	
Frame	Off
Colour Effect	Off
Transition Effect	Fade
Screen Mode	Normal
Burst Playback	Off
Interval	5 seconds
Repeat	On
Back Ground Music	



select

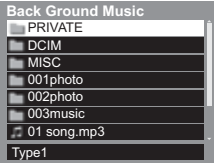

access / store

### Note

- Picture quality may become lower depending on the slideshow settings.
- Picture setting may not work depending on the slideshow settings.

Menu	Item	Adjustments / Configurations (alternatives)
Slideshow Settings	Frame	<p>Selects the frame type of the slideshow  <b>[Off] / [Multi] / [Collage] / [Drift (+ calendar)] / [Drift] / [Gallery (+ calendar)] / [Gallery] / [Cinema]</b></p> <p><b>[Multi]:</b>                      9 photos are displayed orderly at once.</p> <p><b>[Collage]:</b>                      Each photo is displayed at a random position and random scale.</p> <p><b>[Drift (+ calendar)] / [Drift]:</b>                      Photos are displayed like flow images.</p> <ul style="list-style-type: none"> <li>• You can select to display the calendar or not. The month of calendar is turned by pressing the left or right cursor button.</li> </ul> <p><b>[Gallery (+ calendar)] / [Gallery]:</b>                      The various sizes of photos in the frame are displayed.</p> <ul style="list-style-type: none"> <li>• You can select to display the calendar or not. The month of calendar is turned by pressing the left or right cursor button.</li> </ul> <p><b>[Cinema]:</b>                      Photos are displayed like old films (sepia tone).</p>
	Colour Effect	<p>Selects the colour effect of photos on Single view and Slideshow  <b>[Off] / [Sepia] / [Gray scale]</b></p> <ul style="list-style-type: none"> <li>• This function is not available when [Frame] is set to [Drift], [Gallery] or [Cinema].</li> </ul>
	Transition Effect	<p>Selects the transition effect for switching the photo during the slideshow  <b>[Off] / [Fade] / [Slide] / [Dissolve] / [Motion] / [Random]</b></p> <p><b>[Fade]:</b> The next photo fades in gradually.</p> <p><b>[Slide]:</b> The next photo slides and appears from the left side.</p> <p><b>[Dissolve]:</b> Each photo is dissolved when switching to the next photo.</p> <p><b>[Motion]:</b> Each photo is displayed with an effect of enlarging, reducing, moving up or moving down.</p> <p><b>[Random]:</b> Each transition is selected at random.</p> <ul style="list-style-type: none"> <li>• This function is available when [Frame] is set to [Off].</li> </ul>




Menu	Item	Adjustments / Configurations (alternatives)
Slideshow Settings	<b>Screen Mode</b>	Selects enlarged or normal viewing on Single view and Slideshow <b>[Normal] / [Zoom]</b> <ul style="list-style-type: none"> <li>This function is not available when [Frame] is set to [Collage], [Drift], [Gallery] or [Cinema] or when [Transition Effect] is set to [Motion].</li> <li>Depending on the photo size, it may not be fully enlarged to fill the screen, e.g. portrait style picture.</li> </ul>
	<b>Burst Playback</b>	Selects whether to display burst photos in a fast-paced slideshow mode <b>[Off] / [On]</b> <ul style="list-style-type: none"> <li>This function is not available when [Frame] is set to [Drift], [Gallery] or [Cinema] or when [Transition Effect] is set to [Motion].</li> </ul>
	<b>Interval</b>	Selects slideshow interval <b>[5] / [10] / [15] / [30] / [60] / [90] / [120] (seconds)</b> <ul style="list-style-type: none"> <li>This function is not available when [Frame] is set to [Drift], [Gallery] or [Cinema] or when [Transition Effect] is set to [Motion].</li> </ul>
	<b>Repeat</b>	Slideshow repeat <b>[Off] / [On]</b>
	<b>Back Ground Music</b>	Selects the back ground music during Photo mode <b>[Off] / [Type1] / [Type2] / [Type3] / [Type4] / [Type5] / [User] / [Auto]</b> <ul style="list-style-type: none"> <li>[Type1 - 5] are the fixed music each installed in this TV.</li> <li><b>[User]:</b> Music data in the device registered by yourself will be played back.</li> </ul> <p><b>To register the music</b></p> <ol style="list-style-type: none"> <li>Select the music file              Depending on the condition of the device, select folders until you reach the desired music file.</li> <li>Select [File] or [Folder]</li> </ol> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>① select ② access</p> </div> <div style="text-align: center;">  <p>① select ② set</p> </div> </div> <p>[File]: The selected music file will be registered.          [Folder]: All the music in the folder which contains the selected music file will be registered.</p> <ul style="list-style-type: none"> <li>If no music has been registered or the device which has the registered music is removed, no sound will be produced.</li> </ul> <p><b>[Auto]:</b> Music data stored in the root folder of the current device will be played back randomly.</p> <ul style="list-style-type: none"> <li>If there is no available music data, no sound will be produced.</li> </ul>

## Video mode

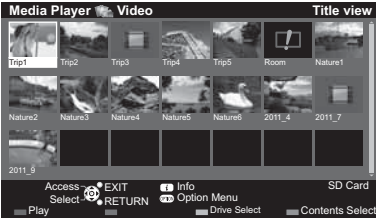- Supported file format ➔ (p. 90, 91)

The thumbnail of video titles in the SD Card or USB Flash Memory will be displayed.

Example: Thumbnail - [Title view]



: Error display

: The file does not support thumbnail view.

The preview will start when the title / scene is highlighted if it supports a preview.

- To turn off the preview ➔ **“Video Setup” (p. 67)**
- To playback the selected title

Select the title



Start playback

(red)

- If you stopped the last playback on the way, the confirmation screen is displayed to select whether to start from where you stopped last time or from the beginning.

### ■ Playback from the selected scene in the title (SD-Video or AVCHD)

Playback of the selected scene will start to the end of the title.

#### 1 Select the title



- The structure of titles and scenes may vary depending on the digital video camera used.
- To repeat playback ➔ **“Video Setup” (p. 67)**

#### 2 Select the scene



#### 3 Start playback

(red)

### ■ How to operate in the playback

Example: Playback



Operation guide      Information banner

- To display / hide the operation guide and information banner



- To the previous title / scene

(red)

- To the next title / scene

(green)

- To change aspect



 
- To return to thumbnail



- To operate the playback



- To jump to the specified time point



## ■ Video Setup

Setup the settings for Video mode.

- Menu items and selectable options vary depending on the content.

### 1 Display the option menu

 
OPTION



### 2 Select [Video Setup]



### 3 Select the items and set



Menu	Item	Adjustments / Configurations (alternatives)
Video Setup	Video Preview	Sets to start the preview of the title or scene in the thumbnail view <b>[Off] / [On]</b> <ul style="list-style-type: none"> <li>• Image may not be displayed for an instant in the thumbnail view. Set the preview <b>[Off]</b> to resolve this.</li> <li>• Only available in the thumbnail view</li> </ul>
	Multi Audio, Dual Mono Audio	Selects between selectable sound tracks (if available) <ul style="list-style-type: none"> <li>• It may take several seconds to change the sound.</li> <li>• Only available during playback</li> </ul>
	Subtitle	Subtitles On / Off (if available) <ul style="list-style-type: none"> <li>• Only available during playback</li> </ul>
	Subtitle Text	Selects the font type to display subtitles correctly (if available) <ul style="list-style-type: none"> <li>• Only available during playback</li> </ul>
	Aspect Change	<b>[Aspect1]</b> : Displays the content enlarged without distortion. <b>[Aspect2]</b> : Displays the content full-screen. <b>[Original]</b> : Displays the content original size. <ul style="list-style-type: none"> <li>• You can also change the aspect using the ASPECT button.</li> <li>• Aspect change may not work depending on the content.</li> <li>• Only available during playback</li> </ul>
	Repeat	Playback repeat within the title or selected file (depending on the content) <b>[Off] / [On]</b>
	Title	Selects from a group of titles (if available)


## Audio output Settings

 You can enjoy the multi-channel sound via an amplifier connected to DIGITAL AUDIO OUT or HDMI2 (ARC function) terminal.


- To confirm or change the current sound status ➔ (see above)

### 1 Display the menu and Select [Sound]

MENU



### 2 Select [SPDIF Selection] and set

 


Menu	Item	Adjustments / Configurations (alternatives)
Sound	SPDIF Selection	SPDIF: A standard audio transfer file format Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals <b>[Auto] / [PCM]</b> <b>[Auto]</b> : Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bitstream. DTS is output as DTS. MPEG is output as PCM. <b>[PCM]</b> : Digital output signal is fixed to PCM.

## Music mode

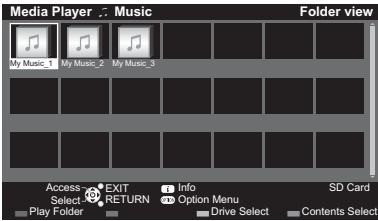- Supported file format ➔ (p. 91)

The thumbnail of music folders in the SD Card or USB Flash Memory will be displayed.

Example: Thumbnail - [Folder view]



- To play back the selected folder  
Select the folder



- Start playback  
[red] button

### ■ Playback from File view

Selected file will be played back.

#### 1 Select the folder



#### 2 Select the file

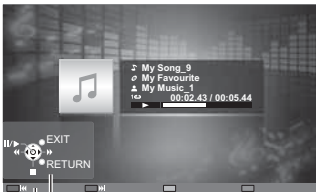


#### 3 Start playback



### ■ How to operate in the playback

Example: Playback




Operation guide

- To display / hide the operation guide



 - To operate the playback



- To the previous track



- To the next track



- To return to thumbnail



## Music Setup

Setup the setting for Music mode (only available in the thumbnail view).

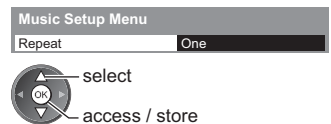
#### 1 Display the option menu



#### 2 Select [Music Setup]



#### 3 Set



**[Folder]:** Playback repeat within the selected folder

**[One]:** Playback repeat of the selected one file

# Using Network Services (DLNA / VIERA Connect)

## DLNA®

This TV is a DLNA Certified™ product.

DLNA (Digital Living Network Alliance) is a standard that makes DLNA Certified digital electronics easier and more convenient to use on a home network. To learn more, visit [www.dlna.org](http://www.dlna.org).

It allows you to share photos, videos (including 3D images) and music stored in the DLNA Certified media server (for example, PC with Windows 7 installed, DIGA Recorder, etc.) connected to your home network, and enjoy the contents on the TV screen.

It also allows you to control the TV with the DLNA Certified equipment connected to your home network. (DLNA Remote Control)

- For the supported file format ➔ (p. 90, 91)
- AVCHD and DivX files are not supported by DLNA functions of this TV, but can be played by Media Player (p. 60).

### ■ Media server

Store photos, videos or music into the DLNA Certified media server, and then you can enjoy them on the TV.

#### To use a PC as a media server

Prepare the PC with Windows 7 or ensure the server software is installed on the PC.

"Windows 7" and "TwonkyMedia server 6 (installed on the PC with Windows 7, Windows Vista or Windows XP)" are the server software that has been tested for compatibility with this TV (as of January, 2011). Any other server software have not been tested with this TV, therefore compatibility and performance cannot be assured.

- Windows 7

The setup for homegroup settings of Windows 7 is required. For details, refer to the help functions of Windows 7.

- TwonkyMedia server

"TwonkyMedia server" is the product of PacketVideo Corporation.

To obtain the Installation Guides for installing and setting "TwonkyMedia server", visit the website of TwonkyMedia.

Additional fees may be charged to obtain server software.

#### Note

- For more information about the server software, please consult each software company.
- When server software for the media server is installed on the PC, the data may be at risk of being accessed by other people. Please take care of the settings and connections under the network circumstances at the office, hotel or even at home when not using a router.

#### To use a DLNA compatible DIGA Recorder as a media server

By connecting a DLNA compatible DIGA Recorder to your home network, you can enjoy and control it as one of the media servers.

- Please read the manual of your DIGA Recorder to confirm whether the recorder is compatible with DLNA.

### ■ DLNA Remote Control

You can control the TV with the DLNA Certified equipment.

- To use this function, set [Network Link Settings]. ➔ (p. 71)
- "Windows 7" is the OS that has been tested for compatibility of this TV (as of January, 2011). For the operations, refer to the help functions of Windows 7.

Network connection ➔ "Example 1", "Example 2" (p. 70)

Network setup ➔ (p. 71 - 74)

DLNA operations ➔ (p. 75 - 78)

## VIERA Connect

VIERA Connect is a gateway to the internet services unique to Panasonic.

VIERA Connect allows you to access some specific websites supported by Panasonic, and enjoy internet contents such as videos, games, communication tools, etc. from VIERA Connect home screen.

- This TV does not support full web browser function and some features of the websites may not be available.

Network connection ➔ "Example 1", "Example 3" (p. 70)

Network setup ➔ (p. 71 - 74)

VIERA Connect operations ➔ (p. 18, 78)

## Network connections

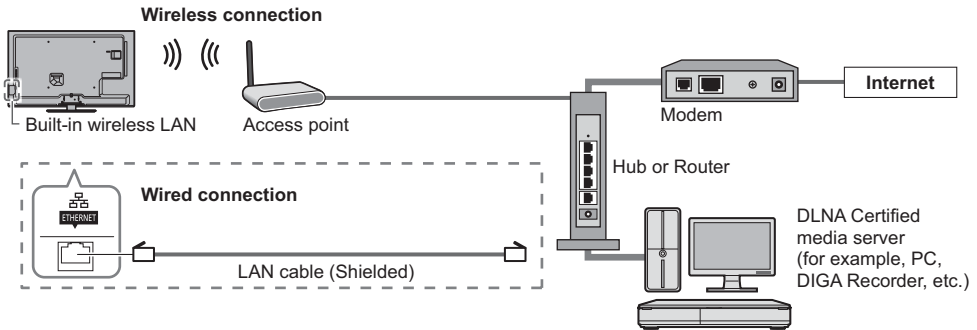
To use only DLNA features, you can operate the features without broadband network environment.

To use VIERA Connect features, you need a broadband network environment.

- If you do not have any broadband network services, please consult your retailer for assistance.
- Set up and connect any equipment required for the network environment. You cannot make settings for the equipment on this TV. Read the manual of the equipment.
- Required speed (effective): at least 1.5 Mbps for SD and 6 Mbps for HD picture quality, respectively. If the transfer speed is not enough, contents may not be played back properly.

### Example 1

(For DLNA and VIERA Connect)




- Ensure to use a LAN straight cable for this connection.
- If your modem has no broadband router functions, use a broadband router.
- If your modem has broadband router functions but there are no vacant ports, use a hub.
- Ensure that the broadband routers and hubs are compatible with 10BASE-T / 100BASE-TX.
- If you use the equipment compatible only with 100BASE-TX, category 5 LAN cables are required.

### Example 2

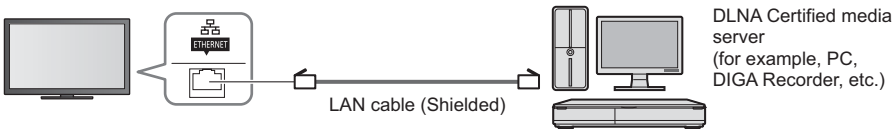(For DLNA)

You can connect the TV and the equipment directly to use DLNA features.




- Ensure to use a LAN cross cable for this connection.

### Example 3

 (For VIERA Connect)

You can connect the TV and the telecommunication equipment directly to use VIERA Connect features.



#### Note

- Contact your Internet Service Provider (ISP) or telecommunications company for further assistance regarding the network equipment.
- Confirm the terms and conditions of the contracts with your Internet Service Provider (ISP) or telecommunications company. Depending on the contracts, additional fees may be charged or multiple connections to the internet may be impossible.

## Network Setup

- Ensure the connections are completed before starting Network Setup.
  - ➔ “Network connections” (p. 70)

### Display the menu and select [Network]

 


## Network Link settings

Sets the link settings to control this TV from the network equipment via the network.


### 1 Select [Network Link Settings]

Connection Test	
Network Connection	Wired
Wireless Network Settings	
IP/DNS Settings	
Network Link Settings	Access
Software Update	
New Software Message	On
Network Status	



### 2 Select the items and set

 Network Link Settings	
VIERA Name	VIERA
DLNA Remote Control	On
DLNA Remote Volume	On
Network Remote Control	On





Menu	Item	Adjustments / Configurations (alternatives)
Network Link Settings	VIERA Name	Sets your favourite name for this TV <ul style="list-style-type: none"> <li>• This name will be used as the name of this TV on the screen of the other network equipment.</li> </ul>
	DLNA Remote Control	Enables to control the TV using Windows 7 via the network <b>[Off]</b> / <b>[On]</b>
	DLNA Remote Volume	Enables to control the volume of the TV using Windows 7 via the network <b>[Off]</b> / <b>[On]</b>
	Network Remote Control	Enables to control the TV from the network equipment (smartphone, etc.) <b>[Off]</b> / <b>[On]</b> <ul style="list-style-type: none"> <li>• Depending on the area, this function may not be available. For details, consult your local Panasonic dealer.</li> <li>• For more information of this function (English only): <a href="http://panasonic.jp/support/global/cs/tv/">http://panasonic.jp/support/global/cs/tv/</a></li> </ul>

## Wired connection settings

 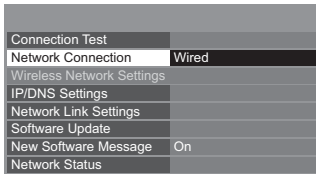This setting is for the network connection by using the LAN cable.

### 1 Select [Network Connection] and set to [Wired]



If you make the network connection like "Example 2" (p. 70), you do not have to set [Acquire DNS Address], [Proxy] and [Proxy Port].

### 2 Select [IP/DNS Settings] and set the items

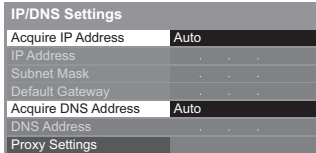


#### ■ [Acquire IP Address] / [Acquire DNS Address]


Sets [IP Address], [Subnet Mask], [Default Gateway] and [DNS Address].

Select [Acquire IP Address] / [Acquire DNS Address] and set to [Auto] (recommended).


- The available settings are displayed automatically.



 Manual settings ([IP Address], [Subnet Mask], [Default Gateway], [DNS Address])



### 3 Select [Proxy Settings] and set the items

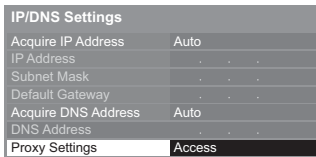

- After settings, return to the previous menu.




#### ■ [Proxy]

 Sets Proxy address.

- This is the address of the relay server that is connected to the target server instead of the browser and sends data to the browser. Setting is required if specified by the provider.

1. Select [Proxy]



2. Enter the address



- You can set characters by using numeric buttons.

3. Store



#### ■ [Proxy Port]

Sets Proxy port number.

- This number is also specified by the provider with the Proxy address.

1. Select [Proxy Port]



2. Move the cursor and enter the number

 




#### 4 Select [Connection Test] and access to test



- Performs automatic testing of the network connection for the TV. (It takes a while to test.)



: **succeeded**

The test is successful and the TV is connected to the network.

: **failed**



Check the settings and connections. And then try again.

### Wireless connection settings

 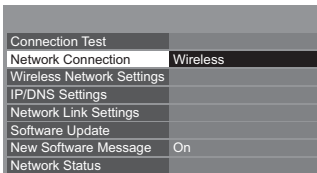
This setting is for the wireless network connection.

- Confirm the encryption key, settings and positions of your access point before starting setup. For details, read the manual of the access point.

#### 1 Select [Network Connection] and set to [Wireless]



#### 2 Select [Wireless Network Settings]

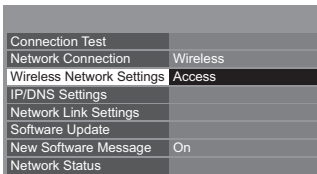

- When the access point is already set, [Current Settings] screen will be displayed. To change the settings, select [No] on this screen and go to the next step.

#### 3 Select your desired access point

Available Wireless Networks			
No.	Network Name(SSID)	Wireless type	Status
1	Access Point A	11n(2.4GHz)	<input type="checkbox"/> [Signal strength]
2	Access Point B	11n(5GHz)	<input checked="" type="checkbox"/> [Signal strength]
3	Access Point C	11n(5GHz)	<input type="checkbox"/> [Signal strength]



: Encrypted access point

- To search access points again



- For the information of the highlighted access point



- For [WPS(Push button)] (p. 17)



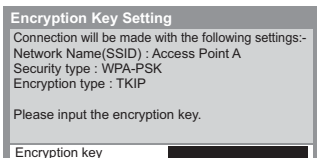
- For [WPS(PIN)] (p. 74)



- To set manually (p. 74)



#### 4 Access the encryption key input mode



- If the selected access point is not encrypted, the confirmation screen will be displayed. It is recommended to select the encrypted access point.

## 5 Enter the encryption key of the access point

Wireless Network Settings

Encryption key

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T
U	V	W	X	Y	Z	0	1	2	3	4	5	6	7	8	9	:	#		
a	b	c	d	e	f	g	h	i	j	k	l	m	n	o	p	q	r	s	t
u	v	w	x	y	z	( )	+ -	* /	@	^	~	% &	'	~					
_	~	\$	!	! -	<	>	{ }		~	^	^								

Set characters



- You can set characters by using numeric buttons.
- After settings, return to the previous menu.



## 6 Select [Connection Test] and access to test

Connection Test

Access



- Performs automatic testing of the network connection for the TV. (It takes a while to test.)

Connection Test

Check wireless network connection.

Check acquired IP address.

Check for devices using same IP address.

Check gateway connection.

Check server connection.

: **succeeded**

The test is successful and the TV is connected to the network.

: **failed**

Check the settings and connections. And then try again.

If you continue to have difficulty, please contact your internet service provider.

## ■ [WPS(PIN)]

Enter the PIN code to the access point, and then select [Connect]

WPS(PIN)

Please register the following PIN codes on the wireless access point.

PIN code : 12345678

Select 'Connect' after entering and saving the settings on the wireless access point.

Connect



## ■ [Manual]

You can setup SSID, security type, encryption type, and encryption key manually.

Follow the on-screen instructions and set manually.

- When you use 11n (5 GHz) for the wireless system between the built-in wireless LAN and access point, select [AES] for the encryption type.

Network Name(SSID) Setting

Please input the network name(SSID).

Network Name(SSID) XXXXXXXX



Security Type Settings

Connection will be made with the following settings:-  
Network Name(SSID) : XXXXXXXX

Please select the security type.

WPA2-PSK

WPA-PSK

Shared key

Open

## Update TV's software

Accesses the specific website to update TV's software and search if any software updates are available.

### Select [Software Update]

Connection Test

Network Connection Wired

Wireless Network Settings

IP/DNS Settings

Network Link Settings

Software Update Access

New Software Message On

Network Status



- Follow the on-screen instructions.

## Using DLNA® features

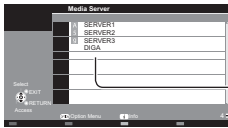
- Ensure the preparation of the media server, network connections and network settings are completed.  
→ (p. 69 - 74)

### 1 Display [VIERA TOOLS] and select [Media Server]



### 2 Select one of the media servers to access

Example: Media server list




Available media servers  
Total listed number

- To display the information of the highlighted media server



### 3 Select the file

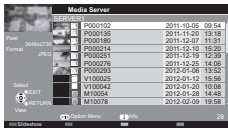Example: File list



- Depending on the condition of media server, you may need to select the folder before selecting the file.
- To display the information of the highlighted file



#### Note

- Non-playable files are also listed but cannot be selected.
- Turn the TV off, and then on again when changing or reconnecting the network connection.
- You can use the following buttons during playback. Set the code of the remote control to "73" (p. 29).



## For photo file

**[Single view]** - Photos are displayed one at a time.

Example:



Operation guide

- To display / hide the operation guide



- To operate Single view
  - To the previous photo
  - Slideshow
  - To the next photo
  - Stop (return to list)



- To return to list

BACK/  
RETURN



- To rotate 90°  
(blue)



**[Slideshow]** - Slideshow completes when all photos are viewed within the list.

**1 Select the photo file from the list for the first view**

**2 Start Slideshow**



• To display / hide the operation guide



• To pause (return to Single view)



(red)



• To return to list



**For video file**

**Playback** - Playback will start.

If you stopped the last playback on the way, the confirmation screen is displayed to select whether to start from where you stopped last time or from the beginning.

Example: Playback



Operation guide

Information banner

• To change aspect



• To display / hide the operation guide and information banner



• To the previous content

(red)

• To the next content

(green)

• To return to list



• To operate the playback

◀◀ Rewind

[Manual skip]

• Press to skip forward about 30 seconds.



⏸ Pause (displays the time seek bar) / Playback

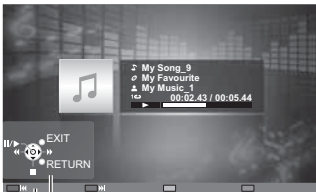
▶▶ Fast forward

■ Stop

**For music file**

**Playback** - Playback will start.

Example: Playback



Operation guide

• To display / hide the operation guide



• To operate the playback

◀◀ Rewind

⏸ Pause / Playback

▶▶ Fast forward

■ Stop

• To the previous track

(red)

• To the next track

(green)

• To return to list




**For DIGA Recorder**

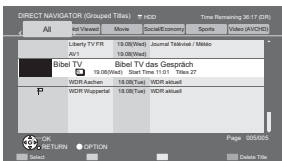**Control the DIGA Recorder**

The screen of the DIGA Recorder will be displayed. You can control the functions of the DIGA Recorder with this TV remote control according to the operation guide.

Example:



• Before operating, register this TV on the DIGA Recorder.

• For details, read the manual of the DIGA Recorder.


## Option menu for each content

 Setup the settings for Photo, Video and Music file operations.

### 1 Display the option menu



### 2 Select [Slideshow Settings], [Video Setup] or [Music Setup]



### 3 Select the items and set



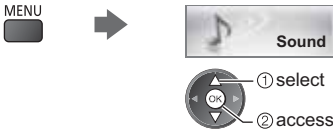
Menu	Item	Adjustments / Configurations (alternatives)
Slideshow Settings	Transition Effect	Selects the transition effect for switching the photo during the slideshow <b>[Off]</b> / <b>[Fade]</b> / <b>[Slide]</b> / <b>[Dissolve]</b> / <b>[Motion]</b> / <b>[Random]</b> <b>[Fade]</b> : The next photo fades in gradually. <b>[Slide]</b> : The next photo slides and appears from the left side. <b>[Dissolve]</b> : Each photo is dissolved when switching to the next photo. <b>[Motion]</b> : Each photo is displayed with an effect of enlarging, reducing, moving up or moving down. <b>[Random]</b> : Each transition is selected at random.
	Interval	Selects slideshow interval <b>[5]</b> / <b>[10]</b> / <b>[15]</b> / <b>[30]</b> / <b>[60]</b> / <b>[90]</b> / <b>[120] (seconds)</b> • This function is not available when [Transition Effect] is set to [Motion].
	Repeat	Slideshow repeat <b>[Off]</b> / <b>[On]</b>
	Back Ground Music	Selects the back ground music during Photo mode <b>[Off]</b> / <b>[Type1]</b> / <b>[Type2]</b> / <b>[Type3]</b> / <b>[Type4]</b> / <b>[Type5]</b>
Video Setup	Video Preview	Sets to start the preview of the title or scene in the thumbnail screen <b>[Off]</b> / <b>[On]</b> • Image may not be displayed for an instant in the thumbnail screen. Set the preview [Off] to resolve this.
	Multi Audio, Dual Audio, Dual Mono Audio	Selects between selectable sound tracks (if available) • It may take several seconds to change the sound. • Only available during playback
	Subtitle	Subtitles On / Off (if available) • Only available during playback
	Subtitle Text	Selects the font type to display subtitles correctly (if available) • Only available during playback
	Subtitle Language	Selects the language in which subtitles should appear (if available) • Only available during playback
	Aspect Change	<b>[Aspect1]</b> : Displays the content enlarged without distortion. <b>[Aspect2]</b> : Displays the content full-screen. <b>[Original]</b> : Displays the content original size. • You can also change the aspect using the ASPECT button. • Aspect change may not work depending on the content. • Only available during playback
Repeat	Playback repeat within the selected file <b>[Off]</b> / <b>[On]</b>	
Music Setup	Repeat	Playback repeat <b>[Off]</b> / <b>[Folder]</b> / <b>[One]</b> <b>[Folder]</b> : Playback repeat within the selected folder. <b>[One]</b> : Playback repeat of the selected one file.

## Audio output settings (for video contents)


You can enjoy the multi-channel sound via an amplifier connected to DIGITAL AUDIO OUT or HDMI2 (ARC function) terminal.

- To confirm or change the current sound status ➔ (p. 77)

### 1 Display the menu and Select [Sound]



### 2 Select [SPDIF Selection] and set

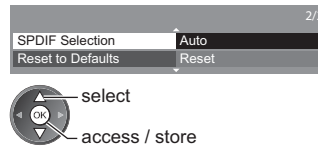

Menu	Item	Adjustments / Configurations (alternatives)
Sound	SPDIF Selection	SPDIF: A standard audio transfer file format Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals <b>[Auto]</b> / <b>[PCM]</b> <b>[Auto]</b> : Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bitstream. DTS is output as DTS. MPEG is output as PCM. <b>[PCM]</b> : Digital output signal is fixed to PCM.

## VIERA Connect

You can access VIERA Connect and enjoy various network contents.

- VIERA Connect requires a broadband internet connection. Dial-up internet connections cannot be used.

- Ensure the network connections and network settings are completed.  
➔ “**Network connections**” (p. 70), “**Network Setup**” (p. 71 - 74)
- For details about VIERA Connect operation ➔ (p. 18)

- Setup menu (Items in [Setup] may change without notice.)

<b>Customize HomeScreen</b>	Changes the position of each services on VIERA Connect home screen
<b>My Account</b>	Confirms or removes the account information of the TV you entered on VIERA Connect
<b>Lock</b>	Sets to restrict access to some services
<b>Restrictions</b>	Sets to restrict reveal of the restricted services
<b>Beep</b>	Sets beep sound On or Off when operating VIERA Connect
<b>Notices</b>	Displays the information of VIERA Connect

### Note

- Be sure to update the software when a software update notice is displayed on the TV screen. If the software is not updated, you will not be able to use VIERA Connect.  
You can update the software later manually. ➔ **[Software Update]** in **[Network]** (p. 74)
- VIERA Connect home screen is subject to change without notice.
- The services through VIERA Connect are operated by their respective service providers, and service may be discontinued either temporarily or permanently without notice. Therefore, Panasonic will make no warranty for the content or the continuity of the services.
- Some content may be inappropriate for some viewers.
- Some content may only be available for specific countries and may be presented in specific languages.
- Depending on the connection environment, the internet connection may be slow or may not be successful.
- During the operation, audio signal is output from AV1, DIGITAL AUDIO OUT and HDMI2 (ARC function) terminals. But no video signals are output. AV1 can output audio signal if [AV1 out] is set to [Monitor] in the Setup Menu (p. 40). To use HDMI2 with ARC function, connect an amplifier that has ARC function (p. 80) and set to use theatre speakers (p. 86).
- You can restrict access to VIERA Connect. ➔ **[Child Lock]** (p. 53)
- Turn the TV off, and then on again when changing or reconnecting the network connection.

# Link Functions (Q-Link / VIERA Link)

Q-Link connects the TV and DVD Recorder / VCR, and enables easy recording, playback, etc. ➔ (p. 81)

VIERA Link (HDAVI Control™) connects the TV and the equipment with VIERA Link function, and enables easy control, convenient recording, playback, energy saving, creating home theatre, etc., without complicated setting.

➔ (p. 82 - 86)

You can use Q-Link and VIERA Link functions together.

 
- This TV supports "HDAVI Control 5" function. But available features are depending on the connected equipment's version of HDAVI Control. Please read the manual of the equipment to confirm the version.
- VIERA Link features may be available even with other manufacturers' equipment supporting HDMI CEC.

## Summary of Q-Link and VIERA Link features

### Q-Link (SCART connection)

Connected equipment	DVD Recorder / VCR with Q-Link function
Features	
Preset download	○
Easy playback	○
Power on link	○
Power off link	○
Direct TV Recording	○

#### Connection




- Use fully wired SCART cable.
- Connect the DVD Recorder / VCR supporting Q-Link to the TV's AV1 terminal via a SCART cable.

### VIERA Link (HDMI connection)

 Connected equipment	DIGA Recorder with VIERA Link function	DVD Player / Blu-ray Disc Player with VIERA Link function	HD Video Camera / LUMIX Camera with VIERA Link function
Features			
Preset download	○*2 *5	—	—
Easy playback	○	○	○
Power on link	○	○	○
Power off link	○	○	○
Reduce unnecessary power consumption in Standby	○*3	○*3	—
Auto standby for unnecessary equipment	○*3	○*3	—
Pause Live TV programme	○*2 *4	—	—
Direct TV Recording	○*2	—	—
Control the menu of the connected equipment by VIERA remote control	○*1	○*1	○*1
Speaker control	—	—	—

#### Connection




- Use fully wired HDMI compliant cable.
- Connect the equipment supporting VIERA Link to the TV's HDMI1, HDMI2, HDMI3 or HDMI4 terminal via an HDMI cable.
- About HDMI cable for connecting Panasonic HD Video Camera or LUMIX Camera, read the manual of the equipment.

## VIERA Link (HDMI and Audio out connections)

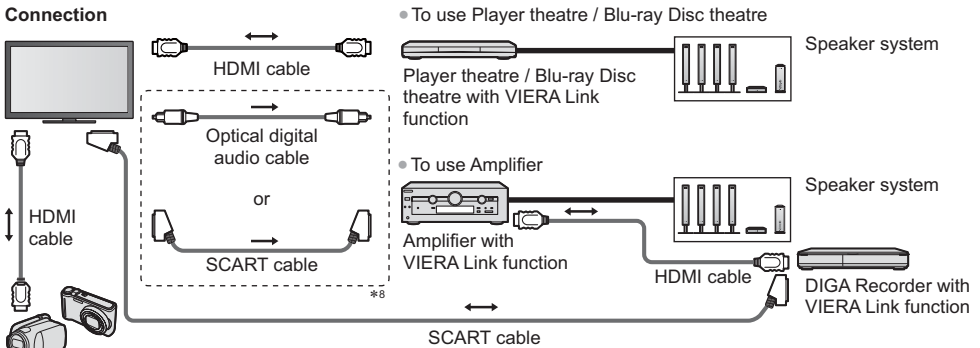Connected equipment	Player theatre with VIERA Link function	Blu-ray Disc theatre with VIERA Link function	Amplifier with VIERA Link function
Features			
Preset download	—	—	—
Easy playback	○*6	○*6	—
Power on link	○	○	—
Power off link	○	○	○
Reduce unnecessary power consumption in Standby	—	○*3	—
Auto standby for unnecessary equipment	○*3 *7	○*3 *7	○*3
Pause Live TV programme	—	—	—
Direct TV Recording	—	—	—
Control the menu of the connected equipment by VIERA remote control	○*1	○*1	—
Speaker control	○	○	○

### Connection



HD Video Camera / LUMIX Camera with VIERA Link function

Link Functions (Q-Link / VIERA Link)

- Use fully wired HDMI compliant cable.
- Connect the equipment supporting VIERA Link to the TV's HDMI2, HDMI3 or HDMI4 terminal via an HDMI cable.
- Use fully wired SCART cable.
- If you use a SCART cable for audio output, connect the equipment supporting VIERA Link to the TV's AV1 terminal and set [AV1 out] to [Monitor] in the Setup Menu (p. 40).
- Use the optical digital audio cable or SCART cable for audio output from the TV.

\*1: Available with the equipment which has "HDAVI Control 2 or later" function.

\*2: Available with the equipment which has "HDAVI Control 3 or later" function.

\*3: Available with the equipment which has "HDAVI Control 4 or later" function.

\*4: Available with a DIGA Recorder which has HDD.

\*5: This function is available regardless of the version of HDAVI Control when the recorder supports Q-Link and is connected via SCART cable.

\*6: While playing a disc.

\*7: Except for watching a disc.

\*8: If the connected equipment has "HDAVI Control 5" function, you do not have to use this audio cable (Optical digital audio cable or SCART cable). In this case, connect the equipment to the TV's HDMI2 terminal via an HDMI cable.

### VIERA Link Control of compatible equipment ➔ [VIERA Link Control] (p. 84)

• Table below displays maximum number of compatible equipment that can be controlled by VIERA Link Control. This includes connections to equipment already connected to the TV.

For example, DIGA Recorder connected to Amplifier which is connected to the TV via an HDMI cable.

Type of the equipment	Maximum number
Recorder (DIGA Recorder, etc.)	3
Player (DVD Player, Blu-ray Disc Player, HD Video Camera, LUMIX Camera, Digital Camera, Player theatre, Blu-ray Disc theatre, etc.)	3
Audio system (Player theatre, Blu-ray Disc theatre, Amplifier, etc.)	1
Tuner (Set top box, etc.)	4



## Q-Link

### Preparations

- Connect the DVD Recorder / VCR with the following logos: "Q-Link", "NEXTVIEWLINK", "DATA LOGIC (a trademark of Metz Corporation)", "Easy Link (a trademark of Philips Corporation)", "Megalogic (a trademark of Grundig Corporation)", "SMARTLINK (a trademark of Sony Corporation)"
- Q-Link connection ➔ (p. 79)
- Use fully wired SCART cable.
- Set up the DVD Recorder / VCR. Read the manual of the recorder.
- Q-Link terminal setup in the Setup Menu ➔ [AV1 out] (p. 40)
- Download preset - channel, language and country / region settings ➔ "Preset download" (see below)

### Features available

#### Preset download

Channel, language and country settings can be downloaded to the recorder.

- DVB-C channel settings cannot be downloaded.
- To download settings  
➔ [Download] (p. 41), [Auto Setup] (p. 14, 15, 44)

#### Direct TV Recording - What you see is What you record

Records the current programme in DVD Recorder / VCR immediately.

- Set the code of the remote control to "73" (p. 29).

REC Available conditions:



Available conditions:

 
Picture source	Mode	Recording from
Analogue	TV	TV monitor out
	AV	Recorder's tuner
DVB	TV	TV monitor out
AV (watching recorder's tuner)	AV	Recorder's tuner
AV (watching recorder's external input)	AV	Recorder's external input
AV (watching TV's external input)	AV	TV monitor out

- When Direct TV Recording is performed, the recorder is automatically turned on if it is in Standby mode.
- You can change channel or turn the TV off while the recorder is recording from its own tuner.
- Changing channel is not available while the recorder is recording from the TV tuner.

### To stop recording



Unlock the tuner



### Power on link and Easy playback

Set Power on Link [On] in the Setup Menu to use this function ➔ [Power on Link] (p. 40)

When DVD Recorder / VCR starts playback or direct navigator / function menu for the equipment are activated, the TV is turned on and input mode is switched automatically so that you can view the content. (Only when the TV is in Standby mode.)

### Power off link

Set Power off Link [On] in the Setup Menu to use this function ➔ [Power off Link] (p. 40)

When TV is set to Standby mode, the recorder is also automatically set to Standby. (Only when the videocassette or disc is not active.)

- This function works even if the TV enters Standby mode automatically by auto power standby function.

### Note

- Some recorders are not applicable. Read the manual of the recorder.

\*Enjoy additional HDMI Inter-Operability with Panasonic products which have “HDAVI Control” function.

This TV supports “HDAVI Control 5” function.

Connections to the equipment (DIGA Recorder, HD Video Camera, Player theatre, Amplifier, etc.) with HDMI and SCART cables allow you to interface them automatically (p. 79, 80).

These features are limited to models incorporating “HDAVI Control” and “VIERA Link”.

- Some functions are not available depending on the equipment’s version of HDAVI Control. Confirm the connected equipment’s version of HDAVI Control.
- VIERA Link “HDAVI Control”, based on the control functions provided by HDMI which is an industry standard known as HDMI CEC (Consumer Electronics Control), is a unique function that we have developed and added. As such, its operation with other manufacturers’ equipment that supports HDMI CEC cannot be guaranteed.
- Please refer to individual manuals for other manufacturers’ equipment supporting VIERA Link function.
- About applicable Panasonic equipment, consult your local Panasonic dealer.

### Preparations

- Connect the equipment supporting VIERA Link.
- VIERA Link connection ➔ (p. 79, 80)
- Use fully wired HDMI compliant cable. Non-HDMI-compliant cables cannot be utilised.  
Recommended Panasonic’s HDMI cable part number:
  - RP-CDHS15 (1.5 m)
  - RP-CDHS30 (3.0 m)
  - RP-CDHS50 (5.0 m)
- Use fully wired SCART cable.
- Set up the connected equipment. Read the manual of the equipment.
- For optimal recording, the settings of the recorder may need to be changed. For details, read the manual of the recorder.
- Download preset - channel, language and country / region settings ➔ “Preset download” (see below)
- Set [VIERA Link] to [On] in the Setup Menu. ➔ [VIERA Link] (p. 40)
- Set up the TV.

**After connection, turn the equipment on and then switch the TV on.**

**Select the input mode from HDMI1, HDMI2, HDMI3 or HDMI4 (p. 28), and make sure that an image is displayed correctly.**

This setup should be done each time when the following conditions occur:

- for the first time
- when adding or reconnecting equipment
- when changing setup

### Features available

#### Preset download

Channel, language and country / region settings can be downloaded to the recorder.

- DVB-C channel settings cannot be downloaded.
- To download settings
  - ➔ [Download] (p. 41), [Auto Setup] (p. 14, 15, 44)

#### Easy playback

Automatic input switching - When the connected equipment is operated, input mode is switched automatically. When it is stopped operating, input mode is returned.

#### Power on link

**Set Power on Link [On] in the Setup Menu to use this function ➔ [Power on Link] (p. 40)**

When the connected equipment starts playback or direct navigator / function menu for the equipment are activated, the TV is automatically turned on. (Only when the TV is in Standby mode.)

#### Power off link

**Set Power off Link [On] in the Setup Menu to use this function ➔ [Power off Link] (p. 40)**

When the TV is set to Standby mode, the connected equipment is also automatically set to Standby.

- This function will work even if the TV enters Standby mode automatically by auto power standby function.

## Reduce unnecessary power consumption in Standby [Standby Power Save]

Set Standby Power Save [On] in the Setup Menu to use this function → [Standby Power Save] (p. 40)

The power consumption in Standby mode of the connected equipment is controlled higher or lower in synchronisation with the TV on / off state to reduce the consumption.

When the TV is set to Standby mode, the connected equipment is automatically set to Standby and the power consumption of the connected equipment is automatically minimised.

When the TV is turned on, the connected equipment is still in Standby mode, but the power consumption is increased to make startup time fast.

- This function is effective if the connected equipment can change the power consumption in Standby mode and is set to higher consumption.
- This function works when [Power off Link] is set to [On].

## Auto standby for unnecessary equipment [Intelligent Auto Standby]

Set Intelligent Auto Standby [On (With reminder)] or [On (No reminder)] in the Setup Menu to use this function → [Intelligent Auto Standby] (p. 41)

When the TV is on, non-watched or non-used connected equipment goes into Standby mode automatically to reduce the power consumption. For example, when the input mode is switched from HDMI or when Speaker Selection is changed to [TV] (except for watching a disc).

- If you select [On (With reminder)], the on-screen message will be displayed before the connected equipment turns to standby.
- This function may not work properly depending on the connected equipment. If required, set to [Off].

## Direct TV Recording - What you see is What you record [Direct TV Rec]

Records the current programme in the DIGA Recorder immediately.

 
- If you connect a variety of recorders including other manufacturers' recorders at the same time, connect the DIGA Recorder to the TV's lower HDMI terminal number. For example, if you use HDMI1 and HDMI2 for two recorders, connect the DIGA Recorder to HDMI1.
- If you cannot operate, check the settings and the equipment.  
→ "Summary of Q-Link and VIERA Link features" (p. 79, 80), "Preparations" (p. 82)
- To record the programme which DIGA Recorder does not support, SCART connection is required and the programme is recorded by Q-Link function (p. 81).
- Depending on the programme, SCART connection may be required to record.
- You can change channel or turn the TV off while the recorder is recording from its own tuner.
- You can not change channel while the recorder is recording from the TV tuner.

### 1 Display [VIERA TOOLS] and select [VIERA Link]



### 2 Select [Direct TV Rec] and start recording

VIERA Link Menu	
Pause Live TV	Start
Direct TV Rec	Start
VIERA Link Control	Recorder
Speaker Selection	Home Cinema



- You can also start recording directly when the code of the remote control is "73" (p. 29).



### ■ To stop recording

 
Select [Stop] in [Direct TV Rec]

VIERA Link Menu	
Pause Live TV	Start
Direct TV Rec	Stop
VIERA Link Control	Recorder
Speaker Selection	Home Cinema



- You can also stop recording directly.

Unlock the tuner



## Pause Live TV programme [Pause Live TV]

You can pause the current TV programme and resume later.

The current TV programme will be recorded on HDD of the connected DIGA Recorder.

- This function is available with a DIGA Recorder which has HDD.
- If you connect a variety of recorders including other manufacturers' recorders at the same time, connect the DIGA Recorder which has HDD to the TV's lower HDMI terminal number. For example, if you use HDMI1 and HDMI2 for two recorders, connect the DIGA Recorder which has HDD to HDMI1.
- If you cannot operate, check the settings and the equipment.
  - ➔ "Summary of Q-Link and VIERA Link features" (p. 79, 80), "Preparations" (p. 82)

 
### 1 Display [VIERA TOOLS] and select [VIERA Link]



### 2 Select [Pause Live TV] and pause


The TV picture will be paused.

VIERA Link Menu	
Pause Live TV	Start
Direct TV Rec	Start
VIERA Link Control	Recorder
Speaker Selection	Home Cinema



- The current TV programme is recorded on HDD from where it was paused.
- If the paused TV picture disappears after a few minutes, press OPTION button to restore the pause picture.
- Follow the operation guide to operate [Pause Live TV] function.

#### ■ To operate [Pause Live TV]

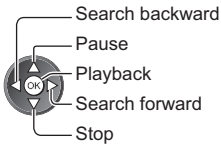


- Operations may vary depending on the recorder. In this case, follow the operation guide or read the manual of the recorder.

- If you stop playback, the recorded programme will be deleted from HDD.

#### ■ To return to current TV (Stop playback of [Pause Live TV] / cancel pause)

 Select [Yes]



- If you stop playback or cancel pause, the recorded programme will be deleted from HDD.

## Control the menu of the connected equipment by VIERA remote control [VIERA Link Control]

You can control some functions of the connected equipment with this TV remote control pointing at the TV's signal receiver.

- If you cannot operate, check the settings and the equipment.
  - ➔ "Summary of Q-Link and VIERA Link features" (p. 79, 80), "Preparations" (p. 82)
- For details of the operations for the connected equipment, read the manual of the equipment.

### 1 Display [VIERA TOOLS] and select [VIERA Link]



## 2 Select [VIERA Link Control]

VIERA Link Menu	
Pause Live TV	Start
Direct TV Rec	Start
VIERA Link Control	Recorder
Speaker Selection	Home Cinema



## 3 Select the equipment to access

Select the type of the connected equipment and access.

VIERA Link Menu	
Pause Live TV	Start
Direct TV Rec	Start
VIERA Link Control	Recorder
Speaker Selection	Home Cinema



[Recorder] / [Player] / [Home Cinema] / [Video Camera] / [LUMIX] / [Digital Camera] / [Other]

- The displayed item may vary depending on the connected equipment.
- [Home Cinema] means Player theatre, Blu-ray Disc theatre or Recorder theatre.
- [Other] means Tuner set top box.

**The menu of the accessed equipment will be displayed.**  
(Input mode will be changed automatically)

## 4 Operate the menu of the equipment

- Set the code of the remote control to "73" (p. 29).

### Follow the operation guide

- To display the operation guide

OPTION



If other manufacturers' equipment is accessed, Setup / Contents Selection menu may be displayed.

- Available VIERA remote control buttons depend on the connected equipment.

### Note

- Some operations may not be available depending on the equipment. In this case use its own remote control to operate the equipment.

### ■ If multiple recorders or players are connected

VIERA Link Menu	
Pause Live TV	Start
Direct TV Rec	Start
VIERA Link Control	Recorder2
Speaker Selection	Home Cinema

[Recorder1-3 / Player1-3]

The number is given from the TV's lower number of HDMI terminal connected to the same type equipment. For example, two recorders to HDMI2 and HDMI3, the recorder connected to HDMI2 is displayed as [Recorder1], and the recorder connected to HDMI3 is displayed as [Recorder2].

### ■ If you access non-VIERA Link equipment

VIERA Link Menu	
Pause Live TV	Start
Direct TV Rec	Start
VIERA Link Control	Recorder
Speaker Selection	Home Cinema

The type of the connected equipment is displayed. Although you can access the connected equipment, you cannot operate it. Use its own remote control to operate the equipment.

## Speaker control [Speaker Selection]

You can control the theatre speaker with this TV remote control pointing at the TV's signal receiver.

- If you cannot operate, check the settings and the equipment.
  - ➔ “Summary of Q-Link and VIERA Link features” (p. 79, 80), “Preparations” (p. 82)

1

 
### Display [VIERA TOOLS] and select [VIERA Link]



2

### Select [Speaker Selection]

VIERA Link Menu	
Pause Live TV	Start
Direct TV Rec	Start
VIERA Link Control	Recorder
Speaker Selection	Home Cinema



3

### Set to [Home Cinema] or [TV]



#### [Home Cinema]:

The sound is from theatre speakers. Player theatre, Blu-ray Disc theatre or Amplifier will be automatically turned on if it is in Standby mode.

- Volume up / down



- Mute



- The sound of TV speakers is mute.
- When the equipment is turned off, TV speakers will be active.

#### [TV]:

TV speakers are active.

## Multi-channel sound

If you want to enjoy the multi-channel sound (e.g. Dolby Digital 5.1ch) via an Amplifier, connect it with HDMI cable and Optical digital audio cable (p. 80), and then select [Home Cinema]. If your Amplifier has “HDAVI Control 5” function, you only need to connect it with HDMI cable to the TV's HDMI2 terminal.

To enjoy the sound from the DIGA Recorder in multi-channel sound, connect an HDMI cable from the DIGA Recorder to the Amplifier (p. 80).


### Note

- These functions may not work properly depending on the connected equipment.
- Image or sound may not be available for the first few seconds when input mode is switched.
- “HDAVI Control 5” is the newest standard (as of November, 2011) for HDAVI Control compatible equipment. This standard is compatible with conventional HDAVI equipment.
- To confirm this TV's version of HDAVI Control ➔ [System Information] (p. 43)

# External Equipment


These diagrams show our recommendations for connection of your TV to various pieces of equipment. For other connections, consult the instructions for each piece of equipment, the basic connection (p. 11 - 13), the table (p. 88), and the specifications (p. 102, 103).

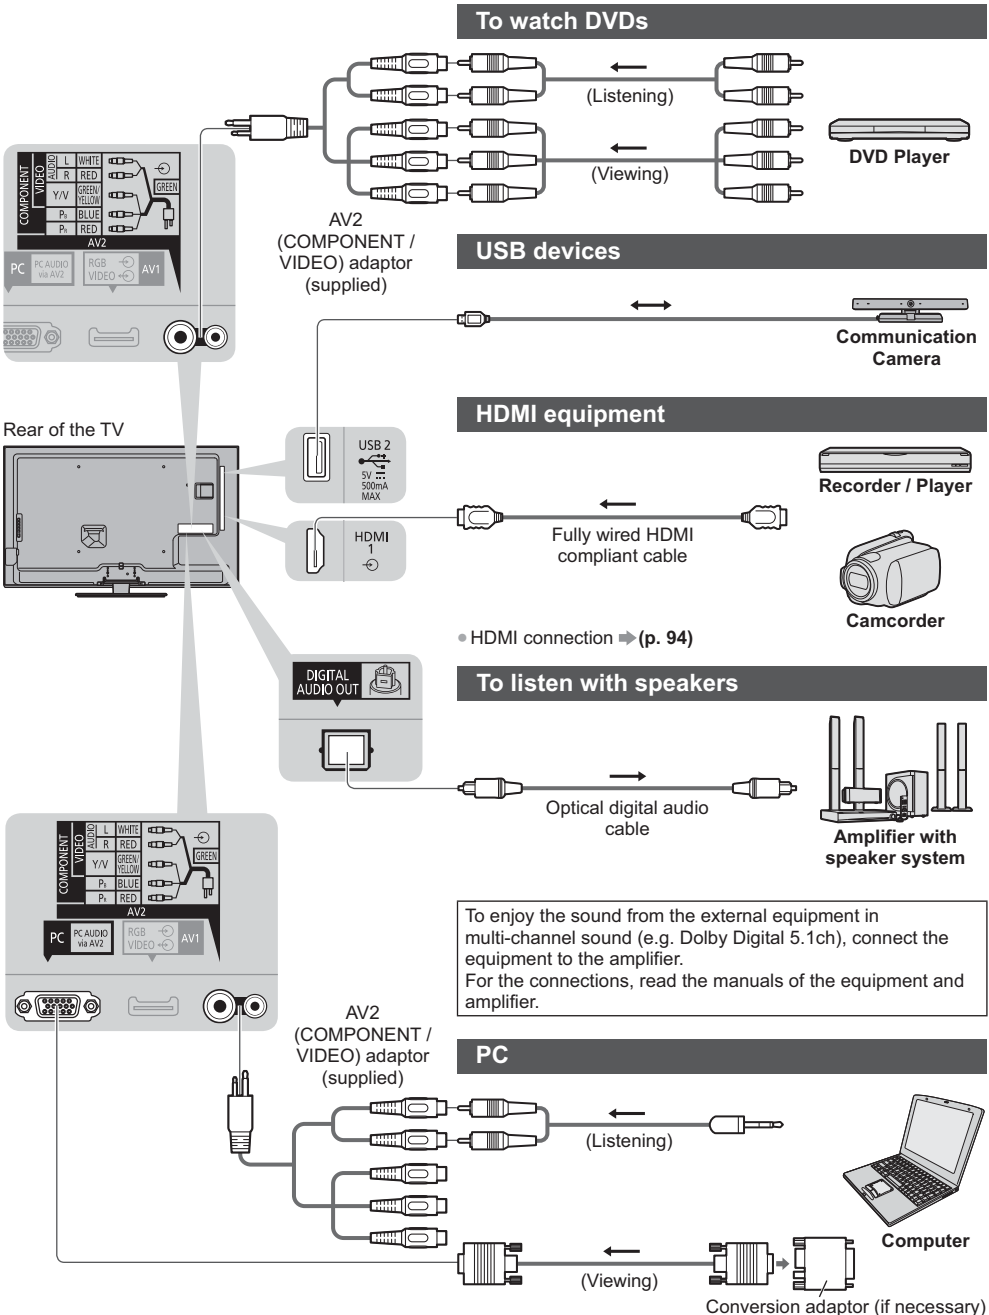- Check the type of terminals and cable plugs are correct when connecting.



To enjoy the sound from the external equipment in multi-channel sound (e.g. Dolby Digital 5.1ch), connect the equipment to the amplifier. For the connections, read the manuals of the equipment and amplifier.

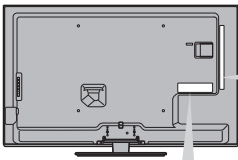Rear of the TV



Headphones

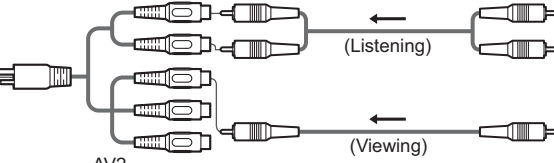
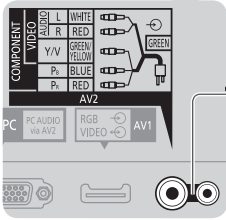


(M3 stereo mini plug)




- To adjust volume  
 → [Headphone Volume] (p. 38)

Camcorder / Game equipment



 AV2 (COMPONENT / VIDEO) adaptor (supplied)



Camcorder

Game equipment

Types of connectable equipment to each terminal

Features	Terminal						
	AV1*1	AV2*1		DIGITAL AUDIO OUT	ETHERNET	HDMI 1 - 4	USB 1 - 3
		COMPONENT	VIDEO				
To record / playback videocassettes / DVDs (VCR / DVD Recorder)	○						
To watch 3D contents (Blu-ray Disc Player)						○	
To watch satellite broadcasts (Set top box)	○		○			○*2	
To watch DVDs (DVD Player)	○	○	○			○	
To watch camcorder images (Video camera)	○		○			○	
To play games (Game equipment)	○		○			○	
To use amplifier with speaker system				○		○*3	
To use network services					○		○*4
Q-Link	○						
VIERA Link	○ (with HDMI)					○	
Direct TV Recording	○					○	

○: Recommended Connection

\*1: To connect the equipment, the terminal adaptor (supplied) is necessary.

\*2: Use HDMI1 for automatic input switching.

\*3: Use HDMI2 for connecting an amplifier. This connection is applicable when using an amplifier that has ARC (Audio Return Channel) function.

\*4: Use USB 2 port for connecting the Communication Camera.



# Technical Information

## Auto Aspect

The optimum size and aspect can be chosen automatically, and you can enjoy finer images. ➔ (p. 22)

### ■ Aspect Control Signal

[WIDE] will appear in the top left of the screen if a Widescreen signal (WSS) or a Control signal through SCART / HDMI terminal is found.

The aspect will switch to the appropriate 16:9 or 14:9 widescreen ratio.

This function will work in any aspect mode.

Input terminal	Input signal format	Aspect Control Signal	
		Widescreen signal (WSS)	Control signal through SCART (pin8) / HDMI terminal
Cable RF	DVB-C	○	
	DVB-T	○	
	PAL B, G, H, I, D, K	○	
	SECAM B, G, L, L', D, K	○	
	PAL 525/60 6.5 MHz	–	
	PAL 525/60 6.0 MHz	–	
	PAL 525/60 5.5 MHz	–	
	M.NTSC 6.5 MHz	–	
	M.NTSC 6.0 MHz	–	
AV1 / AV2 (Composite)	M.NTSC 5.5 MHz	–	
	PAL	○	○
	SECAM	○	○
	PAL 525/60	–	○
	M.NTSC	–	○
AV2 (Component)	NTSC	–	○
	525 (480) / 60i, 60p	–	
	625 (576) / 50i, 50p	○	
	750 (720) / 60p, 50p	–	
1,125 (1,080) / 60i, 50i	–		
HDMI1 HDMI2 HDMI3 HDMI4	525 (480) / 60i, 60p	–	○
	625 (576) / 50i, 50p	–	○
	750 (720) / 60p, 50p	–	○
	1,125 (1,080) / 60i, 50i	–	○
	1,125 (1,080) / 60p, 50p, 24p	–	○

### ■ Auto mode

Auto mode determines the best aspect ratio to fill the screen using a four step process (WSS, Control signal through SCART / HDMI terminal, Letterbox detection or Justify to fill the screen).

This process may take several minutes, depending on the darkness of the image.

Letterbox detection:

If black bands at the top and bottom of the screen are detected, Auto mode chooses the best ratio and expands the image to fill the screen.

If no aspect signals are detected, Auto mode enhances the image for optimum viewing pleasure.

#### Note

- The ratio varies depending on the programme, etc. If the ratio is out of the standard 16:9, black bands at the top and bottom of the screen may appear.
- If the screen size looks unusual when a widescreen-recorded programme is played back on a VCR, adjust the tracking of the VCR. Read the manual of the VCR.

## Supported file format in Media Player and media servers

### ■ Photo

Format	File extension	Image resolution (pixel)	Details / Restrictions
JPEG	.jpg .jpeg .mpo	8 × 8 to 30,719 × 17,279	DCF and EXIF standards Sub-sampling: 4:4:4, 4:2:2, 4:2:0 ● Progressive JPEG is not supported.

### ■ Video

Container	File extension	Video codec	Audio codec	Details / Restrictions
AVCHD	.mts	H.264	Dolby Digital	AVCHD Standard Ver. 2.0 (AVCHD 3D, AVCHD Progressive) ● The data may not be available if a folder structure on the device is modified.
SD-Video	.mod	MPEG1 MPEG2	Dolby Digital MPEG Audio	SD-Video Standard Ver. 1.31 (Entertainment Video Profile) ● The data may not be available if a folder structure on the device is modified.
MOV	.mov .qt	DivX3 DivX4 DivX5 DivX6 H.264 BP/MP/HP Motion JPEG MPEG1 MPEG2 MPEG4 SP/ASP	AAC Dolby Digital Dolby Digital Plus DTS core HE-AAC LPCM MPEG Audio MP3	● This TV supports Motion JPEG recorded by Panasonic LUMIX Camera*1. ● This TV is not available for playing back Motion JPEG with the media server.  *1: Some products of before the year 2004 may not be available. The compatibility with future products is not guaranteed.
AVI	.avi .divx	DivX3 DivX4 DivX5 DivX6 H.264 BP/MP/HP MPEG1 MPEG2 MPEG4 SP/ASP VC-1 Windows Media Video Ver. 9	AAC ADPCM Dolby Digital Dolby Digital Plus DTS core HE-AAC LPCM MPEG Audio MP3 WMA WMA Pro	● Certified to play DivX Plus HD video file in Media Player For details of DivX ➔ (p. 92) ● Some subtitles or chapter functions may not be available.
MKV	.mkv	DivX3 DivX4 DivX5 DivX6 H.264 BP/MP/HP MPEG1 MPEG2 MPEG4 SP/ASP	AAC Dolby Digital Dolby Digital Plus DTS core HE-AAC MPEG Audio MP3	

Container	File extension	Video codec	Audio codec	Details / Restrictions
ASF	.asf .wmv	DivX3 DivX4 DivX5 DivX6 MPEG4 SP/ASP VC-1 Windows Media Video Ver. 9	AAC Dolby Digital Dolby Digital Plus HE-AAC LPCM MP3 WMA WMA Pro	● Copy-protected files cannot be played back.
MP4	.f4v .m4v .mp4	DivX3 DivX4 DivX5 DivX6 H.264 BP/MP/HP MPEG1 MPEG2 MPEG4 SP/ASP	AAC Dolby Digital Dolby Digital Plus HE-AAC MPEG Audio MP3	● This TV supports this container recorded by Panasonic products. For details, read the manual of the products.
FLV	.flv	H.264	AAC MP3	–
3GPP	.3gp .3g2	H.264 MPEG4 SP/ASP	AAC HE-AAC	–
PS	.mpg .mpeg .vob .vro	H.264*2 MPEG1 MPEG2 VC-1*2	AAC*2 Dolby Digital Dolby Digital Plus*2 HE-AAC*2 LPCM MPEG Audio MP3*2	*2: This codec can be played back only in Media Player.
TS	.m2ts .tp .trp .ts	H.264 MPEG1 MPEG2 VC-1*3	AAC Dolby Digital Dolby Digital Plus DTS core*3 HE-AAC MPEG Audio MP3*3	*3: This codec can be played back only in Media Player.

## ■ Music

Codec	File extension	Restrictions
MP3	.mp3	–
AAC	.m4a	● Copy-protected files cannot be played back.
WMA WMA Pro	.wma	● Copy-protected files cannot be played back. ● WMA Lossless is not supported.
FLAC	.flac	–

### Note

- Some files may not be played back even if they fulfil these conditions.
- Do not use two-byte characters or other special codes for data.
- The device may become unusable with this TV if the file or folder names are changed.

## DivX

DivX Certified® to play DivX® and DivX Plus® HD (H.264/MKV) video up to 1080p HD including premium content.

### ABOUT DIVX VIDEO:

DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit [divx.com](http://divx.com) for more information and software tools to convert your files into DivX videos.

### ■ Subtitle text file of DivX

Subtitles format - MicroDVD, SubRip, TMLayer

- The DivX video file and subtitles text file are inside the same folder, and the file names are the same except for the file extensions.
- If there are more than one subtitles text files inside the same folder, they are displayed in the following order of priority: “.srt”, “.sub”, “.txt”.
- To confirm or change the current subtitle status while playing DivX content, press the OPTION button to display Option Menu.
- Depending on the methods used to create the file or the state of recording, only parts of the subtitles may be displayed, or the subtitles may not be displayed at all.

#### Note

- Depending on how you make SD Card, USB Flash Memory or the media server, files and folders may not be displayed in the order you numbered.
- Depending on how you create the files and the structure of folders, the files and folders may not be displayed.
- When there are many files and folders, operation may take time to complete or some files may not be displayed or playable.

### ABOUT DIVX VIDEO-ON-DEMAND:

This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in the Setup Menu. Go to [vod.divx.com](http://vod.divx.com) for more information on how to complete your registration.

### ■ To show DivX VOD registration code

#### ➔ [DivX® VOD] (p. 43)

- If you want to generate the new registration code, you have to deregister the current registration code. After playing DivX VOD content once, the confirmation screen to deregister will be displayed in [DivX® VOD] in the Setup Menu. If you press the OK button on the confirmation screen, the deregistration code will be generated and you will not be able to play any contents that you purchased using the current registration code. You will obtain the new registration code by pressing the OK button on the deregistration code screen.
- If you purchase DivX VOD content using a registration code different from this TV's code, you will not be able to play this content. ([Your device is not authorized to play this DivX protected video.] is displayed.)

### ■ Regarding DivX content that can only be played a set number of times

Some DivX VOD content can only be played a set number of times.

When you play this content, the remaining number of plays is displayed. You cannot play this content when the number of remaining plays is zero. ([This DivX rental has expired.] is displayed.)

- When playing this content, the number of remaining plays is reduced by one in the following conditions:
  - If you exit the current application.
  - If you play the other content.
  - If you go to the next or previous content.

## Devices for recording or playing back

### ■ SD Card

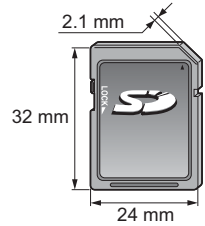
Card format:

- SDXC Card - exFAT
- SDHC Card / SD Card - FAT16 or FAT32

Compliant card type (maximum capacity):

- SDXC Card (64 GB), SDHC Card (32 GB), SD Card (2 GB), miniSD Card (2 GB) (requiring miniSD adaptor)

- If miniSD Card is used, insert / remove it together with the adaptor.
- Use an SD Card which meets SD standards. If not, it may cause the TV to malfunction.



### ■ USB Flash Memory (for playing back in Media Player)

USB Flash Memory format: FAT16, FAT32 or exFAT

- A USB HDD formatted by PC is not guaranteed in Media Player.

#### Note

 
- Data modified with a PC may not be displayed.
- Do not remove the device while the TV is accessing data. Otherwise this can damage device or TV.
- Do not touch the pins on the device.
- Do not subject the device to a high pressure or impact.
- Insert the device in the correct direction. Otherwise this can damage device or TV.
- Electrical interference, static electricity, or erroneous operation may damage the data or device.
- Back up the recorded data at regular intervals in case of deteriorated or damaged data or erratic operation of the TV. Panasonic is not liable for any deterioration or damage of recorded data.

## PC connection

A PC may be connected to this TV so that the PC screen is displayed and sound is heard from the TV.

- A PC adaptor is not necessary for the DOS/V-compliant D-sub 15-pin connector.
- Some PC models cannot be connected to this TV.
- When using PC, set the colour display quality of PC to the highest position.
- For details of the applicable PC signals
  - ➔ **"Input signal that can be displayed"** (p. 95)
- D-sub 15-pin connector signal

<b>4:3</b>	1,440 × 1,080 pixels
<b>16:9</b>	1,920 × 1,080 pixels



Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
①	R	⑥	GND (Ground)	⑪	NC (not connected)
②	G	⑦	GND (Ground)	⑫	NC (not connected)
③	B	⑧	GND (Ground)	⑬	HD
④	NC (not connected)	⑨	NC (not connected)	⑭	VD
⑤	GND (Ground)	⑩	GND (Ground)	⑮	NC (not connected)

## HDMI connection

HDMI (high-definition multimedia interface) is the world's first complete digital consumer AV interface complying with a non-compression standard.

HDMI allows you to enjoy high-definition digital images and high-quality sound by connecting the TV and the equipment.

HDMI-compatible equipment\*<sup>1</sup> with an HDMI or DVI output terminal, such as a DVD player, a set top box or game equipment, can be connected to the HDMI terminal using an HDMI compliant (fully wired) cable.

For more information about connections ➔ (p. 12, 87)

### ■ Applicable HDMI features

- Input audio signal:  
2ch Linear PCM (sampling frequencies - 48 kHz, 44.1 kHz, 32 kHz)
- Input video signal:  
➔ **“Input signal that can be displayed” (p. 95)**  
Match the output setting of the digital equipment.
- Input PC signal:  
➔ **“Input signal that can be displayed” (p. 95)**  
Match the output setting of the PC.
- VIERA Link (HDAVI Control 5)  
➔ **[VIERA Link] (p. 82)**
- 3D
- Content Type
- Deep Colour
- Audio Return Channel\*<sup>2</sup>  
(HDMI2 terminal only)

### ■ DVI connection

If the external equipment has only a DVI output, connect to the HDMI terminal via a DVI to HDMI adaptor cable\*<sup>3</sup>. When the DVI to HDMI adaptor cable is used, connect the audio cable to AUDIO terminal with the supplied AV2 (COMPONENT / VIDEO) adaptor.

#### Note

- Audio settings can be made on [HDMI1 / 2 / 3 / 4 Input] in the Sound Menu. (p. 39)
- If the connected equipment has an aspect adjustment function, set the aspect ratio to “16:9”.
- These HDMI connectors are “type A”.
- These HDMI connectors are compatible with HDCP (High-Bandwidth Digital Content Protection) copyright protection.
- Equipment having no digital output terminal may be connected to the input terminal of component or video to receive analogue signals.
- This TV incorporates HDMI™ technology.

\*1: The HDMI logo is displayed on HDMI-compliant equipment.

\*2: Audio Return Channel (ARC) is a function to send digital sound signals via an HDMI cable.

\*3: Enquire at your local digital equipment retailer shop.

## USB connection

- It is recommended to connect the USB Flash Memory or Communication Camera to the TV's USB ports directly.
- Some USB devices or USB HUB may not be used with this TV.
- You cannot connect any devices by using USB card reader.
- You cannot use two or more same kind of USB devices simultaneously except USB Flash Memory.
- Additional information for USB devices may be on the following website. (English only)  
<http://panasonic.jp/support/global/cs/tv/>

### ■ USB Keyboard

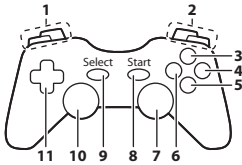
- The USB Keyboard requiring its driver is not supported.
- To change the language type ➔ **[USB Keyboard Layout] (p. 43)**
- Characters may not be displayed correctly on the TV screen depending on the connected keyboard or the keyboard layout setting.
- Some of the keys of USB keyboards may correspond to the operation of the remote control.

USB Keyboard	Remote Control	USB Keyboard	Remote Control
↑ / ↓ / ← / →	Cursor buttons	F2	VIERA TOOLS
Enter	OK	F3	MENU
Backspace	BACK/RETURN	F4	INPUT (AV)
Esc	EXIT	F5 / F6	Channel Down / Up
0 - 9 / Character	Numeric buttons	F7 / F8	Volume Down / Up
F1	GUIDE	F9 / F10 / F11 / F12	Coloured buttons

## ■ Gamepad

- Some of the keys of gamepads correspond to the operation of the remote control.

Example:



Remote Control		Remote Control	
1	Volume Up / Down	7	VIERA TOOLS
2	Channel Up / Down	8	EXIT
3	GUIDE	9	INPUT (AV)
4	OK		
5	BACK/RETURN	10	MENU
6	INTERNET	11	Cursor buttons

## Input signal that can be displayed

### ■ COMPONENT (Y, P<sub>B</sub>, P<sub>R</sub>) (from AV2 terminal), HDMI

Signal name	COMPONENT	HDMI
525 (480) / 60i, 60p	○	○
625 (576) / 50i, 50p	○	○
750 (720) / 60p, 50p	○	○
1,125 (1,080) / 60i, 50i	○	○
1,125 (1,080) / 60p, 50p, 24p	○	○

○ : Applicable input signal

### ■ PC (from D-sub 15P)

Signal name	Horizontal frequency (kHz)	Vertical frequency (Hz)
640 × 480 @60 Hz	31.47	59.94
800 × 600 @60 Hz	37.88	60.32
852 × 480 @60 Hz	31.44	59.89
1,024 × 768 @60 Hz	48.36	60.00
1,280 × 768 @60 Hz	47.70	60.00
1,280 × 1,024 @60 Hz	63.98	60.02
1,366 × 768 @60 Hz	48.39	60.04

Applicable input signal for PC is basically compatible to VESA standard timing.

### ■ PC (from HDMI terminal)

Signal name	Horizontal frequency (kHz)	Vertical frequency (Hz)
640 × 480 @60 Hz	31.47	60.00
1,280 × 720 @60 Hz	45.00	60.00
1,920 × 1,080 @60 Hz	67.50	60.00

Applicable input signal for PC is basically compatible to HDMI standard timing.

#### Note

- Signals other than above may not be displayed properly.
- The above signals are reformatted for optimal viewing on your display.
- PC signal is magnified or compressed for display, so that it may not show fine detail with sufficient clarity.

## Characters table for numeric buttons

You can enter characters by using numeric buttons for free input items.

User input

Name

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T
U	V	W	X	Y	Z	0	1	2	3	4	5	6	7	8	9	:	:	:	#
a	b	c	d	e	f	g	h	i	j	k	l	m	n	o	p	q	r	s	t
u	v	w	x	y	z	( )	+	-	*	*	*	*	*	*	*	*	*	*	*



Press the numeric button repeatedly until you reach the desired character.

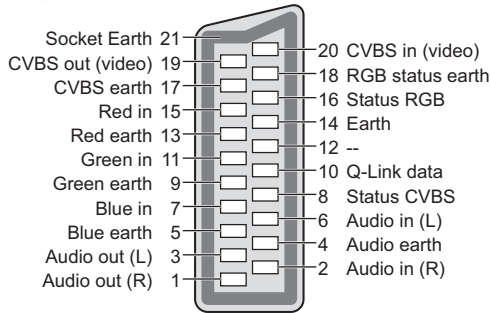
- The character is set automatically if you leave for 1 second.
- You can also set the character by pressing the OK button or other numeric buttons within 1 second.
- The characters may vary depending on the input items.

Characters table:


Numeric buttons	Characters	Numeric buttons	Characters
1	. @ / ! : # + - * _ ( ) ' " % & ? , ; = \$ [ ] ~ < > { }   ` ^ \	6 <sub>mno</sub>	m n o 6 M N O
2 <sub>abc</sub>	a b c 2 A B C	7 <sub>pqrs</sub>	p q r s 7 P Q R S
3 <sub>def</sub>	d e f 3 D E F	8 <sub>tuv</sub>	t u v 8 T U V
4 <sub>ghi</sub>	g h i 4 G H I	9 <sub>wxyz</sub>	w x y z 9 W X Y Z
5 <sub>jkl</sub>	j k l 5 J K L	0	Space 0

## SCART and HDMI terminal information

### AV1 SCART terminal (RGB, VIDEO, Q-Link)



### HDMI terminal

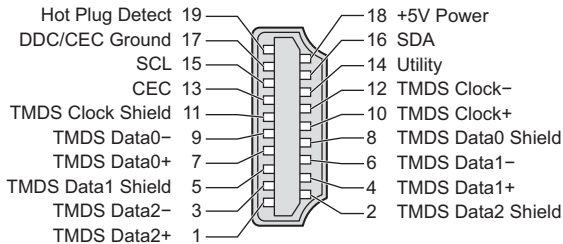



# FAQs

Before requesting service or assistance, please follow these simple guides to resolve the problem. If the problem still persists, please contact your local Panasonic dealer for assistance.

## **Block noise, frozen or disappearing image occurs in DVB mode / White spots or shadow image (ghosting) occurs in Analogue mode / Some channels cannot be tuned**

- Check the position, direction and connection of the aerial.
- Check [Signal Condition] (p. 49). If [Signal Quality] is displayed in red, the DVB signal is weak.
- Weather conditions will affect signal reception (heavy rain, snow, etc.), in particular in poor reception areas. Even during good weather, the high pressure can cause poor reception of some channels.
- Due to the digital reception technologies involved, quality of the digital signals may be relatively low in some cases, despite good reception of analogue channels.
- Turn the TV off with the Mains power On / Off switch, and then on again.
- If problem persists, consult your local dealer or service provider for the availability of services.

## **No programmes shown on TV Guide**

- Check the digital transmitter.
- Adjust the direction of the aerial to another transmitter installed nearby.
- Check the analogue broadcast. If the image quality is poor, check the aerial and consult your local dealer.

## **Neither image nor sound is produced**

- Check the TV is turned on.
- Check the mains lead is plugged into the TV and the socket outlet.
- Check the TV is in AV mode.
- Check the correct input mode is selected.
- Check the Picture Menu (p. 36, 37) and volume.
- Check all required cables and connections are firmly in place.

## **Auto aspect**

- Auto aspect is designed to provide you with the best ratio to fill the screen. ➔ (p. 89)
- Press the ASPECT button if you want to change the aspect ratio manually. ➔ (p. 22)

## **Black and white picture**

- Check that the output of the external equipment matches the input of the TV.  
When connecting with SCART, ensure the output setting of the external equipment is not S-Video.

## **Q-Link function does not work**

- Confirm SCART cable and connection.  
Also set [AV1 out] in the Setup Menu. ➔ (p. 40)

## **[VIERA Link] function does not work and an error message appears**

- Confirm the connection. ➔ (p. 79, 80)
- Turn the connected equipment on and then switch the TV on. ➔ (p. 82)

## **Recording does not start immediately**

- Check the settings of the recorder. For details, read the manual of the recorder.

## **There may be red, blue, green and black spots on the screen**

- This is a characteristic of liquid crystal panels and is not a problem. The liquid crystal panel is built with very high precision technology giving you fine picture details. Occasionally, a few non-active pixels may appear on the screen as a fixed point of red, green, blue or black. Please note this does not affect the performance of your LCD.

	Problem	Causes / Actions
Screen	Chaotic image, noisy	<ul style="list-style-type: none"> <li>• Set [P-NR] in the Picture Menu to remove noise. ➔ (p. 36)</li> <li>• Check nearby electrical products (car, motorcycle, fluorescent lamp).</li> </ul>
	No image can be displayed	<ul style="list-style-type: none"> <li>• Is [Contrast], [Brightness] or [Colour] in the Picture Menu set to the minimum? ➔ (p. 36)</li> <li>• Check the setting of [AV2] ([COMPONENT] / [VIDEO]) in [Input Selection] to match the output of the external equipment. (p. 28)</li> </ul>
	Blurry or distorted image (no sound or low volume)	<ul style="list-style-type: none"> <li>• Reset channels. ➔ (p. 44, 45)</li> </ul>
	Unusual image is displayed	<ul style="list-style-type: none"> <li>• Turn the TV off with Mains power On / Off switch, then turn it on again.</li> <li>• If the problem persists, initialise all settings. ➔ [Shipping Condition] (p. 56)</li> </ul>
Sound	No sound is produced	<ul style="list-style-type: none"> <li>• Is "Sound mute" active? ➔ (p. 9)</li> <li>• Is the volume set to the minimum?</li> </ul>
	Sound level is low or sound is distorted	<ul style="list-style-type: none"> <li>• Sound signal reception may be deteriorated.</li> <li>• Set [MPX] (p. 38) in the Sound Menu to [Mono]. (Analogue)</li> </ul>
3D	Cannot view 3D images	<ul style="list-style-type: none"> <li>• Ensure that [3D Mode Selection] is set to [3D]. ➔ (p. 31)</li> <li>• Some 3D image signals may not be automatically recognised as 3D images. Set [3D Mode Selection (Manual)] to match the picture format. ➔ (p. 32)</li> <li>• For some people, the 3D images may be difficult to see, or cannot be seen, especially in users who have a different level of eyesight between the left and right eyes. Take the necessary steps (wearing glasses etc.) to correct your eyesight before use.</li> </ul>
	There is something wrong with the 3D images	<ul style="list-style-type: none"> <li>• Check the setting of [Edge Smoother]. ➔ (p. 33)</li> </ul>
HDMI	Sound is unusual	<ul style="list-style-type: none"> <li>• Set the sound setting of the connected equipment to "2ch L.PCM".</li> <li>• Check the [HDMI1 / 2 / 3 / 4 Input] setting in the Sound Menu. ➔ (p. 39)</li> <li>• If digital sound connection has a problem, select analogue sound connection. ➔ (p. 94)</li> </ul>
	Pictures from external equipment are unusual when the equipment is connected via HDMI	<ul style="list-style-type: none"> <li>• Check the HDMI cable is connected properly. ➔ (p. 87)</li> <li>• Turn the TV and equipment off, then turn them on again.</li> <li>• Check an input signal from the equipment. ➔ (p. 95)</li> <li>• Use equipment compliant with EIA/CEA-861/861D.</li> </ul>
Network	Cannot connect to the network	<ul style="list-style-type: none"> <li>• Check the LAN cable or wireless LAN is connected properly. ➔ (p. 70)</li> <li>• Check the connections and settings. ➔ (p. 70 - 74)</li> <li>• Check the network equipment and network environment.</li> <li>• The router may not be set to issue IP address automatically. If the network administrator prefers to allocate an IP address, set an IP address manually. ➔ (p. 72)</li> <li>• The router may be using MAC address filtering (security setting). Confirm the MAC Address of this TV (p. 40) and set the router to use it.</li> <li>• If the problem persists, consult your Internet Service Provider or telecommunications company.</li> </ul>
	Cannot select the file during DLNA operations	<ul style="list-style-type: none"> <li>• Is media server of the connected equipment prepared? ➔ (p. 69)</li> <li>• Check applicable data format. ➔ (p. 90, 91)</li> </ul>
	Cannot operate VIERA Connect	<ul style="list-style-type: none"> <li>• Check the connections and settings. ➔ (p. 70 - 74)</li> <li>• The server or connected line may be busy now.</li> </ul>

	<b>Problem</b>	<b>Causes / Actions</b>
<b>Other</b>	<b>The TV does not switch on</b>	<ul style="list-style-type: none"> <li>● Check the mains lead is plugged into the TV and the socket outlet.</li> </ul>
	<b>The TV goes into Standby mode</b>	<ul style="list-style-type: none"> <li>● Auto power standby function is activated. ➔ (p. 10)</li> <li>● The TV enters Standby mode about 30 minutes after analogue broadcasting ends.</li> </ul>
	<b>The remote control does not work or is intermittent</b>	<ul style="list-style-type: none"> <li>● Are the batteries installed correctly? ➔ (p. 7)</li> <li>● Has the TV been switched on?</li> <li>● The batteries may be running low. Replace them.</li> <li>● Point the remote control directly at the TV's remote control signal receiver (within about 7 m and a 30 degree angle of the signal receiver).</li> <li>● Situate the TV away from sunshine or other sources of bright light not to shine on the TV's remote control signal receiver.</li> </ul>
	<b>Parts of the TV become hot</b>	<ul style="list-style-type: none"> <li>● Even when the temperature of parts of the front, top and rear panels has risen, these temperature rises do not cause any problems in terms of performance or quality.</li> </ul>
	<b>The LCD panel moves slightly when it is pushed with a finger Clattered sound might be heard</b>	<ul style="list-style-type: none"> <li>● There is some flexibility around the panel to prevent damage to the panel.</li> <li>● The panel might move slightly when it is pushed with a finger, and clattered sound might be heard. This is not a malfunction.</li> </ul>
	<b>Overcurrent error message appears</b>	<ul style="list-style-type: none"> <li>● The connected USB device might cause this error. Remove the device and turn the TV off with Mains power On / Off switch, then turn it on again.</li> <li>● Check foreign objects are not inside the USB port.</li> </ul>
	<b>An error message appears</b>	<ul style="list-style-type: none"> <li>● Follow the message's instructions.</li> <li>● If the problem persists, contact your local Panasonic dealer or the authorised service centre.</li> </ul>

# Maintenance

**First, remove the mains plug from the socket outlet.**

## Display panel, Cabinet, Pedestal

### Regular care:

Gently wipe the surface of the display panel, cabinet, or pedestal by using a soft cloth to clean the dirt or fingerprints.

### For stubborn dirt:

First clean the dust on the surface. Dampen a soft cloth with clean water or diluted neutral detergent (1 part detergent to 100 parts water). Wring the cloth and wipe the surface. Finally, wipe away all the moisture.

### Caution

- Do not use a hard cloth or rub the surface too hard, otherwise this may cause scratches on the surface.
- Take care not to subject the TV's surfaces to water or detergent. Liquid inside the TV could lead to product failure.
- Take care not to subject the surfaces to insect repellent, solvent, thinner or other volatile substances. This may degrade surface quality or cause peeling of the paint.
- The surface of the display panel is specially treated and may be easily damaged. Take care not to tap or scratch the surface with your fingernail or other hard objects.
- Do not allow the cabinet and pedestal to make contact with a rubber or PVC substance for a long time. This may degrade surface quality.

## Mains plug

Wipe the mains plug with a dry cloth at regular intervals. Moisture and dust may lead to fire or electrical shock.

# Licence

Even if no special notation has been made of company or product trademarks, these trademarks have been fully respected.

- DVB and the DVB logos are trademarks of the DVB Project.
- "RealD 3D" is a trademark of RealD.
- SDXC Logo is a trademark of SD-3C, LLC.
- "AVCHD", "AVCHD 3D" and "AVCHD Progressive" are trademarks of Panasonic Corporation and Sony Corporation.
- DivX®, DivX Certified®, DivX Plus® HD and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.
- QuickTime and the QuickTime logo are trademarks or registered trademarks of Apple Inc., used under license therefrom.
- VIERA Connect is a trademark of Panasonic Corporation.
- Skype is a trade mark of Skype Limited.
- DLNA®, the DLNA Logo and DLNA CERTIFIED™ are trademarks, service marks, or certification marks of the Digital Living Network Alliance.
- Windows is a registered trademark of Microsoft Corporation in the United States and other countries.
- HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- HDAVI Control™ is a trademark of Panasonic Corporation.
- VGA is a trademark of International Business Machines Corporation.
- S-VGA is a registered trademark of the Video Electronics Standard Association.
- Manufactured under license from Dolby Laboratories.
  - Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS, the Symbol, & DTS and the Symbol together are registered trademarks & DTS 2.0+Digital Out is a trademark of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.
- GUIDE Plus+, Rovi and Rovi Guide are trademarks of Rovi Corporation and/or its subsidiaries.
  - The GUIDE Plus+ and the Rovi Guide system are manufactured under license from Rovi Corporation and/or its subsidiaries.

The Rovi Guide system is protected by patents and patent applications filed in the US, Europe, and other countries including one or more of the United States patents 6,396,546; 5,940,073; 6,239,794 issued to Rovi Corporation and/or its subsidiaries.

**This product incorporates the following software or technology:**

- (1) the software developed independently by or for Panasonic Corporation,
- (2) the software owned by third party and licensed to Panasonic Corporation,
- (3) the software based in part on the work of the Independent JPEG Group,
- (4) the software developed by the FreeType Project,
- (5) the software licensed under the GNU LESSER GENERAL PUBLIC LICENSE (LGPL) and/or,
- (6) open sourced software other than the software licensed under the LGPL.
- (7) "PlayReady"(digital right management technology) licensed by Microsoft Corporation or its affiliates.

For the software categorized as (5), please refer to the terms and conditions of LGPL, as the case may be at <http://www.gnu.org/licenses/old-licenses/lgpl-2.1.html>

In addition, the software categorized as (5) are copyrighted by several individuals.

Please refer to the copyright notice of those individuals at <http://www.am-linux.jp/dl/EUIDTV12/>

The LGPL software is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

At least three (3) years from delivery of products, Panasonic will give to any third party who contact us at the contact information provided below, for a charge no more than our cost of physically performing source code distribution, a complete machine-readable copy of the corresponding source code covered under LGPL.

Contact Information

[cdrequest@am-linux.jp](mailto:cdrequest@am-linux.jp)

Source code covered under LGPL is also freely available to you and any other member of the public via our website below.

<http://www.am-linux.jp/dl/EUIDTV12/>

For the software categorized as (5) and (6), please refer to the applicable license terms included in the "Setup" menu on product.

Further, for PlayReady categorized as (7), please be aware of the following.

(a) This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.

(b) Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies.

Content owners may require you to upgrade PlayReady to access their content.

If you decline an upgrade, you will not be able to access content that requires the upgrade.

# Specifications

## ■ TV

Model No.	TX-L32ET5E TX-L32ET5EW	TX-L37ET5E TX-L37ET5EW	TX-L42ET5E TX-L42ET5EW
Dimensions (W × H × D)	764 mm × 519 mm × 230 mm (With Pedestal) 764 mm × 473 mm × 52 mm (TV only)	874 mm × 580 mm × 238 mm (With Pedestal) 874 mm × 534 mm × 52 mm (TV only)	997 mm × 650 mm × 247 mm (With Pedestal) 997 mm × 604 mm × 52 mm (TV only)
Mass	11.5 kg Net (With Pedestal) 9.5 kg Net (TV only)	14.0 kg Net (With Pedestal) 11.5 kg Net (TV only)	17.5 kg Net (With Pedestal) 14.5 kg Net (TV only)

Model No.	TX-L47ET5E	TX-L55ET5E
Dimensions (W × H × D)	1,107 mm × 712 mm × 268 mm (With Pedestal) 1,107 mm × 666 mm × 52 mm (TV only)	1,281 mm × 811 mm × 282 mm (With Pedestal) 1,281 mm × 765 mm × 52 mm (TV only)
Mass	20.5 kg Net (With Pedestal) 17.0 kg Net (TV only)	29.0 kg Net (With Pedestal) 25.0 kg Net (TV only)

Power source	AC 220-240 V, 50 / 60 Hz			
Panel	LED LCD panel			
Sound	Speaker	(75 mm × 22 mm) × 2, 8 Ω		
	Audio output	20 W (10 W + 10 W)		
	Headphones	M3 (3.5 mm) stereo mini Jack × 1		
Receiving systems / Band name	PAL B, G, H, I, SECAM B, G, SECAM L, L'	VHF E2 - E12	VHF H1 - H2 (ITALY)	
		VHF A - H (ITALY)	UHF E21 - E69	
		CATV (S01 - S05) CATV S11 - S20 (U1 - U10)	CATV S1 - S10 (M1 - M10) CATV S21 - S41 (Hyperband)	
	PAL D, K, SECAM D, K	VHF R1 - R2	VHF R3 - R5	
		VHF R6 - R12	UHF E21 - E69	
	PAL 525/60	Playback of NTSC tape from some PAL Video recorders (VCR)		
	M.NTSC	Playback from M.NTSC Video recorders (VCR)		
	NTSC (AV input only)	Playback from NTSC Video recorders (VCR)		
DVB-T	Digital terrestrial services (MPEG2 and MPEG4-AVC(H.264))			
DVB-C	Digital cable services (MPEG2 and MPEG4-AVC(H.264))			
Aerial input	VHF / UHF			
Operating conditions	Temperature: 0 °C - 35 °C			
	Humidity: 20 % - 80 % RH (non-condensing)			
Connection terminals	AV1 input / output	SCART (Audio/Video in, Audio/Video out, RGB in, Q-Link)		
	AV2 input (COMPONENT / VIDEO)	VIDEO	RCA PIN Type × 1	1.0 V[p-p] (75 Ω)
		AUDIO L - R	RCA PIN Type × 2	0.5 V[rms]
		Y	1.0 V[p-p] (including synchronisation)	
		Pb, Pr	±0.35 V[p-p]	
HDMI 1 / 2 / 3 / 4 input	TYPE A Connectors HDMI1 / 3 / 4: 3D, Content Type, Deep Colour HDMI2: 3D, Content Type, Audio Return Channel, Deep Colour ● This TV supports "HDAVI Control 5" function.			

Connection terminals	PC	HIGH-DENSITY D-SUB 15PIN R,G,B: 0.7 V[p-p] (75 Ω) HD, VD: TTL Level 2.0 – 5.0 V[p-p] (high impedance) ● Applicable input signals: VGA, SVGA, WVGA, XGA, SXGA, WXGA
	Card slot	SD Card slot × 1 Common Interface slot (complies with CI Plus) × 1
	ETHERNET	RJ45, IEEE802.3 10BASE-T / 100BASE-TX
	USB 1 / 2 / 3	USB2.0 DC 5 V, Max. 500 mA
	DIGITAL AUDIO OUT	PCM / Dolby Digital / DTS, Fibre optic
Built-in wireless LAN	Standard compliance and Frequency range*	IEEE802.11a/n 5.180 GHz - 5.320 GHz, 5.500 GHz - 5.580 GHz, 5.660 GHz - 5.700 GHz IEEE802.11b/g/n 2.412 GHz - 2.472 GHz
	Security	WPA2-PSK (TKIP/AES) WPA-PSK (TKIP/AES) WEP (64 bit/128 bit)

\*The frequency and channel differ depending on the country.

### ■ 3D Eyewear

Dimensions (W × H × D)	149 mm × 44 mm × 171 mm
Mass	Approx. 18 g
Lens type	Circularly-polarised filter
Usage temperature range	0 °C - 40 °C
Materials	Main body / Lens section: Resin

#### Note

- Design and Specifications are subject to change without notice. Mass and Dimensions shown are approximate.
- For the information of power consumption, display resolution, etc., please refer to Product fiche.
- This equipment complies with the EMC standards listed below.  
EN55013, EN61000-3-2, EN61000-3-3, EN55020, EN55022, EN55024

## Information for Users on Collection and Disposal of Old Equipment and used Batteries



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.



For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

### For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.



### [Information on Disposal in other Countries outside the European Union]

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

### Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

Cd

### Customer's Record

The model number and serial number of this product may be found on its rear panel. You should note this serial number in the space provided below and retain this book, plus your purchase receipt, as a permanent record of your purchase to aid in identification in the event of theft or loss, and for Warranty Service purposes.

Model Number

Serial Number

Panasonic Corporation

Web Site: <http://panasonic.net>