



 
 


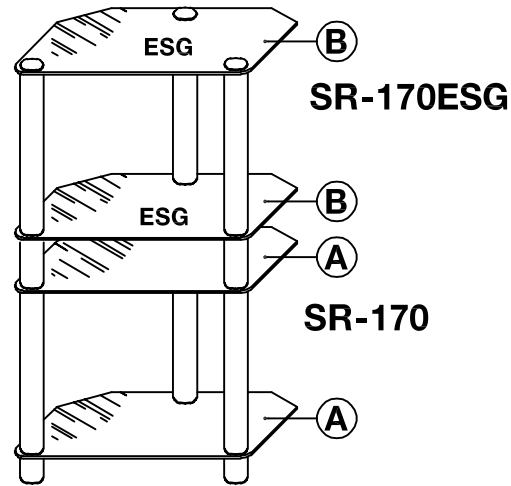


SR 170 E



Numerierung = Montager Reihenfolge
 Num,rotation = ordre d'assemblage
 Numerazione = ordine di montaggio

SR-Z05	①	②		3*
SR-R0600	②	①		3*
4SR-STIFT-RU-9	③	② ④ ⑤		9*
SR-R400	④	③		6*
SR-R120	⑤	③		3*
4SR-Z06-3	⑥	④		3*

