


Montageanleitung
Instructions de montage
Istruzione di montaggio


4030.203 Sanaflex Mittelfusset

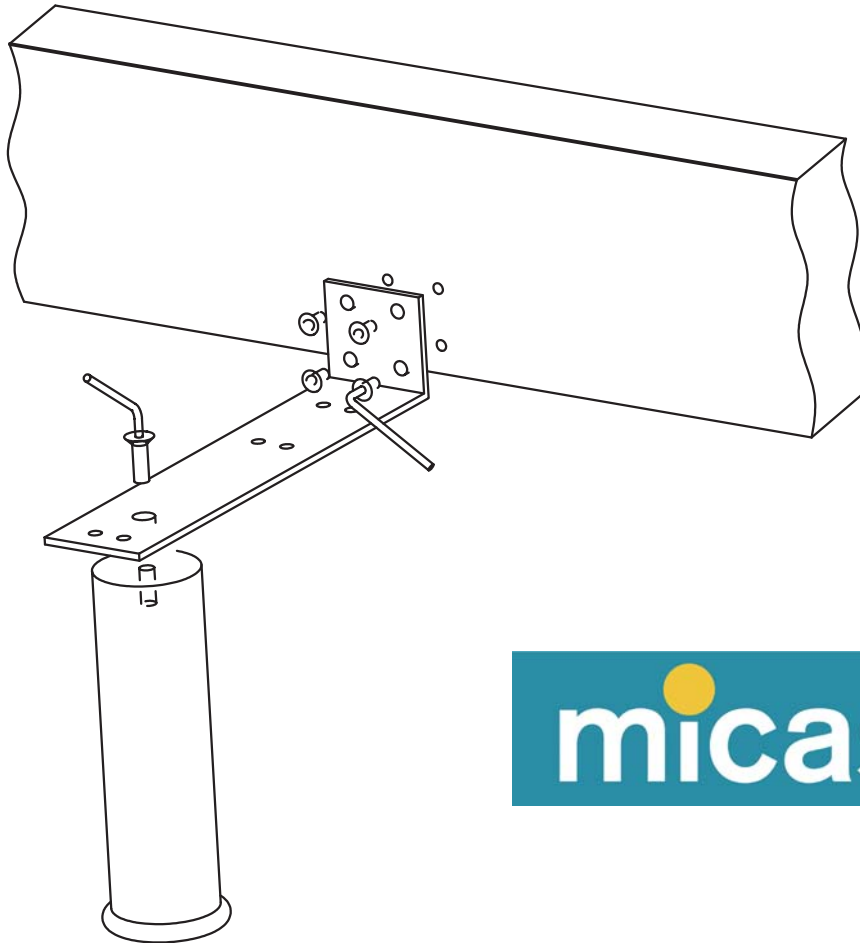


8x 12484 M6x12



2x 13527 "88"-200




2x 12657

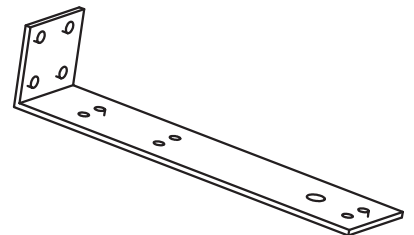

2x 12874 M8x25



1x 12509 4mm
1x 12508 5mm



technische Aenderungen vorbehalten
sous réserve de changements techniques
cambiamenti tecnici sono riservati

45975 08/01